

SENCOR®

SWK 2828BK



VARIABLE TEMPERATURE ELECTRIC KETTLE FOR POUR OVER

Translation of the original manual




SENCOR®

SWK 2828BK



A

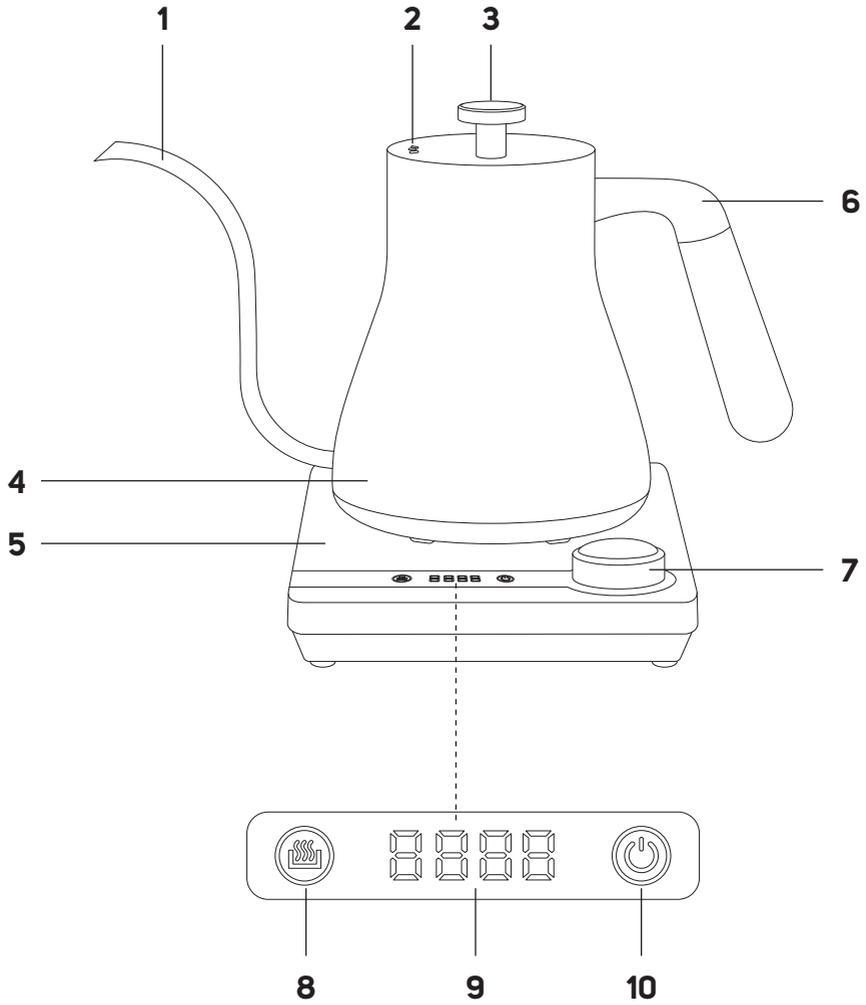

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance must not be carried out by children unless they are older than 8 years of age and under supervision.
- Keep the appliance and its power cord out of the reach of children under 8 years of age.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in shops, offices and other workplaces;
 - spaces in agriculture;
 - hotel, motels and other residential areas;
 - bed and breakfast establishments.

- Do not submerge the kettle or its base in water or another liquid.
- If the kettle is overfilled, hot water may splash out.



WARNING:

Do not open the lid while the water is boiling.



CAUTION:

Position the lid so that the steam is directed away from the handle.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.



CAUTION:

Make sure the appliance is switched off before removing it from the base.



WARNING:

Prevent the plug from getting wet.

- Rinse the inside of the kettle with clean water. Follow the cleaning instructions in the “Cleaning and Maintenance” section.



WARNING:

Incorrect use may lead to injury.

- The surface of the heating element contains residual heat after use. Do not touch the hot surface.

Additional Important Safety Instructions for Use of the Appliance

- Before connecting the kettle to power, make sure that its power ratings match those of the wall socket.
- Connect the kettle only to a properly grounded socket.
- Do not place the kettle on windowsills, sink drain trays or unstable surfaces. Always place it on a stable, flat and dry surface.
- Do not place the kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Only use the kettle to heat up drinking water. Do not use it to warm up other liquids or food.
- Do not fill the kettle with water when placed on the base. Remove the kettle from its base before filling. When filling, make sure that the water level does not exceed the maximum mark.
- Before turning the kettle on, make sure that the lid is closed properly.
- Do not turn on the kettle when it is empty. Incorrect use may negatively affect the appliance's lifetime. In case of accidental start-up without water, the kettle is equipped with a safety lock to protect it from damage.
- Use the handle for lifting and carrying the kettle.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Do not pour ice-cold water into the kettle when it is hot.
- The operation of the kettle can be interrupted at any time by pressing the button  or by lifting the kettle from the base and putting it back on the base.
- Always turn off the kettle and disconnect it from the power socket if it's not to be used or if it's to be left unattended or before moving or cleaning it.
- Unplug the kettle from the power socket by pulling the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.
- To avoid the risk of electric shock, do not repair and/or make any adjustments to the electric kettle by yourselves. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

Prevention of household accidents

- Heated foods, hot or boiling liquids present a high risk for children, and even slight burns can be serious. Follow the basic rules for accident prevention in the household and take extra care if children are near such foods or liquids, or explain to them the risks associated with heated foods or liquids.
- If a burn or scald occurs, start rinsing the affected area with a stream of cold water and seek medical help if necessary.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE KETTLE

A1 Narrow-mouth spout	A7 Rotary knob
A2 Kettle lid	A8  button to switch on/off the keep warm function
A3 Lid handle	A9 Numeric display
A4 Kettle body	A10  button to switch the kettle on/off
A5 Base with a central connector	
A6 Kettle handle	

INTENDED USE

The SWK 2828BK kettle is designed to heat up drinking water to your chosen temperature. At the same time, it is possible to activate the keep warm function, when the kettle will maintain the set temperature for a maximum of 2 hours.

Pour Over Method

- The Pour Over method is a method of preparing filtered coffee that is popular for its simplicity and ability to create a clean, aromatic cup of coffee. The name literally means "pouring over" or "pouring over", and describes the process itself.
- Place the paper filter in a special holder, called a dripper. Pour freshly ground coffee (usually medium-coarsely ground) into the filter. Pour hot water over the coffee slowly and in a circular motion. The temperature should be approximately 92–96 °C. The water flows through the coffee and filter into the container below it (a mug or teapot). The result is a clean and smooth coffee, without sediment and often with strong flavor notes.

BEFORE FIRST USE OF THE KETTLE

- Remove all wrapping material from the kettle and its base. Remove the protective foil. Check that the kettle and its accessories are not damaged.
- Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. To boil water in the kettle, please follow the instructions in the chapter **Using Your Kettle**. Repeat this process 2 to 3 times.
- Now the kettle is ready for use.

USING YOUR KETTLE

1. Place the base on a stable, flat and clean surface.
2. Take hold of the lid by the handle and remove it. Fill the kettle with the required amount of water. The water level must not exceed the maximum mark. The marks are placed inside the kettle. Attach the lid properly after filling the kettle.



Caution:

Do not fill the kettle when placed on the base, not even through the pour.



Note:

Do not fill the kettle above the maximum level as water may splash out of the spout while it is boiling. Check that the lid is properly closed before plugging the fork into the power socket.

3. Place the kettle on the base. Insert the power plug into a power socket. A beep will sound and temperature of the water in the kettle will appear on the display.
4. Heating water to 100 °C: press the  button and the kettle starts heating to 100 °C. The button lights up blue.
5. Temperature setting: use the rotary control to set the desired temperature in the range from 40 to 100 °C. In the range of 40–70 °C, you set the temperature by 10 °C; in the range of 70–85 °C, you set the temperature by 5 °C; in the range of 85–100 °C, you set the temperature by 1 °C.
6. Press the  button or press the rotary knob, the kettle will start and the water temperature in the kettle will be loading on the display. The  button will light up blue.
7. As soon as the water in the kettle reaches the required temperature, the kettle will automatically turn off and an acoustic alert will sound.
8. Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark.



Caution:

The surface of the lid is hot after boiling the water and steam is accumulated under it. Be careful when opening the lid to avoid being scalded by the escaping steam and burned by the hot lid.



Note:

Opening the lid may seem difficult at first.



Caution:

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit and turn off the kettle. It will be possible to run it again after several minutes, until the heating bottom has cooled down.



Note:

The operation of the kettle can be interrupted at any time by pressing the  button.



Note:

A sound is made each time a button is pressed or rotary knob is turned. This is normal.

Temperature table

Temperature	Usage
40–70 °C	Adjust in increments of 10 °C for Baby Milk or Hot Drinks
70–85 °C	Adjust in increments of 5 °C for Delicate Teas
85–100 °C	Adjust in increments of 1 °C for Pour Over Coffee or Tea

KEEP WARM FUNCTION

This function makes it possible to maintain the set temperature in the kettle after boiling the water for a maximum of two hours. When the temperature sensor detects that the water temperature inside the kettle has dropped, the kettle switches on and reheats the water to the temperature you set. The kettle will then turn off.

1. Select the temperature, press the  button. It will light up in blue.
2. Press the  button or press the rotary knob, the kettle will start and the water temperature in the kettle will be loading on the display. The  button will light up blue.
3. As soon as the water in the kettle reaches the required temperature, the kettle will automatically switch to keep warm function and an acoustic alert will sound.
4. After two hours, the keep warm function automatically switches off.
5. If the temperature sensor detects a temperature drop of more than 1 °C, the kettle will automatically start and reheat the water to the set temperature.
6. To cancel the function, press the  button and an acoustic alert will sound. The blue backlight will turn white. After lifting the kettle, the heating is not interrupted, but the kettle continues to keep the temperature and heat. To stop it, it is necessary to turn off the function.



Note:

The keep warm function is not active for a temperature of 100°C to prevent the water from boiling out and consequently damaging the kettle.

If the water temperature inside the kettle is higher than the set temperature, the kettle will beep and not start. The actual temperature of the water in the kettle will appear on the display.

POWER-SAVING MODE

The control panel will automatically turn off after 20 minutes of inactivity. Turn the knob or press any button to light it up again.

CLEANING AND MAINTENANCE

- Before cleaning, make sure that the kettle is unplugged from the mains socket and let it cool down.



Caution:

Do not immerse the kettle, base, power cord or plug in water or any other liquid.

- To clean the external parts of the kettle use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent.
- After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base use only a dry cloth.
- Never use thinners, abrasive cleaners, etc.

Removing Limescale Deposits

As the lime scale deposited in the kettle may adversely affect its lifetime, remove it regularly depending on the kettle use frequency.

In addition, by removing the lime scale, you can save electricity and shorten the water boiling time without affecting the drink taste.

During standard use (3 to 5 times per day), we recommend water scale deposits be removed:

- once per month in areas with hard and very hard water;

- once every two to three months in areas with soft and medium hard water.

To remove calcium deposits, use a commercially available scale remover (e.g. Sencor descaling agent) and follow the instructions on the packaging of such agent.

TECHNICAL SPECIFICATIONS

Rated voltage range	220–240 V~
Rated frequency	50/60 Hz
Rated power input	800–1000 W
Capacity	0.6 l

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	0.4 W
Time needed for the equipment to automatically reach off mode	3 min
Standby mode	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz