

# **PRO Series**

**LCD Monitor** 

PRO MP251W E2 (3PD4)

User Guide

# **Contents**

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
Professional	10
Image	12
Input Source	14
Navi Key	14
Settings	15
Specifications	16
Preset Display Modes	18
Standard Default Mode	18
Troubleshooting	19
Safety Instructions	20
TÜV Rheinland Certification	22
ENERGY STAR Certification	22
Regulatory Notices	23

#### Revision

V1.0, 2024/09

# **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

## **Package Contents**

Monitor	PR0 MP251W E2	
Documentation	Quick Start Guide	
Accessories	tand	
	Stand Base	
	Power Cord	
Cables	High Speed HDMI™ Cable	




# /!\ Important

- Package contents may vary by country and model.
- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- The included power cord is exclusively for this monitor and should not be used with other products.

## **Installing the Monitor Stand**

- 1. Leave the monitor in its protective packaging. Align and gently push the stand bracket towards the monitor groove until it locks in place.
- 2. Align and gently push the base towards the stand until it locks in place.
- 3. Make sure the stand assembly is properly installed before setting the monitor upright.

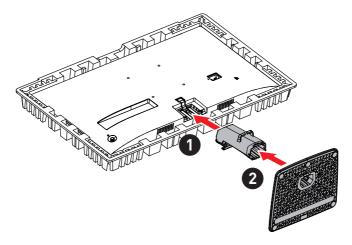



### **Important**

- Do not use any sharp objects on the panel.
- Place the monitor on a soft, protected surface to avoid scratching the display panel.

## **Adjusting the Monitor**


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.



Avoid touching the display panel when adjusting the monitor.




# **Monitor Overview**

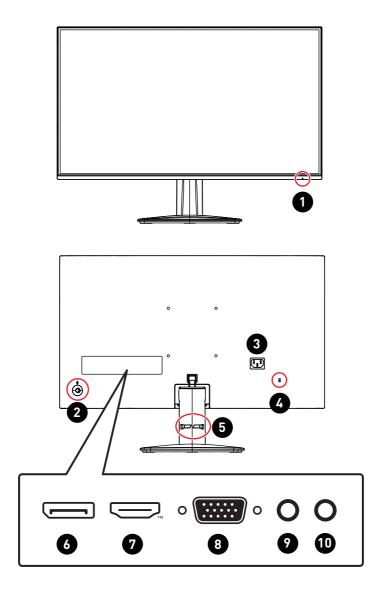

	Power LED
0	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
2	Power Button & Navi Key
3	Power Jack
4	Kensington Lock
5	Cable Organizer
6	DisplayPort
	Supports 1920x1080@120Hz as specified in DisplayPort 1.4a.
	HDMI™ Connector <b>H⊃ I</b>
	Supports HDMI™ CEC, 1920x1080@120Hz as specified in HDMI™ 2.0.
7	1 Important
	To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit <a href="https://www.hdmi.org/resource/cables">https://www.hdmi.org/resource/cables</a> .
	D-Sub Port
8	Supports 1920x1080@60Hz.
	Line-in Jack
9	For audio playback through the speakers, connect the device's Line-out jack to this Line-in jack when using the D-Sub port.
10	Headphone Jack


## Connecting the Monitor to PC

- **1.** Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- **5.** Turn on the monitor. (Figure C)
- **6.** Power on the computer and the monitor will auto detect the signal source.

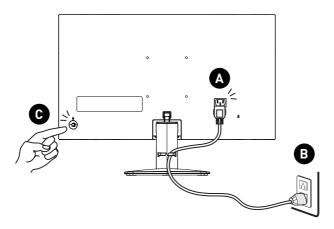

# 1 Important

When removing the cable, gently pull the cable organizer outward to easily release the cable without damaging it.

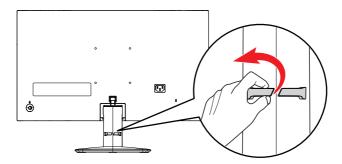

# **OSD Setup**

This chapter provides you with essential information on OSD Setup.




### Important

All information is subject to change without prior notice.

## **Navi Key**

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

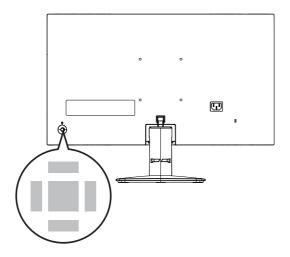

#### Up/ Down/ Left/ Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

#### Middle:

- launching the On-Screen Display (OSD)
- · entering submenus
- · confirming a selection or setting

## **Hot Key**

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

## **OSD Menus**





# /!\ Important

The following settings will be grayed out when HDR signals are received:

- MPRT
- Low Blue Light
- HDCR
- Brightness

- Contrast
- Color Temperature
- sRGB

### **Professional**

1st Level Menu	2nd/3rd Level Menu	Description
Mode	Eco	Use Up or Down Button to select and preview
	User	mode effects.
	sRGB	Press the Middle Button to confirm and apply your mode type.
	Anti-Blue	
	Movie	
	Office	
	Black-White	
Response Time	Normal	Setting to Fastest will reach the shortest
	Fast	response time and help improve blurred images when playing very fast games.
	Fastest	

1st Level Menu	2nd/3rd Lo	evel Menu	Description	
MPRT	0FF			n the refresh rate is over
	ON		85 Hz.  • Activating MPRT will affect:	
			Affected Function	Function Status
			» Brightness » Response Time » HDCR » Adaptive-Sync	Unable to select  Set to OFF
Refresh Rate	Location	Left Top	Location is adjustable	in NSN Manu Press the
iven esii ivate	Location	Right Top	Middle Button to confi	rm and apply your Refresh
		Left Bottom	Rate Location.	nd works at the Operating
		Right Bottom	System's preset Scree	
	OFF	ragic Bottom		
	ON			
Alarm Clock	Location	Left Top		press the Middle Button to
		Right Top	activate the timer.	
		Left Bottom	Users have to manually restore thei     Alarm Clock after any AC power loss	
		Right Bottom	reconnection.	
	0FF			
	15:00	00:01 ~ 99:59		
	30:00			
	45:00			
	60:00			
Eye-Q Check	0FF		Select OFF to disable B	Eye-Q Check.
			Activating Eye-Q Check	k will affect:
			Affected Function	Function Status
			» Info. On Screen	Set to OFF
	Amsler Grid		Select Amsler Grid to a field.	check your central vision
	Astigmatis	sm	Select Astigmatism to check your blurred vision.	
	Posture Correction		Select Posture Correct posture when sitting.	tion to improve your

1st Level Menu	2nd/3rd Level Menu	Description
Screen Assistance	None	Users can adjust Screen Assistance in any mode.
	[+] [+] -  - - -  - - -  - - - 	
Screen Size	Auto	Users can adjust Screen Size in any mode, any
	4:3	resolution and any screen refresh rate.
	16:9	
Adaptive-Sync	OFF	Adaptive-Sync prevents screen tearing.
	ON	When Adaptive-Sync is set to ON, it is mandatory to enable HDMI™ VRR.
		Activating Adaptive-Sync will affect:
		Affected Function Function Status
		» MPRT Set to OFF

# Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100	Properly adjust Contrast to relax your eyes.
Sharpness	0-5	Sharpness improves clarity and details of images.
Image	OFF	Image Enhancement enhances image edges
Enhancement	Weak	to improve their acutance.
	Medium	
	Strong	
	Strongest	
Low Blue Light	OFF	Low Blue Light protects your eyes against
	ON	blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.

1st Level Menu	2nd/3rd Level Menu		Description	
HDCR	OFF ON		HDCR enhances image quality by the contrast of images.     Activating HDCR will affect:	increasing
			Affected Function Function S	Status
			» Brightness Unable to	select
			» MPRT Set to OFF	:
Color Temperature	Cool		Use Up or Down Button to select	and
	Normal		preview mode effects.     Press the Middle Button to confirence.	
	Warm		apply your mode type.	m and
	Customization	R (0-100)	Users can adjust Color Temperat Customization mode.	ure in
		G (0-100)	Customization mode.	
		B (0-100)		
Auto Config			For D-Sub only, this setting will b out when detecting other input so	
Clock (For D-Sub)	0-100		Adjusting the clock to reduce Vernoise.	tical-Line
			For D-Sub only, this setting will be out when detecting other input so	
Phase (For D-Sub)	0-100		Adjusting the phase to reduce Ho Line noise.	rizontal-
			For D-Sub only, this setting will be out when detecting other input so	, ,
H.Position (For D-Sub)	0-100		Adjusting the horizontal position image.	of the
			For D-Sub only, this setting will be out when detecting other input so	
V.Position	0-100		Adjusting the vertical position of the second	the image.
(For D-Sub)			For D-Sub only, this setting will be out when detecting other input so	

# **Input Source**

1st Level Menu	2nd Level Menu	Description
HDMI™		Users can adjust Input Source in any mode.
DP		
D-Sub		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at
	ON	below status:
		While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		While "No Signal" message box is shown on the monitor.

# Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	All Navi Key items can be adjusted via
Down	Brightness	OSD Menus.
Left Right	Mode	
Night	Alarm Clock	
	Input Source	
	Refresh Rate	
	Info. On Screen	
	Audio Volume	

# Settings

English Français Deutsch Deutsch Italiano Español 한국어 日本語 Pycский Português 简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency O-5 OSD Time Out Fower Button OFF ON  HDMI™ CEC OFF ON  The CEC OFF ON  HDMI™ CEC is set to ON:  The CEC device will enter power saving mode when the monitor is turned off.  HDMI™ CEC is console is connected, Mode will be automatically set to default modes and can adjusted to users' preferred modes later.	1st Level Menu	2nd/3rd Level Menu	Description
Engush Français Deutsch Deutsch Italiano Español 한국어 日本語 Pyccкий Português 简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency O-5  OSD Time Out  OFF  Users can adjust Transparency in any mode.  **Users can adjust Transparency in any mode.**  **Users can adjust SD Time Out in any mode.**  **OFF  **OWen Button  OFF  **OWen Button  ON  **OWen Set to Standby, users can press the power butto to turn off the panel and backlight.  **HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.  **If HDMI™ CEC is set to ON:  **The monitor will automatically power on when CEC device is turned on.  **The CEC device will enter power saving mode when the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is connected, Mode with the monitor is turned off.  **When Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS console is con	Language	繁體中文	Users have to press the Middle Button to confirm and
Français   Deutsch   Deutsch   Deutsch   Italiano   Español   한국어   日本語   Pycckий   Português   简体中文   Bahasa Indonesia   Türkçe   [More languages coming soon]   Users can adjust Transparency in any mode.   OSD Time Out   5-30s   Users can adjust OSD Time Out in any mode.   When set to OFF, users can press the power butto to turn off the monitor.   Standby   When set to Standby, users can press the power butto to turn off the panel and backlight.   HDMI™ CEC   Consumer Electronics Control   supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.   If HDMI™ CEC is set to ON:   The monitor will automatically power on when CEC device is turned on.   The CEC device will enter power saving mode when the monitor is turned off.   When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode will be automatically set to default modes and can adjusted to users' preferred modes later.		English	1
Ritaliano Español 한국어 日本語 Pycский Português 简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency 0-5 • Users can adjust Transparency in any mode.  OSD Time Out 5-30s • Users can adjust OSD Time Out in any mode.  Power Button  OFF • When set to OFF, users can press the power butto to turn off the monitor.  Standby • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™CEC OFF • HDMI™CEC (Consumer Electronics Controll supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visua devices that are CEC-capable. • If HDMI™CEC is set to ON: • The monitor will automatically power on when CEC device is turned on. • The CEC device will enter power saving mode when the monitor is turned off. • When Sony PlayStation®, Nintendo® Switch™, CX Xbox Series XIS console is connected, Mode winden the monitor is turned off.		Français	language setting will override the factory. When
Italiano   Español   한국어   日本語   Pyccкий   Português   简体中文   Bahasa Indonesia   Türkçe   [More languages coming soon]   Transparency		Deutsch	, 3 3
한국어 日本語 Русский Рortuguês 简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency 0-5 • Users can adjust Transparency in any mode.  OSD Time Out 5-30s • Users can adjust OSD Time Out in any mode.  Power Button OFF • When set to OFF, users can press the power butto to turn off the monitor.  Standby • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC OFF • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.  If HDMI™ CEC is set to ON:  The monitor will automatically power on when CEC device is turned off.  When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode with the monitor is turned off.  When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode with the monitor is turned off.  When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode with the monitor is turned off.		Italiano	
日本語 Pycckwi Português 简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency 0-5 • Users can adjust Transparency in any mode.  OSD Time Out 5-30s • Users can adjust OSD Time Out in any mode.  Power Button 0FF • When set to OFF, users can press the power butto to turn off the monitor.  Standby • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC 0FF • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visua devices that are CEC-capable.  • If HDMI™ CEC is set to ON: • The monitor will automatically power on when CEC device is turned on. • The CEC device will enter power saving mode when the monitor is turned off. • When Sony PlayStation®, Nintendo® Switch™, con Xbox Series XIS console is connected, Mode with the monitor is turned off. • When Sony PlayStation®, Nintendo® Switch™, con Xbox Series XIS console is connected, Mode with the monitor is turned off.		Español	
Русский Рогидие̂s		한국어	
Português		日本語	
简体中文 Bahasa Indonesia Türkçe [More languages coming soon]  Transparency 0-5 0SD Time Out 5~30s • Users can adjust Transparency in any mode.  Power Button  OFF • When set to OFF, users can press the power butto to turn off the monitor.  Standby • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC  OFF  ON  • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visua devices that are CEC-capable.  • If HDMI™ CEC is set to ON: • The monitor will automatically power on when CEC device is turned on. • The CEC device will enter power saving mode when the monitor is turned off. • When Sony PlayStation®, Nintendo® Switch™, c Xbox Series XIS console is connected, Mode wi be automatically set to default modes and can adjusted to users' preferred modes later.		Русский	
Bahasa Indonesia  Türkçe  [More languages coming soon]  Transparency 0-5  OSD Time Out 5~30s  Power Button  OFF  When set to OFF, users can press the power butto to turn off the monitor.  Standby  When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC  OFF  ON  HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.  If HDMI™ CEC is set to ON:  The monitor will automatically power on when CEC device is turned on.  The CEC device will enter power saving mode when the monitor is turned off.  When Sony PlayStation®, Nintendo® Switch™, C Xbox Series XIS console is connected, Mode wide automatically set to default modes and can adjusted to users' preferred modes later.		Português	
Türkçe  [More languages coming soon]  Transparency 0-5  • Users can adjust Transparency in any mode.  OSD Time Out 5-30s  • Users can adjust OSD Time Out in any mode.  • When set to OFF, users can press the power butter to turn off the monitor.  Standby  • When set to Standby, users can press the power butten to turn off the panel and backlight.  HDMI™ CEC  OFF  • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.  • If HDMI™ CEC is set to ON:  • The monitor will automatically power on when CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, C Xbox Series XIS console is connected, Mode will be automatically set to default modes and can adjusted to users' preferred modes later.		简体中文	
More languages coming soon		Bahasa Indonesia	
Transparency 0-5  Users can adjust Transparency in any mode.  Users can adjust OSD Time Out in any mode.  Users can adjust OSD Time Out in any mode.  Users can adjust OSD Time Out in any mode.  When set to OFF, users can press the power butto to turn off the monitor.  Standby  When set to Standby, users can press the power button to turn off the panel and backlight.  USERS CONSUME TO STAND TO ST		Türkçe	
OSD Time Out    Sandby   Standby   When set to OFF, users can press the power butto to turn off the monitor.			
Power Button  OFF  • When set to OFF, users can press the power butto to turn off the monitor.  Standby  • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC  OFF  • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visua devices that are CEC-capable.  • If HDMI™ CEC is set to ON:  • The monitor will automatically power on when CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, c Xbox Series XIS console is connected, Mode wi be automatically set to default modes and can adjusted to users' preferred modes later.	Transparency	0~5	Users can adjust Transparency in any mode.
to turn off the monitor.  Standby  • When set to Standby, users can press the power button to turn off the panel and backlight.  HDMI™ CEC  OFF  • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.  • If HDMI™ CEC is set to ON:  • The monitor will automatically power on when CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode will be automatically set to default modes and can adjusted to users' preferred modes later.	OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.
button to turn off the panel and backlight.  HDMI™ CEC  OFF  • HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series XIS consoles and various audio-visua devices that are CEC-capable.  • If HDMI™ CEC is set to ON:  • The monitor will automatically power on when CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, of Xbox Series XIS console is connected, Mode wife be automatically set to default modes and can adjusted to users' preferred modes later.	Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.
supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visua devices that are CEC-capable.  • If HDMI™ CEC is set to ON:  • The monitor will automatically power on when CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Mode will be automatically set to default modes and can adjusted to users' preferred modes later.		Standby	
N Xbox Series XIS consoles and various audio-visua devices that are CEC-capable.  If HDMI™ CEC is set to ON:  The monitor will automatically power on when CEC device is turned on.  The CEC device will enter power saving mode when the monitor is turned off.  When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode wire be automatically set to default modes and can adjusted to users' preferred modes later.	HDMI™ CEC	OFF	
The monitor will automatically power on when CEC device is turned on.  The CEC device will enter power saving mode when the monitor is turned off.  When Sony PlayStation®, Nintendo® Switch™, ox Xbox Series XIS console is connected, Mode with be automatically set to default modes and can adjusted to users' preferred modes later.		ON	Xbox Series X S consoles and various audio-visual
CEC device is turned on.  • The CEC device will enter power saving mode when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode with be automatically set to default modes and can adjusted to users' preferred modes later.			If HDMI™ CEC is set to 0N:
when the monitor is turned off.  • When Sony PlayStation®, Nintendo® Switch™, o Xbox Series XIS console is connected, Mode wi be automatically set to default modes and can adjusted to users' preferred modes later.			The monitor will automatically power on when the CEC device is turned on.
Xbox Series X S console is connected, Mode wi be automatically set to default modes and can adjusted to users' preferred modes later.			
Info On Screen OEE . The information of the maniter status will be show			<ul> <li>When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.</li> </ul>
	Info. On Screen	OFF	The information of the monitor status will be shown
ON on the right side of the screen.		ON	on the right side of the screen.
Audio Volume 0-100 • Users can adjust Audio Volume in any mode.	Audio Volume	0-100	Users can adjust Audio Volume in any mode.
	Reset	YES	Users can Reset and restore settings to original OSD
NO Default in any mode.		NO NO	Default in any mode.

# **Specifications**

Monitor	PRO MP251W E2	
Size	24.5 inch	
Curvature	Flat	
Panel Type	IPS	
Resolution	1920x1080 (FHD)	
Aspect Ratio	16:9	
Brightness	Typical SDR 300 nits	
Contrast Ratio	1500:1	
Refresh Rate	120Hz	
Response Time	4ms (GtG)	
Response Time	1ms (MPRT)	
	• DisplayPort x1	
	HDMI™ Connector x1	
1/0	• Headphone Jack x1	
	D-Sub Port x1	
	• Line-in Jack x1	
View Angles	178°(H) , 178°(V)	
DCI-P3*/ sRGB	79% / 99%	
Surface Treatment	Anti-glare	
Display Colors	16.7M, 8bits (6bits + Hi FRC)	
Speaker	2W x2	
Monitor Power Options	100~240Vac, 50/60Hz, 1.2A	
	Power On < 18W	
Power Consumption (Typical)	Standby < 0.5W	
,,,preuc,	Power Off < 0.3W	
Adjustment (Tilt)	-5° ~ 20°	
Kensington Lock	Yes	

Monitor		PR0 MP251W E2			
VESA Mounting		• Plate Type: 100 x 100 mm			
		• Screw Type: M4 x 10 mm			
		• Thread Diameter: 4 mm			
		• Thread Pitch: 0.7 mm			
		• Thread Length: 10 mm			
		VESA Screw Type:			
		• Male Thread: M4 x 8 mm			
		• Female Thread: M4			
		• Screw Length: 21 mm + 8 mm (Male Thread)			
Dimension (W x H x D)		556.9 x 413.9 x 188.2 mm			
Weight	Net	3.0 kg			
	Gross	5.1 kg			
Environment		• Temperature: 0°C to 40°C			
	Operating	Humidity: 20% to 90%, non-condensing			
		• Altitude: 0 ~ 5000m			
	Storage	• Temperature: -20°C to 60°C			
		• Humidity: 10% to 90%, non-condensing			

<sup>\*</sup> Based on CIE1976 test standards.

# **Preset Display Modes**



All information is subject to change without prior notice.

## Standard Default Mode

Standard	Resolution		HDMI™	DP	D-Sub
VGA	640x480	@60Hz	٧	V	V
		@67Hz	V	٧	V
		@72Hz	V	٧	V
		@75Hz	V	٧	V
SVGA	800x600	@56Hz	٧	٧	V
		@60Hz	٧	٧	V
		@72Hz	V	٧	V
		@75Hz	V	٧	V
XGA	1024x768	@60Hz	V	٧	V
		@70Hz	V	٧	V
		@75Hz	V	٧	V
SXGA	1280x1024	@60Hz	V	٧	V
		@75Hz	V	٧	V
WXGA+	1440x900	@60Hz	٧	V	V
WSXGA+	1680x1050	@60Hz	V	٧	V
Full HD	1920x1080	@60Hz	V	٧	V
		@85Hz	V	٧	
		@100Hz	V	٧	
		@120Hz	٧	٧	
Video Timing Resolution	480P		٧		
	576P		٧		
	720P		V		
	1080P @60Hz		V		
	1080P @120Hz		V		
HDMI™ VRR*			V		

<sup>\*</sup> HDMI<sup>TM</sup> VRR (Variable Refresh Rate) synchronizes with Adaptive-Sync (ON/ OFF). For VRR ON/OFF status, please check Adaptive-Sync.

# **Troubleshooting**

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

 Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

### The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

# **Safety Instructions**

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

#### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

### **Environment**

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

# **TÜV Rheinland Certification**

## TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

## TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜVRheinland
  CERTIFIED
  www.tuv.com

Flicker Free

- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The
  availability of Anti Motion Blur/MPRT varies by products.)

## **ENERGY STAR Certification**

ENERGY STAR is a program run by the U.S. Environmental Protection Agency (EPA) and U.S. Department of Energy (DOE) to promote energy efficiency. This product qualifies for ENERGY STAR in the "factory default" settings through which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption, which could exceed the limits necessary to qualify for ENERGY STAR rating.



For more information on ENERGY STAR, refer to https://www.energystar.gov/.

# Regulatory Notices

## **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

### FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA [626] 913-0828

www.msi.com

#### **WEEE Statement**

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



#### Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

#### RoHS Statement

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

### **Turkey EEE Regulation**

Conforms to the EEE Regulations of the Republic Of Turkey

#### Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017,  $\mathbb{N}^2$  139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

#### **Green Product Features**

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- · Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

## Warning!

Overuse of screens is likely to affect eyesight.

#### Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

## **Copyright and Trademarks Notice**







Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

## **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

