


EN

**DETAILED  
INSTRUCTIONS  
FOR USE OF WASHING  
MACHINE**

**gorenje**

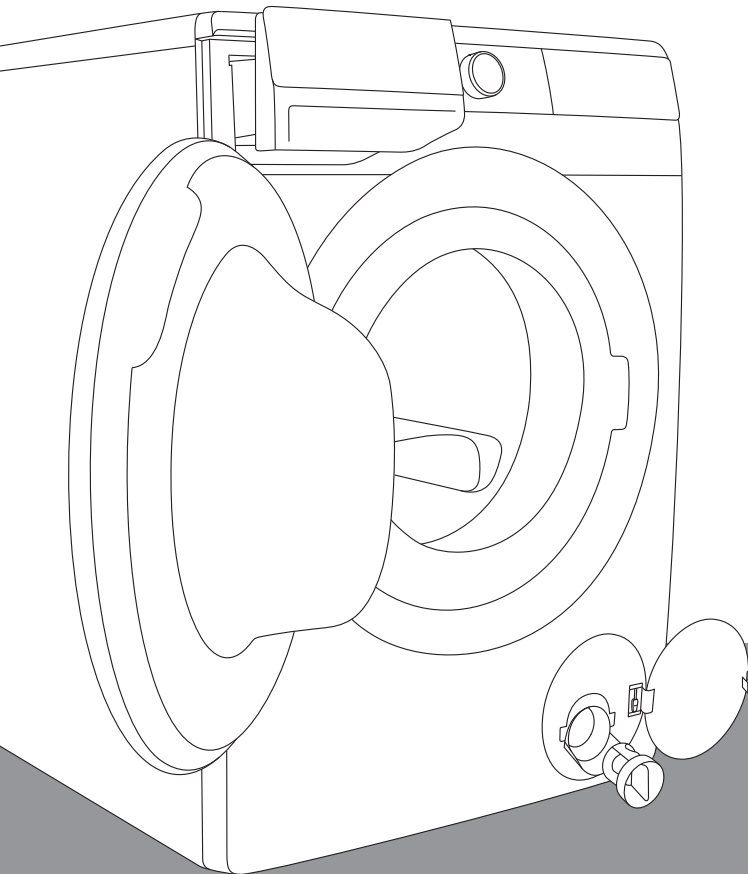

Life is complicated today. Let's make laundry care simple! Your new washing machine uses innovative technology and latest achievements in laundry care to help you simplify your daily household chores. The latest technology used in our washing machine ensures the gentlest care for each garment with minimum creasing. At the same time, your washing machine will be easy on the environment, owing to its highly efficient use of power, water and detergent.

This washing machine is intended solely for household use. Please do not use it for any laundry labelled as not suitable for machine washing.

The following symbols are used throughout the manual and they have the following meanings:



Information, advice, tip, or recommendation



Warning – general danger



Warning – danger of electric shock



Warning – danger of hot surface



Warning – danger of fire



It is important that you carefully read the instructions.

# CONTENTS

<b>4 SAFETY PRECAUTIONS</b> ..... <b>8 WASHING MACHINE DESCRIPTION</b> 9 Technical specifications 10 Control unit	<b>INTRODUCTION</b>
<b>12 INSTALLATION AND CONNECTION</b> 12 Removing the blocking rods 13 Moving and transport after installation 13 Selecting the room 13 Adjusting the washing machine feet 14 Washing machine placement 16 Connecting to water supply 18 Connecting and securing the water discharge hose 19 Connecting the appliance to the power mains ..... <b>20 BEFORE USING THE APPLIANCE FOR THE FIRST TIME</b> 21 Connecting the appliance with the <b>ConnectLife</b> app	<b>PREPARING THE WASHING MACHINE BEFORE FIRST USE</b>
<b>23 WASHING PROCESS, STEP BY STEP (1-7)</b> 23 Step 1: Heed the labels on the laundry 24 Step 2: Preparing the washing process 27 Step 3: Choosing the washing programme 33 Step 4: Choosing the settings 39 Step 5: Selecting additional functions 41 Step 6: Starting the washing programme 41 Step 7: End of the washing programme ..... <b>42 INTERRUPTIONS AND CHANGING THE PROGRAMME</b> ..... <b>45 MAINTENANCE &amp; CLEANING</b> 45 Cleaning the dispenser tray 46 Cleaning the water supply hose, detergent dispenser housing, and rubber door gasket 47 Cleaning the pump filter 48 Cleaning the washing machine exterior	<b>STEPS OF THE WASHING PROCESS</b>
<b>49 TROUBLESHOOTING</b> 49 What to do ...? 49 Troubleshooting and error table 54 Servicing ..... <b>55 RECOMMENDATIONS FOR WASHING AND ECONOMIC USE YOUR WASHING MACHINE</b> <b>58 PRODUCT INFORMATION</b> <b>60 DISPOSAL</b>	<b>WASHING MACHINE CLEANING AND MAINTENANCE</b>
	<b>TROUBLE-SHOOTING</b>
	<b>MISCELLANEOUS</b>

# SAFETY PRECAUTIONS



**Carefully read the instructions for use before using the washing machine.**

**Please, do not use the washing machine without reading and understanding these instructions or use first.**

**These instructions for use of a washing machine are supplied with different types or models of washing machines. Therefore, they may include descriptions of settings or equipment that are not available in your washing machine.**

Failure to observe the instructions for use or inappropriate use of the washing machine may result in damage to the laundry or the appliance, or injury to the user. Keep the instruction manual handy, near the washing machine.

Instructions for use are available on our website at [www.gorenje.com](http://www.gorenje.com).

**This appliance is intended to be used in household and similar applications such as:**

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Follow the instructions for correct installation of the Gorenje washing machine and connection to the water and power mains (see chapter »INSTALLATION AND CONNECTION«).

Connection to water and power supply has to be executed by an adequately trained technician or expert.

Any repair and maintenance pertaining to safety or performance should be done by trained experts.

To avoid danger, **a damaged power** cord may only be replaced by the manufacturer, a service technician, or an authorized person.

Do not connect the washing machine to power mains using an external switching device such as a programme timer, or connect it to power mains that is regularly switched on and off by the power supply provider.

Do not connect the washing machine to an electrical outlet intended for an electric shaver or hair dryer.

**Do not install the washing machine in a room where the temperature can drop to below 5°C**, as washing machine parts may be damaged in case of water freezing.

The ventilation openings in the base of washing machine must not be obstructed by a carpet.

**To connect the washing machine to water supply**, make sure to use the supplied water supply hose and gaskets. Water pressure must be between 0.05 and 0.8 MPa (0.5–8 bar).

Always use a new water supply hose to connect the washing machine to water supply; do not reuse an old water supply hose.

The end of the water discharge hose should reach into a water drain line.

Before the start of the washing cycle, press the door on the indicated spot until it locks into place. The door cannot be opened during washing machine operation.


**We recommend removing any impurities from the washing machine drum before the first wash** using the Cotton 90°C programme (see PROGRAMME TABLE).

**After the washing cycle, close the water tap and pull out the washing machine plug from the power socket.**

Only use the washing machine for washing laundry, as described in the instruction manual. The machine is not intended for dry cleaning.

Only use agents for machine washing and care of laundry. We shall not be responsible for any damages or discolouration of gaskets and plastic parts resulting from incorrect use of bleaching or colouring agents.

**When descaling**, only use descaling agents with added anti-corrosion protection. (Only use non-corrosive descaling agents.) Follow the manufacturer's instructions. Finish the descaling process with several rinse cycles or by running the Drum clean (Self-cleaning programme) in order to remove any residual acid (e.g. vinegar etc.).

 Do not use detergents that contain solvents as this could lead to release of poisonous gases, damage to the washing machine, and risk of fire and explosion.

No silver ions are released during the washing programme.

The washing machine is not intended for use by persons (including children) with physical or mental impairments, or persons with lacking experience and knowledge. These persons should be instructed about the use of the washing machine by a person responsible for their safety.

## **CHILD SAFETY**

Before closing the washing machine door and running the programme, make sure there is nothing except laundry in the drum (e.g. if a child climbed into the washing machine drum and closed the door from the inside).

Keep the detergent and conditioner out of reach of children.

**Activate the child lock.** See chapter »CHOOSING THE SETTINGS/Child lock«.

**Do not let children younger than three years come near the appliance, unless they are under constant supervision.**

**The washing machine is made in compliance with all relevant safety standards.**

This washing machine may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they are supervised during the use of the washing machine, if they have been provided relevant instructions regarding safe use of the washing machine, and if they understand the hazards of inappropriate use. Make sure children do not play with the appliance. Children may not clean the washing machine or perform any maintenance tasks without supervision.

### **DANGER OF HOT SURFACE**


At higher washing temperatures, the door glass will heat up. Be careful to avoid burns. Make sure children do not play near the door glass.

**The washing machine may only be used with the supplied power cord.**

# WASHING MACHINE DESCRIPTION


## FRONT

- 1 Touch control unit
- 2 On/off and program selector knob
- 3 Dispenser tray
- 4 Door
- 5 Rating plate
- 6 Pump filter

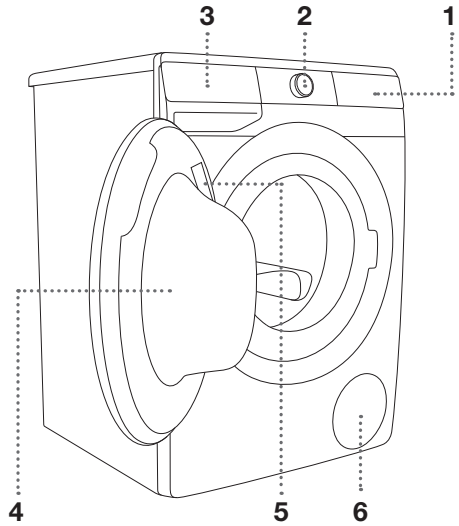

## BACK

- 1 Water supply hose
- 2 Power cord
- 3 Water discharge hose
- 4 Adjustable feet

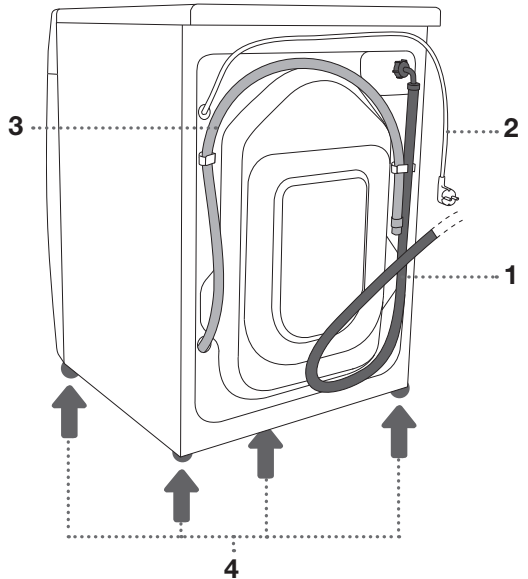





# TECHNICAL SPECIFICATIONS

## (DEPENDING ON THE MODEL)


Rating plate with basic information about the washing machine is located on the inner side of the washing machine door (see chapter »WASHING MACHINE DESCRIPTION«).

<b>Maximum load</b>	See rating plate		
<b>Width</b>	600 mm	600 mm	600 mm
<b>Height</b>	850 mm	850 mm	850 mm
<b>Washing machine depth (a)</b>	465 mm	545 mm	610 mm
<b>Depth with door closed</b>	495 mm	577 mm	640 mm
<b>Depth with door open (b)</b>	980 mm	1062 mm	1125 mm
<b>Washing machine weight</b>	X kg (depending on the model)		
<b>Rated Voltage</b>	See rating plate		
<b>Nominal power</b>	See rating plate		
<b>Connection</b>	See rating plate		
<b>Water pressure</b>	See rating plate		
<b>Current</b>	See rating plate		
<b>Frequency</b>	See rating plate		

Rating plate


<b>gorenje</b>	TYPE: PS22/XXXXX	MODEL: XXXXXXXXXXXXXXXX		MADE IN SLOVENIA
	ART.No.: XXXXXX/XX	Ser.No.: XXXXXXXX		
	XXX-XXX V ~XX Hz ⇔ XX A Pmax.: XXXX W		GORENJE	
	⚡ XXXX W Ⓢ XXXX/min XX kg XX-XX MPa		gospodinjiski aparati d.o.o.	
			Partizanska cesta 12	
			SI-3320 Velenje, SLOVENIA	
			info@gorenje.com	
	AUID: XX			

# CONTROL UNIT

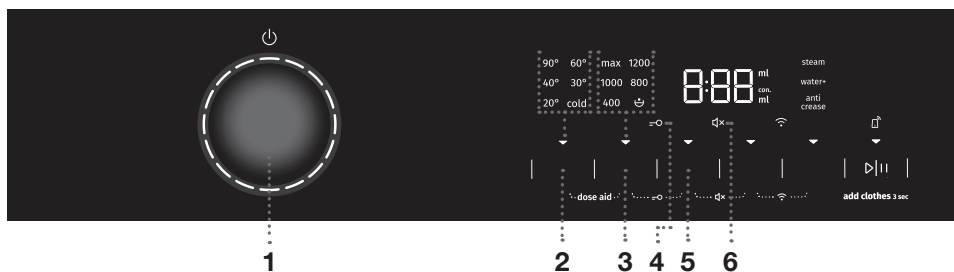

## 1 Washing machine ON/OFF and PROGRAM SELECTOR DIAL.

 To **TURN ON** the washing machine, rotate the program selector knob left or right.


To **TURN OFF** the washing machine, rotate the program selector knob to position **OFF** .

To **SELECT** a washing programme, rotate the knob left or right.

The signal light next to the selected program lights up.


## 2 TEMP. (WASHING TEMPERATURE)

 Option to set washing temperature.

When the appliance is turned on, the  indicator on the button lights up.

## 3 SPIN (SPINNING RATE/ PUMP STOP /DRAIN)

Option to set a shorter washing programme time.

When the appliance is turned on, the  indicator on the button lights up.


## 2+3 DOSE AID

Information on recommended amount of powder and liquid detergent, according to the selected settings and the amount of laundry in the drum.

Press the positions 2+3 and hold them for 3 seconds.

## 4 Lighting of the CHILD LOCK symbol


## 5 FAST Shorter washing programme duration.

When the appliance is turned on, the  indicator on the button lights up.

## 3+5 Child lock ON/OFF

Press the positions 3+5 and hold them for 3 seconds.

## 6 Lighting of the SOUND OFF symbol

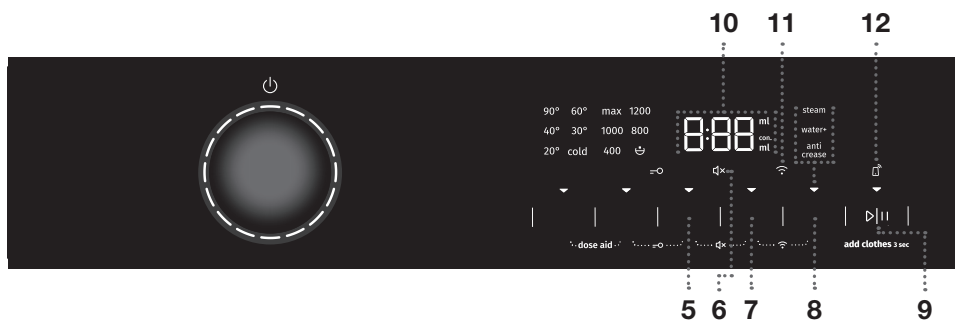

## 7 DELAY END

Option to set the time of washing programme completion.

When the appliance is turned on, the ▼ indicator on the button lights up.

## 5+7 Sound ON/OFF

Press the positions 5+7 and hold them for 3 seconds.

## 8 EXTRAS (ADDITIONAL FUNCTIONS)

### • STEAM

Option to activate the laundry refresh function;

### • WATER+ (EXTRA WATER)

Option to set a higher water level;

### • ANTI CREASE (CREASE PREVENTION).

Option to activate the gentle wash function.

When the appliance is turned on, the ▼ indicator on the button lights up.

## 7+8 Switching ON/OFF Wi-Fi connection (CONNECT)

Press the positions 7+8 and hold them for 3 seconds.

## 9 START/PAUSE BUTTON

The button has 4 functions:

- **START** – starting the washing programme (start the programme with a brief press on the button);
- **PAUSE** – pause the washing programme (if you briefly press the button again, you can temporarily stop appliance operation);
- **ADD CLOTHES** – adding clothes into the drum during the washing progress (hold the button for 3 seconds);
- **SAVING PERSONAL SETTINGS** (hold the button for 5 seconds).

When the appliance is turned on, the ▼ indicator on the button lights up.

## 10 The following is displayed on the DISPLAY UNIT:

- available functions;
- time remaining to programme completion;
- information for the user.

## 11 Lighting of the CONNECT symbol


## 12 Lighting of the REMOTE START symbol

# INSTALLATION AND CONNECTION

⚠ Remove all packaging. When removing the packaging, make sure not to damage the appliance with a sharp object.

## REMOVING THE BLOCKING RODS

⚠ Before the first use of the appliance, transport rods must be removed. A blocked washing machine may be damaged when it is switched on for the first time. Warranty shall be void in cases of such damage!

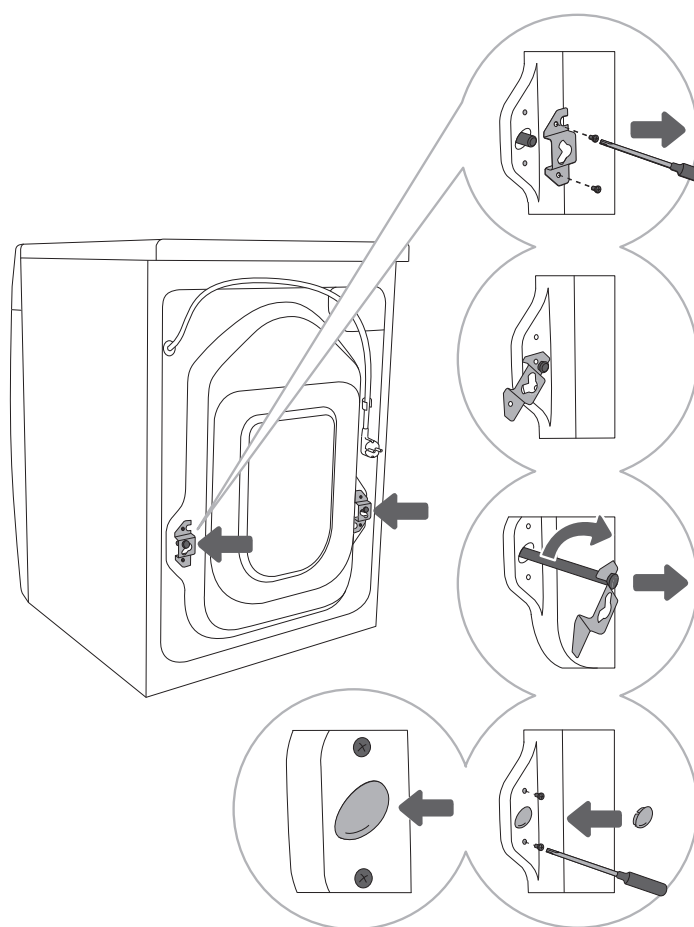

**1** Move the hoses and undo the screws on the back of the washing machine. Remove the two angular pieces.

**2** Slide the angular pieces onto the groove in the blocking rod; before doing so, rotate the right angular piece to the opposite side.

**3** Use the angular pieces to rotate the blocking rods by 90° and pull them out.

**4** Cover the two holes through which the blocking rods were inserted with plastic plugs, and redo the screws that you undid in step 1. The plastic plugs are supplied in the bag with the washing machine instruction manual.

# MOVING AND TRANSPORT AFTER INSTALLATION

⚠ If you wish to move the washing machine after it has been installed, the angular pieces and at least one blocking rods have to be re-installed to prevent vibration damage to the washing machine during transport (see chapter »INSTALLATION AND CONNECTION/Removing the blocking rods«). If you lost the angular pieces and the blocking rods, they can be ordered from the manufacturer.

## SELECTING THE ROOM


⚠ Floor on which the washing machine is placed must have a concrete base. It should be clean and dry; otherwise, the washing machine may slide. Also, clean the bottom surface of adjustable feet.

⚠ The washing machine must stand level and stable on a solid base.

⚠ If the washing machine is placed on an elevated stable base, the washing machine has to be additionally secured against tipping.

## ADJUSTING THE WASHING MACHINE FEET

Use a water scale and spanner No. 32 (for feet) and 17 (for the nut). The spanners are not supplied.

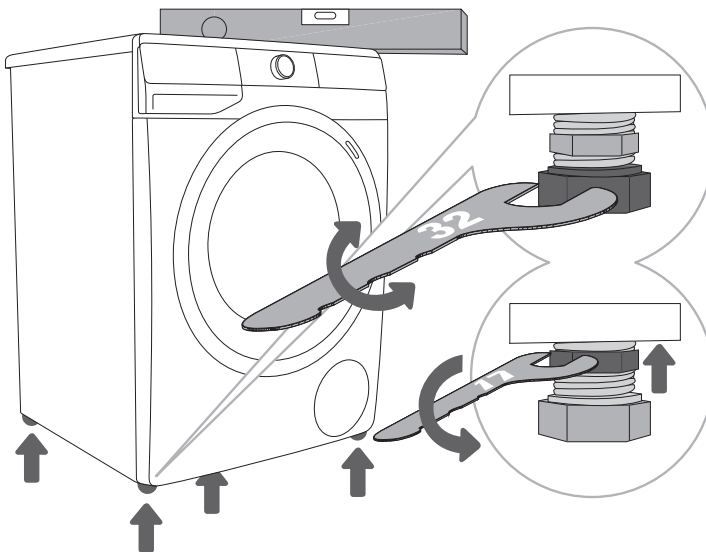

**1** Level the washing machine in longitudinal and traverse direction by rotating the adjustable feet.

**2** After adjusting the height of the feet, firmly tighten the jam nuts (counter nuts) using a spanner No 17, by turning them towards the bottom of the washing machine ↑ (see figure).

⚠ Incorrect levelling of the washing machine with the adjustable legs may cause vibration, appliance sliding across the room, and loud operation. Incorrect levelling of the washing machine is not subject to warranty.


⚠ Sometimes, unusual or louder noise may appear during appliance operation; these are mostly the result of improper installation.

## WASHING MACHINE PLACEMENT


If you also have a Gorenje dryer of corresponding (same) dimensions, it can be placed on top of the Gorenje washing machine (in this case, vacuum feet must be used) or next to it (figures 1 and 3). If your Gorenje washing machine is smaller (minimum depth 545 mm) than your Gorenje dryer, then the dryer support has to be purchased (figure 2). It is essential to use the vacuum feet! Additional equipment (dryer support (a), vacuum feet (b) and wall fixing bracket (c)) can be purchased at the service centre.

The surface on which the appliance is placed should be clean and level.

Gorenje washing machine onto which you intend to place the Gorenje dryer should hold the weight of the Gorenje dryer (see chapter »WASHING MACHINE DESCRIPTION/Technical information«).

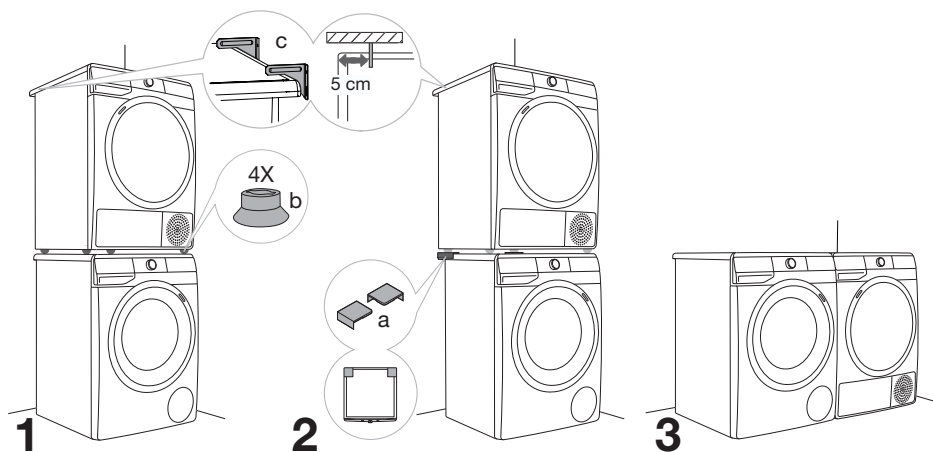

## Washing machine installation clearances

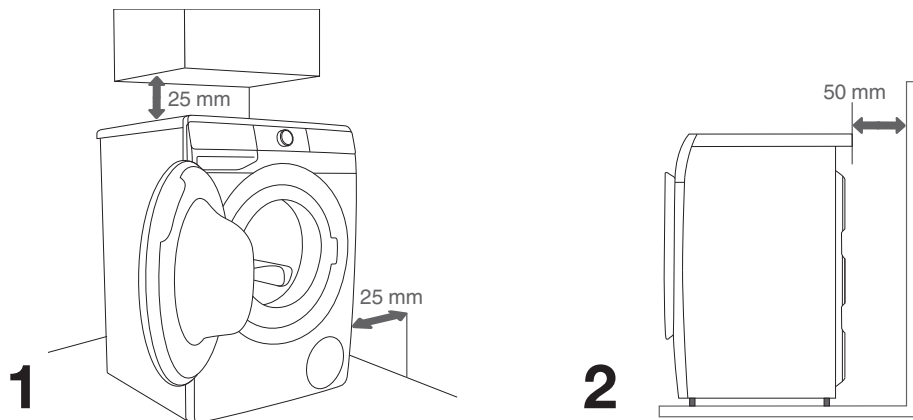


⚠ The washing machine may not be in contact with a wall or adjacent furniture. For optimum washing machine operation, we recommend observing the clearances from the walls as indicated in the figure.

In case of failure to observe the minimum required clearances, safe and correct washing machine operation cannot be ensured. Moreover, overheating can also occur (figures 1 and 2).

⚠ Installing the washing machine under a countertop is not recommended.

---

## Opening the washing machine door (bird's-eye view)

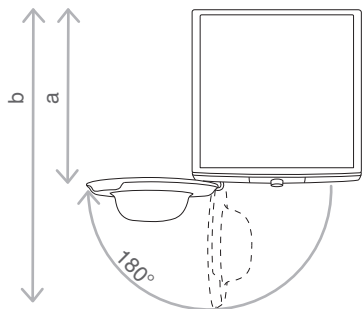


See chapter »WASHING MACHINE DESCRIPTION/Technical information«.

a = washing machine depth

b = depth with door open

# CONNECTING TO WATER SUPPLY

Attach the hose to the water tap by screwing it onto the thread.

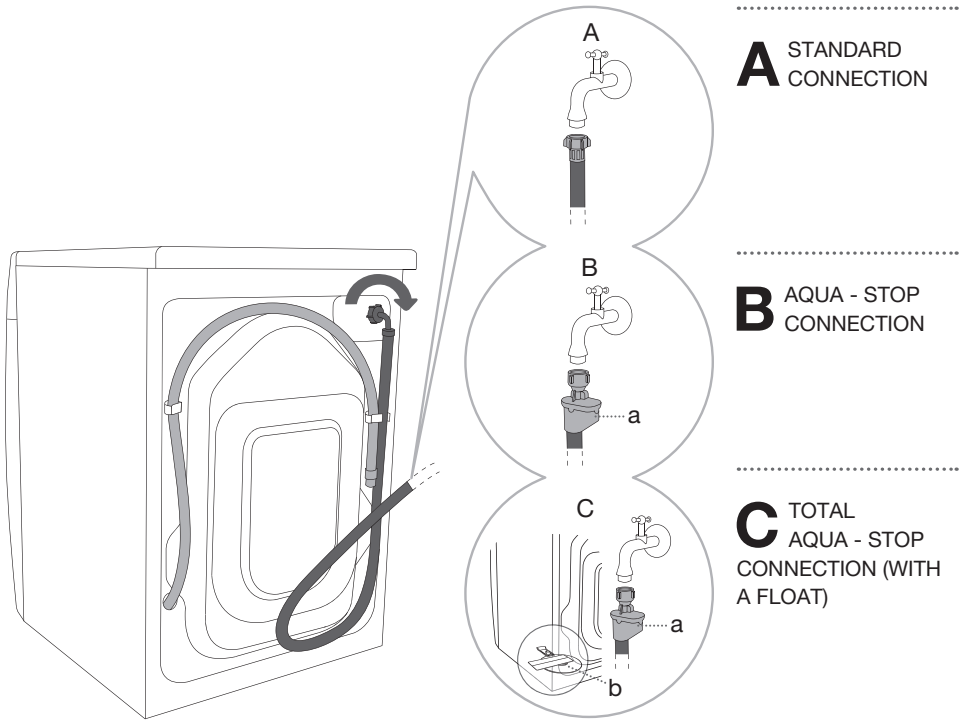

☞ For normal washing machine operation, the pressure in the water mains should be between 0.05 and 0.8 MPa (0.5–8 bar). Minimum dynamic water pressure can be determined by measuring the water flow. In 30 seconds, 1.2 litres of water should flow from a fully open tap.

☞ Tighten the water supply hose by hand, firmly enough for the hose to have a good seal (max. 2 Nm). After connecting the hose, the seal must be checked for any leaks. Do not use pliers or similar tools when connecting the hose as this could damage the nut thread.

☞ Only use the water supply hose supplied with the appliance. Do not use any used or other hoses.

☞ When connecting the water supply hose, make sure to connect it in a way that allows adequate and unobstructed water supply.



# AQUA - STOP CONNECTION

(depending on the model)

If an internal tube or hose is damaged, a shut-off system is activated that cuts the water supply to the washing machine. In such case, the control glass (a) will turn red. Replace the water supply hose.

 


# TOTAL AQUA - STOP CONNECTION (WITH A FLOAT)

(depending on the model)

If an internal tube or hose is damaged, a shut-off system is activated that cuts the water supply to the washing machine. In such case, the control glass (a) will turn red. Replace the water supply hose.


If there is water on the bottom of the washing machine, the float (b) will rise and trigger a shut-off system to cut the water supply to the washing machine; washing process is stopped, water supply is shut off, the appliance engages the pump, and signals an error.



# CONNECTING AND SECURING THE WATER DISCHARGE HOSE

## HOSE

Feed the water discharge hose into a washbasin or a bathtub, or connect it directly to a drain (minimum drain connection diameter is 4 cm). The vertical distance from the floor to the end of the discharge hose may be no more than 100 cm and no less than 60 cm. It can be attached in three ways (A, B, C).

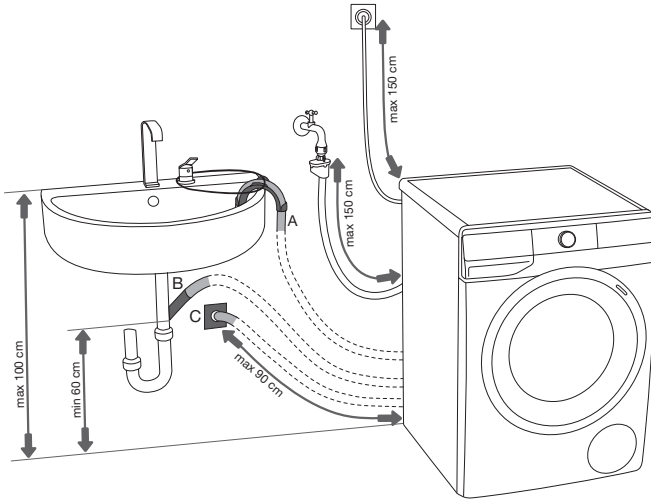


**A** Discharge hose end may be placed over a washbasin or a bathtub. B Use a string fed through the opening in the elbow support to attach the hose and prevent it from slipping to the floor.

**B** Discharge hose may also be attached directly to the washbasin drain.


**C** Discharge hose can also be attached to a wall drain with a trap; such trap should be properly installed to allow cleaning.

**D** The discharge hose has to be attached and affixed to the pin on the back of the washing machine, as shown in the figure.

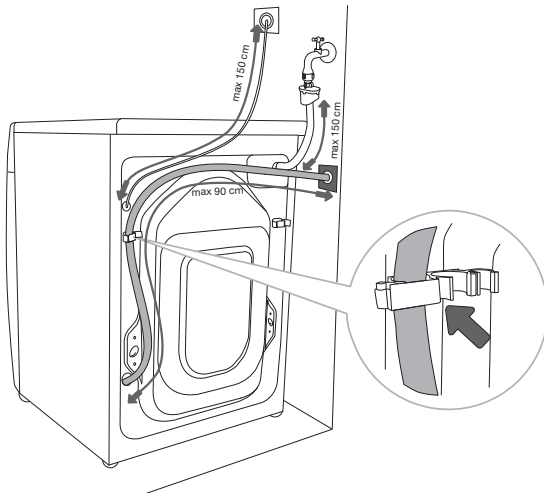

⚠ If the discharge hose is not correctly attached, safe and correct washing machine operation cannot be ensured.

# CONNECTING THE APPLIANCE TO THE POWER MAINS

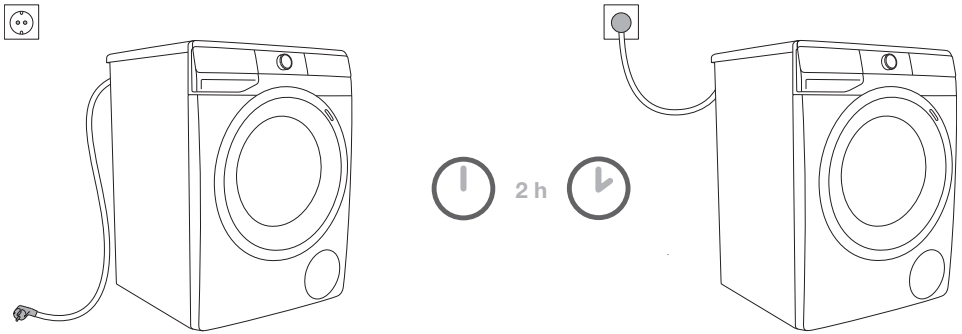

**⚠ Before connecting the washing machine to the power mains, wait for at least 2 hours until it reaches room temperature.**

Connect the washing machine to a grounded power outlet. After installation, the wall outlet should be freely accessible. The outlet should be fitted with an earth contact (in compliance with the relevant regulations).

Information on your washing machine is indicated on the rating plate (see chapter »WASHING MACHINE DESCRIPTION/Technical information«).

**⚠ We recommend using over-voltage protection to protect the appliance in case of a lightning strike.**

**⚠ The washing machine may not be connected to the power mains using an extension cord.**





⚡ Do not connect the washing machine to an electrical outlet intended for an electric shaver or hair dryer.

⚡ Any repair and maintenance pertaining to safety or performance should be done by trained experts.

# BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Make sure the washing machine is disconnected from the power mains; then, open the door towards you (figures 1 and 2).

Before first use, clean the washing machine drum with a soft moist cotton cloth and water, or use the Cotton 90°C programme. There should be no laundry in the washing machine drum; the drum should be empty (figures 3 and 4).

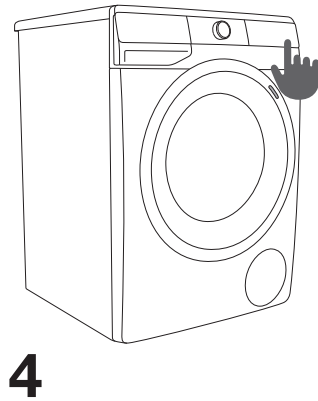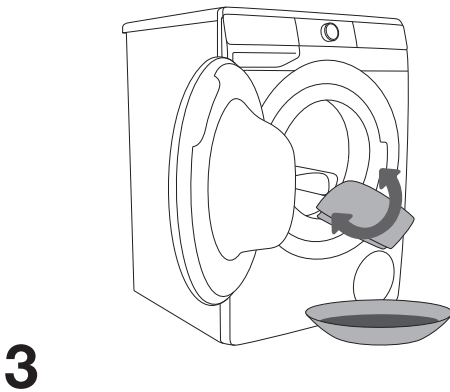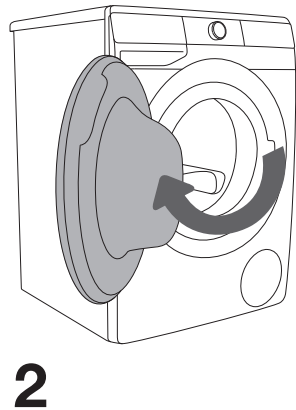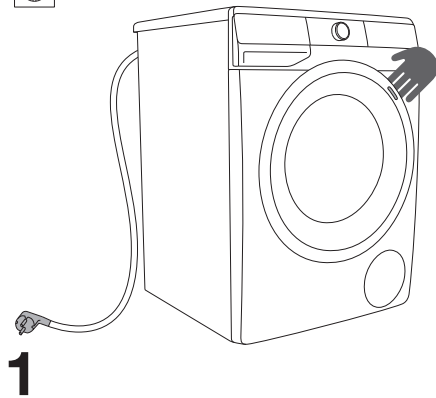

**⚠** Do not use any solvents or cleaning agents that could damage the washing machine (please observe the recommendations and warnings provided by the cleaning agent manufacturers).

# CONNECTING THE APPLIANCE WITH THE CONNECTLIFE APP

**ConnectLife** is a Smart Home platform that connects people, devices, and services under all Hisense Group brands (or only Gorenje). The **ConnectLife** app includes advanced digital services and care-free solutions that allow the users to monitor and control their appliances and receive notifications, all using their smart phones. Connect your appliance with the **ConnectLife** app. To download the app, scan the QR code below or find **ConnectLife** in your favourite app store.




1. Install the **ConnectLife** app and create an account.  
For more information, please see: <https://en.connectlife.io/getstarted>
2. Follow the instructions in the app to add your appliance.
3. Congratulations, you can now start using **ConnectLife**!

## USEFUL TIPS FOR YOUR SMART DEVICE

### Where to find the QR code for the devices required by the app during the installation process?

The QR code can be found on the warranty sheet and the rating plate of your appliance; the AUID code can also be entered manually.

### How to enable Wi-Fi on the device?

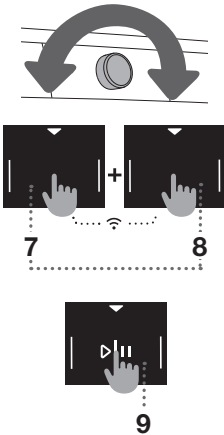


- Rotate the programme selector knob (1) to any position except **OFF** and proceed as follows:
  - Simultaneously press the positions (7) **DELAY END** and (8) **EXTRAS** (EXTRA FUNCTIONS). A countdown will start 3-2-1 and **OFF** will appear on the appliance.
  - Press the position (8) **EXTRAS** (EXTRA FUNCTIONS), and **On** will appear on the appliance.
  - Press the position (9) **START/PAUSE**. **On** will appear on the appliance. (After 60 seconds of inactivity, **APP** will appear. In this case, repeat the process.)  
Press the position (9) **START/PAUSE** again. A 5-minute countdown will start on the appliance; follow the instructions in the app.
- In the app, select the wireless network called **HIS-xxxx**. Confirm your selection in the app.
- Then, choose your local Wi-Fi network in the app (enter the password as necessary).

## How to enable remote start of the appliance?\*


Set the program selector knob to **ConnectLife/REMOTE START**  (UPRAVLJANJE NA DALJAVO).  
\*Supported functions may differ depending on your device and your region/country.

## How to add a user?

In the **ConnectLife**  app, open the add device menu.

- Select the type of appliance.
- Scan the QR code (found on the warranty sheet or the rating plate of your appliance; the AUID number can also be entered manually).
- In the app, choose the option to pair your appliance with your phone (PAIR APPLIANCE) and confirm the selection.

Follow the instructions in the **ConnectLife**  app where you will pair your phone with your appliance in three steps.

1. Open the Wi-Fi menu (simultaneously press positions (7) **DELAY END** and (8) **EXTRAS** (EXTRA FUNCTIONS) and hold them for 3 seconds. A countdown will start, and **Con** will appear.
2. Select **PR-** by successively pressing the position (8) **EXTRAS** (EXTRA FUNCTIONS).
3. Press the position (9) **START/PAUSE** , then confirm your selection in the app. You have 3 minutes available to complete this step.

## How to remove the users (UnPair)?

To remove all users, select Unp in the Wi-Fi menu.

## Which Wi-Fi router can be used?

Only 2,4 GHz networks are supported. Make sure the router is close to your device. If the **ConnectLife** app cannot find your local network during the connection set-up process, check the following:

- is your router operating at the frequency of 2.4 GHz,
- is your network hidden, and
- is your signal strong enough.

## Do you have more questions?



 







 















Visit us at [www.connectlife.io](http://www.connectlife.io) or contact us at [hello@connectlife.io](mailto:hello@connectlife.io).

## Remotely upgrading the software

 When you receive a software update notification, you can choose the option to update your software in the app menu under settings. After confirmation, the software will be updated. During the update process, the appliance must be in standby mode (for more on standby mode, please see chapter »Low standby mode«).


# WASHING PROCESS, STEP BY STEP (1-7)

## STEP 1: HEED THE LABELS ON THE LAUNDRY

<b>Normal wash; sensitive laundry</b>	Max. washing temp. 95°C  	Max. washing temp. 60°C  	Max. washing temp. 40°C  	Max. washing temp. 30°C  	Hand wash only 	Do not wash 
<b>Bleaching</b>	Bleaching in cool water 			Bleaching not allowed 		
<b>Dry cleaning</b>	Dry cleaning with all agents 	Petroleum solvent R11, R113 	Dry cleaning in kerosene, pure alcohol, and R113 	Dry cleaning not allowed 		
<b>Ironing</b>	Hot ironing, max. 200°C 	Hot ironing, max. 150°C 	Hot ironing, max. 110°C 	Ironing not allowed 		
<b>Drying</b>	Dry flat (place on a flat surface) 	Drip dry   Line dry 	High temperature   Low temperature 	Do not tumble dry 		

## STEP 2: PREPARING THE WASHING PROCESS

1. Sort the laundry by type of fabric, colour, soiling, and allowed washing temperature (see PROGRAMME TABLE).
2. Wash the laundry that sheds a lot of fibre or lint separately from other laundry.
3. Close the buttons and zippers, tie any ribbons, and turn the pockets inside out; remove any metal clips that could damage the laundry and washing machine interior, or clog the drain.
4. Place very sensitive clothes and small items in a special-purpose laundry washing bag. (The special purpose laundry bag is available as an optional accessory.)

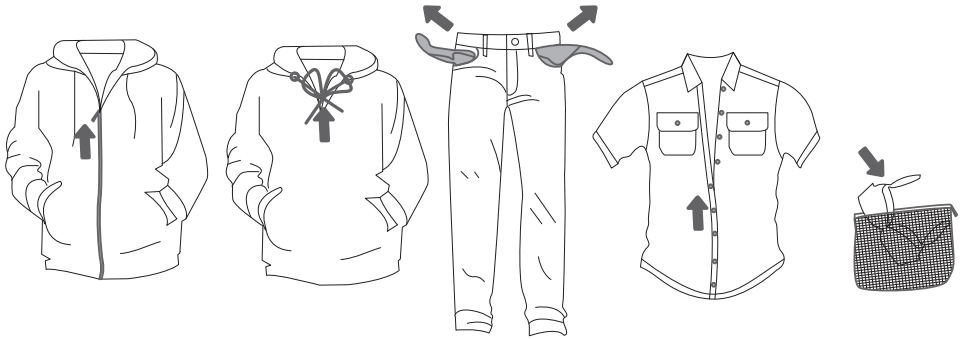



# SWITCHING ON THE WASHING MACHINE


Use the power cord to connect the washing machine to power mains, and connect the washing machine to water supply.

To turn on the appliance, rotate the program selector knob (1) to any position.


With some models, the washing machine drum is also lit for 5 minutes when the washing machine is switched on (figure 2).

The light in the washing machine drum can also remain lit during appliance operation, if you press the **START/PAUSE** (9) button, as well as after the washing programme is completed.

(The lamp in the washing machine drum is not suitable for any other use.)

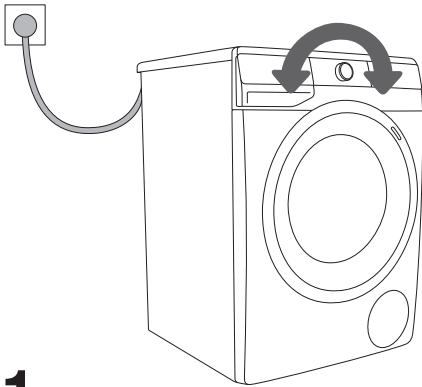

1

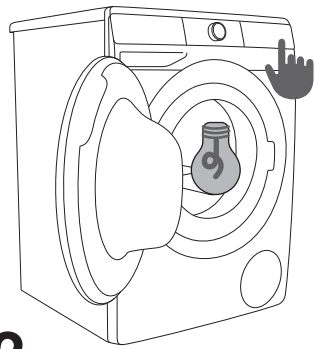


2


⚡ The lamp in the washing machine drum may only be replaced by the manufacturer, a service technician or an authorized person.

# LOADING THE WASHING MACHINE


Open the washing machine door by pulling the handle towards you (figure 1).  
Insert the laundry into the drum (after making sure the drum is empty) (figure 2).  
Make sure that no garment is stuck between the door and the rubber gasket. Close the washing machine door (figure 3).

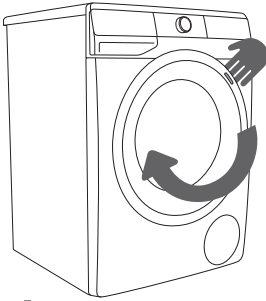

**1**

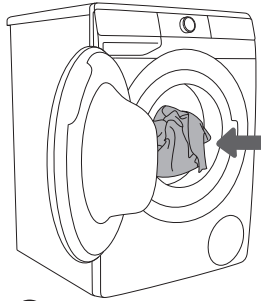

**2**

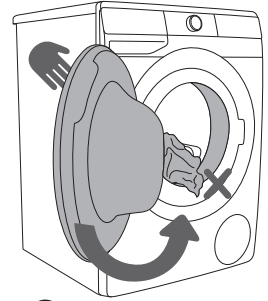


**3**

Do not overload the drum! See PROGRAMME TABLE and observe your nominal load as indicated on the rating plate.

If the washing machine drum is too full, the laundry will not be washed as thoroughly.

## STEP 3: CHOOSING THE WASHING PROGRAMME

Choose the **programme** by rotating the program selector knob (1) to the left or to the right (depending on the type of laundry and how heavily soiled it is). See PROGRAMME TABLE. The signal light next to the selected program lights up.

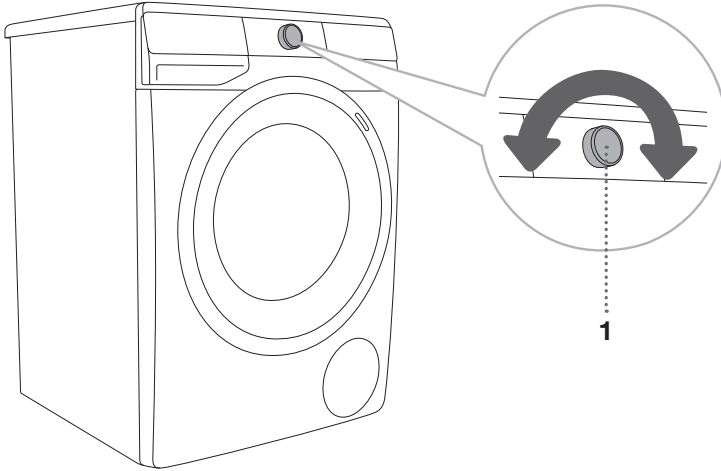
 








⚡ During operation, the program selector knob (1) will not rotate automatically.

⚡ Washing programmes are comprehensive programmes that include all washing stages, including softening and spinning (this does not apply to Partial programmes).

⚡ Partial programmes are independent programmes. Use them when you feel you do not need the entire washing programme.

# PROGRAMME TABLE

Programme	Max. load	Maximum spinning rate	Programme description
 <b>Cotton white</b>  40°C–90°C	* MAX	MAX <sup>1)</sup>	Programme for washing white cotton laundry, towels, bed linen, T-shirts ... The temperature can be set separately; therefore, observe the instructions indicated on the clothing. Spinning speed can be set to your preference. Programme duration and amount of water will be adjusted to the amount of laundry. To reduce creasing, press the (8) <b>EXTRAS</b> (EXTRA FUNCTIONS) button before the start of the washing programme, and select the <b>STEAM</b> and/or <b>ANTI CREASE</b> function.
 <b>Colour</b> cold–60°C	* MAX	MAX <sup>1)</sup>	Programme for coloured laundry made of cotton. The temperature can be set separately; therefore, observe the instructions indicated on the clothing. Spinning speed can be set to your preference. Programme duration and amount of water will be adjusted to the amount of laundry.
 <b>Mix Synthetics</b> <b>(Mixed laundry </b> <b>Synthetics)</b> cold–60°C	3,5 kg	1200 <sup>2)</sup>	Washing programme for delicate clothing made of synthetic and mixed fibres or viscose, and for simple care of cotton. Observe the instructions indicated on the clothing.
 <b>Wool&amp;Hand</b> cold–40°C	2 kg	800	Delicate washing programme for washing woollens, silk, and clothes that require manual washing. Maximum temperature is 40°C. This programme has a short spinning cycle. Top spinning speed available is 800 rpm.
 <b>Eco 40-60</b>	* MAX	MAX <sup>1)</sup>	Washing cycle, which is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C.
 <b>Power 59 32'</b> 40°C	4 kg	MAX <sup>1)</sup>	Programme for smaller amounts of lightly soiled laundry. The washing programme includes intensive tumbling and maximum spinning rate.
 <b>Speed 20'</b> 30°C	2,5 kg	1000 <sup>2)</sup>	Quick washing programme for laundry that only needs refreshing.

\* Maximum declared load (MAX) – see rating plate


 

 
 
\*\* Half load (1/2)

/ Any load (0 kg – MAX kg)

<sup>1)</sup> Maximum spinning rate (MAX) – see rating plate

<sup>2)</sup> Depending on the model

cold Cold wash

Programme	Max. load	Maximum spinning rate	Programme description
 <b>Drum clean</b> (Self-cleaning programme)	0 kg		This programme is used for cleaning the drum and removing the residue of detergent and bacteria. To select the programme, rotate the program selector knob to the left or to the right to the Drum clean (Self-cleaning programme) position. Other extra functions cannot be selected. The drum has to be empty. <b>Do not add detergent and softener!</b> You can add some distilled (spirit) vinegar (approx. 2 dl) or sodium bicarbonate (1 tablespoon, or 15 g). We recommend running the programme at least once a month.
 <b>Spin Drain</b> (Spinning rate Drain) (Partial programme)	/	MAX <sup>1)</sup>	Use the programme when you only wish to spin the laundry. If you wish to only drain the water from the washing machine, without spinning, press the <b>SPIN</b> multiple times, until no indicator (light) is on.
 <b>Rinse&amp;Softening</b> (Partial programme)	/	MAX <sup>1)</sup>	For softening, starching, or impregnating the washed laundry. It can also be used as a rinse cycle, but do not add any detergent or softener/conditioner. It is completed with an additional rinse. You can also choose <b>WATER+</b> (EXTRA WATER) by selecting the extra function (press the (8) <b>EXTRAS</b> (EXTRA FUNCTIONS) button before the start of the washing programme).
 <b>Shirts</b> (Shirts with steam) cold-40°C	3,5 kg	1200 <sup>2)</sup>	This program is intended for washing garments made of cotton, microfibres and synthetics; for washing collars and cuffs. The wash takes place at a low temperature, with a greater amount of water and gentle tumbling. Preset spinning speed is 800 rpm. To treat laundry with steam, press the (8) <b>EXTRAS</b> (EXTRA FUNCTIONS) button and select the <b>STEAM</b> function.
 <b>Sports</b> (Sportswear) cold-40°C	3,5 kg	1200 <sup>2)</sup>	Sportswear made of cotton, microfibres and synthetic fibres, at lower spinning rates and a brief final spinning cycle.

\* Maximum declared load (MAX) – see rating plate





\*\* Half load (1/2)

/ Any load (0 kg – MAX kg)

<sup>1)</sup> Maximum spinning rate (MAX) – see rating plate

<sup>2)</sup> Depending on the model

cold Cold wash

Programme	Max. load	Maximum spinning rate	Programme description
 <b>Extra hygiene</b>  40°C–90°C	* MAX	MAX <sup>1)</sup>	This washing programme is used for washing cotton garments that require special care, such as clothes for people with highly sensitive skin or allergies. We recommend turning the garments inside out, as this will also thoroughly wash out the skin and other residues. To treat laundry with steam, press the (8) <b>EXTRAS</b> (EXTRA FUNCTIONS) button and select the <b>STEAM</b> function.
 <b>Stain expert (Stains)</b> 40°C–90°C	* MAX	MAX <sup>1)</sup>	Use this program to remove stains (blood, eggs, wine, coffee ...) from cotton laundry.
 <b>Remote control</b>			Use the Remote control programme to remotely control your appliance (using your phone). You can select all programmes available on your appliance (see chapters »BEFORE USING THE APPLIANCE FOR THE FIRST TIME/Connecting the appliance to a Wi-Fi network« and »WASHING PROCESS, STEP BY STEP (1–7)/Step 3: Remote control of wash using the app«).

\* Maximum declared load (MAX) – see rating plate


\*\* Half load (1/2)

/ Any load (0 kg – MAX kg)

<sup>1)</sup> Maximum spinning rate (MAX) – see rating plate

<sup>2)</sup> Depending on the model


cold Cold wash


 Add powder or liquid detergents according to the manufacturer's instructions, considering the washing temperature, washing program, how soiled the laundry is, and water hardness.

In case of excessive foaming in the washing machine or leak of foam through the detergent dispenser tray, the washed laundry must be rinsed thoroughly with a large amount of water. Choose a washing program, but do not add any detergent.

 Maximum amount of laundry in kg (for the Cotton programme) is indicated on the washing machine rating plate (see chapter »WASHING MACHINE DESCRIPTION/Technical information«).

 Maximum or nominal load applies to laundry prepared pursuant to the IEC 60456 standard.

 For better washing effect, we recommend loading the drum to 2/3 when using the cotton programmes.

 Low water temperature, low mains voltage and different washing loads may affect the washing time; the remaining time displayed is adjusted accordingly during the washing process.

## Time optimization during the programme progress

In the early stage of the washing programme, the washing machine uses advanced technology to detect the amount of laundry. After load detection, the washing machine adjusts the programme duration.

## WASHING PROGRAMS WITH STEAM

Adding steam during the last washing step loosens the laundry, slightly disinfects it, and eliminates some allergens. After using such a program, the laundry will be soft, supple, and fresh, and it will require less ironing.

The use of steam (press the position 8) also allows omitting or reducing the amount of conditioner. For a better steam effect on the laundry, we recommend half load.

## AIRDRY FUNCTION


(depending on the model)

**AIRDRY** is a function intended for drying the washing machine interior and dispenser without any laundry in the appliance. The purpose of drying is to reduce and prevent the conditions for occurrence of mould and development of microbes that cause unpleasant odours of the washed clothes.

We recommend running this function once per week.

The drying procedure takes several hours but uses little electricity.


When the **AIRDRY** process is completed, water droplets may still be present in the appliance or parts thereof. This is completely normal. Efficiency of appliance interior drying depends on the relative humidity in the room, amount of humidity remaining from the most recent wash, amount of clothes in the most recent wash etc.

**AIRDRY** function can only be activated using the **ConnectLife**  app on your phone. (See chapter »WASHING PROCESS, STEP BY STEP (1–7)/Step 3: Remote control of wash using the app«.)




# REMOTE CONTROL OF WASH USING THE APP

🔌 See chapter WASHING PROCESS, STEP BY STEP (1–7) and observe steps 1 and 2.

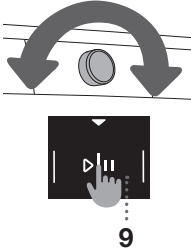🔌 Close the washing machine door and close the detergent compartment.



On the appliance:

1. Rotate the program selector knob (1) to position **REMOTE CONTROL (ConnectLife)** .
2. Press the position (9) **START/PAUSE** . Appliance door will lock and the remote control indicator **REMOTE START**  lights up.

The appliance switches to standby mode. The appliance can then be remotely controlled for the next 24 hours or until the appliance door is opened. If the door is opened **REMOTE CONTROL (ConnectLife)** will be disconnected.

In the app:

1. Open the **ConnectLife**  app.

You can choose between two modes of washing settings:

- settings from a list of programmes available on your appliance or
- using the **WIZARD** that helps you select the most suitable washing programme based on the selected parameters.


2. To start the wash programme, press **START**.
3. The appliance will start running the programme.

🔌 The washing process can be controlled/monitored from the app.

4. Washing machine operation can be paused or stopped by choosing **STOP/ADD CLOTHES/PAUSE ...**

🔌 Some options or functions can be fully completed remotely while others, such as adding laundry during the washing cycle (**ADD CLOTHES**), will require your physical presence.

🔌 You can also control your appliance from your phone if you are not connected to the same Wi-Fi network as your appliance (the phone only needs an active internet connection). This means you can also control your appliance when you are away from home.


🔌 The appliance can be controlled from multiple phones. All phones paired with the appliance may be used to control and monitor appliance operation, regardless of which user started the wash programme. Every phone must be logged into the **ConnectLife**  app with a different personal account.

🔌 After you have started the appliance from your phone, a person located next to the appliance can take over and manually turn off or control the appliance; the app will notify you in such case. In such case, controlling the appliance remotely from your phone is no longer possible. If you wish to control the appliance from your phone again, all required steps must be repeated.



# STEP 4: CHOOSING THE SETTINGS


Most programmes feature basic settings, but these settings can be changed.

Adjust the settings by pressing the relevant function button (before pressing the (9) START/PAUSE  button).

Functions that cannot be changed with the selected washing programme are partly lit (dimmed). Certain settings cannot be selected with some programmes. Such settings will not be lit, and the button will flash when pressed (see FUNCTION TABLE).

Description of function indicators for selected washing programme:

- **lit** (Basic/preset setting);
- **dimmed** (Functions that can be adjusted) and
- **unlit** (Functions that cannot be selected).

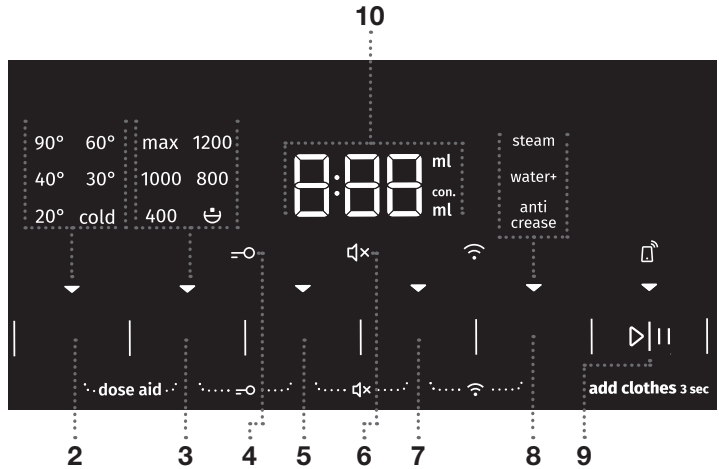

2

## TEMP. (WASHING TEMPERATURE)

Changing the temperature for the selected program.

Each program has a preset temperature that can be changed by pressing the position (2) **TEMP. (WASHING TEMPERATURE)**.

Indicator (light) under the selected temperature is lit.



## SPIN (SPINNING RATE/PUMP STOP/DRAIN)

To adjust the spinning rate. Every programme (except for Drum Clean (Self-cleaning programme)) has a preset spinning rate that can be adjusted by pressing on position (3) **SPIN** (SPINNING RATE/PUMP STOP/DRAIN)

If you select the Drain function without spinning, then no indicator (light) will be lit on the display unit. Washing time will be accordingly shorter. If you select »Pump stop«, the symbol ☺ will appear on the display unit. Select the »Pump stop« ☺ function when you wish the laundry to stay soaked in the water from the last rinse cycle in order to prevent it from creasing when you are unable to take it from the washing machine immediately after the washing programme is complete. You may set the desired spinning rate. To continue the program, press the (9) **START/PAUSE** button that is lit. Water will be drained (pumped out) and the final spin cycle will be run.



## FAST

When the **FAST** function is activated, the washing programme will be carried out with a shorter washing duration. There are two available choices (depending on the selected washing programme).

If you choose the **FAST** function, the function indicator (light) ▼ will turn from a partly lit to fully lit symbol, and the total programme time on the display unit will be adjusted accordingly.

To further shorten the washing programme, press the button **FAST** again. If you press the button once again, the setting is reset back to default.

First press – FAST

Second press – SUPER FAST

Third press – DEFAULT


We recommend a half-load for the Cotton programme.




## DELAY END

Press on the position (7) **DELAY END** to delay the programme completion time by up to 24 hours.

Settings procedure:

- Select the desired programme and extra functions.
- Press the position (7) **DELAY END** to activate the function.
- Repeatedly press this position to set the desired programme completion time (with 30-minute increments up to 6 hours, and 1-hour increments thereafter, up to 24 hours.)
- To activate the function, press the (9) **START/PAUSE**  button.


Washing machine starts counting down the set time. When the countdown reaches the programme duration (e.g. 2:30), the washing programme starts automatically.



To cancel or change the delayed end of the washing programme, rotate the program selector knob (1) to position **OFF**  for at least two seconds.


To quickly cancel the programme completion delay, press the position (7) **DELAY END** and hold it for 3 seconds. The washing programme will resume.

Example of function setting:



It is now 9 PM, and you wish the washing programme to be completed at 6 AM the next morning then set the **DELAY END** time to 9 hours.

 Some settings cannot be selected with certain programmes. Such functions will not be lit on the display unit, and when the corresponding button is pressed, an acoustic signal will be emitted and the light on the button will flash (see FUNCTION TABLE).

 Activate/deactivate the functions by pressing the desired function (before pressing the (9) START/PAUSE  button). An indicator will light up next to the selected functions.

 If you have set the **DELAY END** function and you are using liquid detergent, we do not recommend setting a programme without a pre-wash.

## SETTINGS USING A COMBINATION OF TWO BUTTONS PRESSED SIMULTANEOUSLY

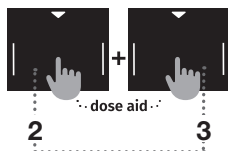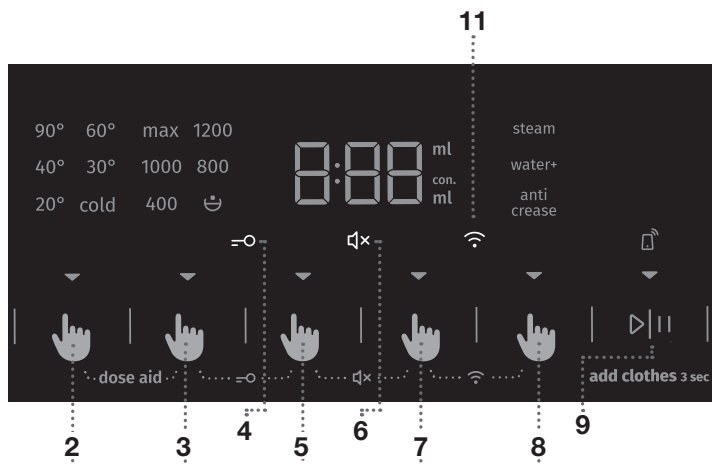

### DOSE AID

With the **DOSE AID** function, the washing machine will recommend the optimum amount of powder or liquid detergent according to the selected settings.


Recommended amount of powder or liquid detergent depends on:

- **Water hardness** (the following settings are available: soft, medium, hard. Default setting is the medium level, but the user may adjust it. See chapter »INTERRUPTIONS AND CHANGING THE PROGRAMME/Personal settings menu).« For correct functioning of the **DOSE AID** function, we recommend setting the correct water hardness level.
- **Selected washing programme** and
- **Amount of laundry (load)** – the washing machine measures the amount of laundry each time the **DOSE AID** function is used.

In order for the **DOSE AID** feature to function correctly, the STEP 2 (preparing the laundry, switching on, and loading the washing machine) and STEP 3 (selecting the washing programme) have to be carried out first.

1. Activate the function by simultaneously pressing on positions (2) **TEMP.** (WASHING TEMPERATURE) in (3) **SPIN** (SPINNING RATE/PUMP STOP/DRAIN) and holding them for at least 3 seconds. Countdown timer is displayed on the display unit. Indicator (light) lights up when the function is activated.





2. Press the (9) **START/PAUSE**  button. The washing machine will start measuring the amount of laundry in the drum. Measuring process is indicated with alternating flashing of the indicator lights on the display unit.





3. Based on the measured amount of laundry in the drum and other settings, the recommended amount of concentrated/non-concentrated powder or liquid detergent will be displayed alternately on the display unit.




 To determine whether your powder or liquid detergent is concentrated or not, check the packaging of your detergent.

 To re-check the amount of concentrated or non-concentrated powder or liquid detergent, simultaneously press the (2) **TEMP.** (WASHING TEMPERATURE) and (3) **SPIN** (SPINNING RATE/PUMP STOP/DRAIN) buttons once again.

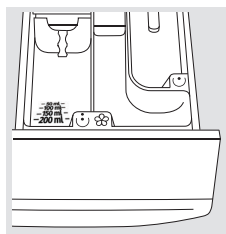



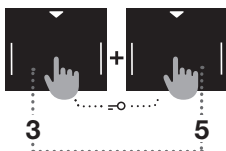

4. Add the recommended amount of powder or liquid detergent into the dosing tank . For guidance, observe the detergent amount/level indication in the washing detergent compartment (see chapter »RECOMMENDATIONS FOR WASHING AND ECONOMIC USE YOUR WASHING MACHINE«).


To start the washing programme, press the (9) **START/PAUSE**  button.



## CHILD LOCK


A safety feature. To activate the child lock, simultaneously press the (3) **SPIN** (SPINNING RATE/PUMP STOP/DRAIN) and (5) **FAST** (HITRO) positions and hold them for at least three seconds. Countdown timer is displayed on the display unit. The selection will be confirmed by an acoustic signal and by a signal light (the symbol  (4) will be lit). Follow the same procedure to deactivate the child lock. As long as the child lock is activated, programme, settings, or additional functions cannot be changed.

Child lock remains active even after the washing machine is switched off. For safety reasons, the child lock does not prevent switching off the washing machine by rotating the program selector knob (1) to the **OFF**  position. If you turn the program selector knob to the **OFF**  position while the child lock is activated, the washing programme is paused. To resume the programme, rotate the program selector knob accordingly and press the (9) **START/PAUSE**  button. To select a new programme, the child lock must first be deactivated.

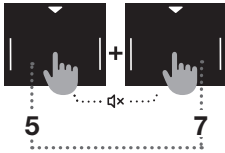


## SOUND OFF

 To turn off the sounds, simultaneously press the positions (5) **FAST** in (7) **DELAY END** and hold them for at least 3 seconds.

The selection will be confirmed by an acoustic signal and by a signal light (the symbol ) (6).


To reactivate the sound, simultaneously press the positions (5) and (7) and hold them for at least 3 seconds.

If you turn off the sounds, then there is no audible signal at the end of a washing programme.

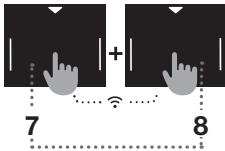

## Wi-Fi MENU

The Wi-Fi menu is used for connecting the appliance and for remote control.




 


Rotate the program selector knob (1) to any position except **OFF** .


Simultaneously press the positions (7) **DELAY END** and (8) **EXTRAS** (EXTRA FUNCTIONS) and hold them for 3 seconds. You have opened the Wi-Fi settings menu.

You can take one step back by simultaneously pressing the positions (7) and (8) and holding them for 3 second.


Use the (8) **EXTRAS** (EXTRA FUNCTIONS) button to select the available functions. Use the (9) **START/PAUSE**  button to confirm your selection.

### Available settings:

- **OFF/On**  /  – turning appliance connectivity off or on.
- **Con**  – the appliance is ready for connecting to a Wi-Fi network for 5 minutes.
- **PAr**  – the appliance is ready to connect with the **ConnectLife**  app for 3 minutes. The function will only be active if the appliance has already been connected to your Wi-Fi network (Connection Setup).
- **UnP**  – Remove (unpair) all users.

 When the washing machine is switched off, all extra functions return to their basic or custom settings, except for the acoustic signal setting.

## STEP 5: SELECTING ADDITIONAL FUNCTIONS

☼ Activate/deactivate the functions by pressing the desired function (before pressing the (9) START/PAUSE  button).

 
☼ Some settings cannot be selected with certain programmes. Such functions will not be lit on the display unit, and when the corresponding button is pressed, an acoustic signal will be emitted and the light on the button will flash (see FUNCTION TABLE). The functions (indicator lights below them) that are available will be dimly (partially) lit.



### EXTRAS (EXTRA FUNCTIONS)

Press the (8) **EXTRAS** (EXTRA FUNCTIONS) button once or multiple times to choose between the eight different functions (depending on the selected washing programme):

- First press: **ANTI CREASE** (CREASE PREVENTION);
- Second press: **WATER+** (EXTRA WATER);
- Third press: **STEAM**;
- Fourth to eighth press: different combinations of these three functions.




 
### ANTI CREASE (CREASE PREVENTION)

To prevent creasing, select the **ANTI CREASE** (CREASE PREVENTION) function. Gentle tumbling will continue after the end of the washing programme.

This function is recommended for delicate laundry.


 will appear on the display unit (10).

A function can be deactivated at any time by pressing the (9) START/PAUSE  button or by rotating the program selector knob (1) to position **OFF** (↓).



### WATER+ (EXTRA WATER)



 





 
 



 




Use this function to wash with a larger amount of water on some programmes.



### STEAM

Adding a 20-minute steam cycle at the end of the program will soften and disinfect your garments, and reduce or do away with the need for ironing and using softener/conditioner for your laundry.

# FUNCTION TABLE

Programmes	FAST	SUPER FAST	DELAY END	DOSE AID	PREWASH*	ANTI CREASE (CREASE PREVENTION)	WATER+ (EXTRA WATER)	STEAM	SPIN (SETTING THE SPINNING RATE)	PUMP STOP
 <b>Cotton white</b>  40°C–90°C	•	•	•	•	•	•	•	•	•	•
 <b>Colour</b> cold–60°C	•	•	•	•	•	•	•		•	•
 <b>Mix Synthetics (Mixed laundry  Synthetics)</b> cold–60°C	•	•	•	•	•	•	•		•	•
 <b>Wool&amp;Hand</b> cold–40°C	•	•	•	•		•			•	•
 <b>Eco 40-60</b>			•	•						
 <b>Power 59' 32'</b> 40°C	•		•	•	•	•	•		•	•
 <b>Speed 20'</b> 30°C			•	•		•			•	•
 <b>Drum clean</b>  (Self-cleaning programme)			•							
 <b>Spin Drain (Spinning rate Drain)</b> (Partial programme)			•							
 <b>Rinse&amp;Softening</b> (Partial programme)			•			•	•		•	•
 <b>Shirts</b>  (Shirts with steam) cold–40°C	•	•	•	•	•	•	•	•	•	•
 <b>Sports</b> (Sportswear) cold–40°C	•	•	•	•	•	•	•		•	•
 <b>Extra hygiene</b>  40°C–90°C	•	•	•	•	•	•	•	•	•	•
 <b>Stain expert</b> (Stains) 40°C–90°C	•	•	•	•	•	•	•	•	•	•

• Additional functions can be used

\* **PREWASH** function can only be activated using the **ConnectLife**  app on your phone. (See chapter »WASHING PROCESS, STEP BY STEP (1–7)/Step 3: Remote control of wash using the app«.)




## STEP 6: STARTING THE WASHING PROGRAMME



Press the (9) **START/PAUSE**  button.



**TIME REMAINING TO PROGRAMME COMPLETION** or **DELAY END** time (if set) will appear on the display.

Symbols will be lit on the selected functions.


After pressing the (9) **START/PAUSE**  button, the spinning rate (except in the case of the Drum clean (Self-cleaning programme) and **SPIN** (SPINNING RATE/PUMP STOP/DRAIN)), the Child lock and the Sound off functions can be adjusted/changed, while other settings cannot be changed.

 If the **TIME REMAINING UNTIL PROGRAMME COMPLETION** flashes three times on the display unit, and there is an audible signal, this means that the washing machine door is open or not closed tightly. Close the washing machine door and press the (9) **START/PAUSE**  button again to resume the washing programme.

## STEP 7: END OF THE WASHING PROGRAMME

The washing machine will indicate the end of the washing programme with an acoustic signal and **End** will appear on the display until the washing machine switches into low standby mode or switches off. After 5 minutes, the **End** sign will no longer be displayed.



1. Open the washing machine door.
2. Take the laundry from the drum.
3. Wipe the rubber door gasket and the door glass.
4. Close the door!
5. Shut off the water supply tap.
6. Switch off the washing machine (rotate the program selector knob (1) to the **OFF**  position).
7. Unplug the power cord from the outlet.

# INTERRUPTIONS AND CHANGING THE PROGRAMME

## MANUAL INTERRUPTION

To **stop and cancel a washing programme**, rotate the program selector knob (1) to the **OFF** (⏻) position. Signal lights will flash on the display. At the same time, the washing machine pumps the water out of the washing machine drum. When the water is pumped out, washing machine door will be unlocked. If the water in the washing machine is hot, the washing machine will automatically cool it and pump/drain it out.

## PERSONAL SETTINGS

Basic or default settings for each washing programme can also be changed. When you select the washing programme and Additional functions, the combination can be stored by pressing the (9) **START/PAUSE** (⏻) button and holding it for 5 seconds (the time is counted down on the display unit). The sign »**saved**« will appear on the display.

The programme will remain stored until it is changed using the same procedure.

Personal settings can also be reset to factory settings in the user menu.

## ADAPTTECH

When a washing programme setting is used three times in a row, this setting is stored as default and will always be suggested when you select that washing programme – this is called the **ADAPTTECH** function. If you manually store the settings of a washing programme, the **ADAPTTECH** function on this washing programme is deactivated.

## PERSONAL SETTINGS MENU



To turn on the washing machine, rotate the program selector knob (1) to any position.

Simultaneously press the (2) **TEMP.** (WASHING TEMPERATURE) and (5) **FAST** positions to open the Personal Settings Menu. The lights in the upper row of the display unit will light up, and number 1 will appear to indicate the setting function. Rotate the program selector knob (1) to the left or to the right to choose the function to change. Number 1 indicates sound settings, 2 indicates Water hardness setting (DOSE AID), and number 3 indicates resetting of Personal programme settings to factory defaults. If the desired settings are not selected in 20 seconds, the programme will automatically return to main menu.

Press the (3) **SPIN** (SPINNING RATE/PUMP STOP/DRAIN) position to confirm the desired functions and their settings; press the (2) **TEMP.** (WASHING TEMPERATURE) position to go back one step.

Acoustic signal volume can be set at four levels (0 means the sound is off; 1 means that the button sound is activated; 2 means low volume, and 3 means high volume). Choose the volume level by rotating the program selector knob (1) to the left or to the right. The lowest setting means that the acoustic signal is switched off.

## PAUSE BUTTON

The washing programme can always be stopped by pressing the (9) **START/PAUSE**  button. The washing programme is **temporarily paused** when the time remaining until programme completion is flashing on the display unit. If there is no water in the drum and water temperature is not too high, then the door will unlock after a certain period of time, and they can be opened. To resume the washing program, first close the door and then press the key (9) **START/PAUSE**  button.



## ADDING/REMOVING LAUNDRY DURING WASHING MACHINE OPERATION

After a certain period of time, the washing machine door can be opened if the water level and temperature are below a predefined threshold.

If the conditions below are met, then the electronic door lock is released and the washing machine door can be opened; **Add** will appear on the display unit:

- water temperature in the drum has to be suitable,
- water level in the drum has to be below a certain value.

In order to add or remove laundry from the washing machine during programme operation, proceed as follows:

1. Press the (9) **START/PAUSE**  button and hold it for 3 seconds.
2. If all conditions for release of electronic door lock are met, then you can open the washing machine door and add or remove laundry from the drum.
3. Close the washing machine door!
4. Press the (9) **START/PAUSE**  button.

The washing program will resume.

⚠ If you add a considerable amount of laundry during the wash, the laundry could be washed less effectively, since the washing machine initially sensed a lower weight of the load of laundry and added a smaller amount of water. Insufficient amount of water relative to the amount of laundry could also cause damage to the laundry (rubbing of dry laundry), and washing time can be longer.

⚠ Washing time will resume from the point at which the washing programme was interrupted.

## ERRORS

In case of an error or fault, the programme will be interrupted.

An acoustic signal will warn about such occurrence (see TROUBLESHOOTING AND ERROR TABLE), and the error will be indicated on the display unit (E:XX).

## POWER SUPPLY FAILURE

In case of a power supply failure, the washing programme is interrupted. When power supply is restored, the washing programme is resumed from the point at which it was interrupted. Upon completion of the washing cycle, **End** / **PF** will alternate on the display unit. This informs the user about a power supply failure and on the effect on the execution of the washing programme. Washing time will resume from the point at which the washing programme was interrupted.

## **OPENING THE DOOR (PAUSE/CANCEL/CHANGE PROGRAMME)**

Washing machine door can be opened, if the water level in the machine is low enough and if the water temperature is not excessively high.

⚡ If the washing machine is not connected to the power mains or in case of a power supply failure during the programme execution, then the washing machine door cannot be opened.

In such case, the washing machine has to be properly connected, or a service technician should be contacted.

## **DISPLAYING THE NUMBER OF COMPLETED WASH CYCLES**

(depending on the mode)

If you disconnect the appliance from the power supply, wait for 10 seconds, and then reconnect the power cord, information on the number of completed wash cycles is displayed on the display unit for 3 seconds. After 3 seconds, the appliance switches to standby mode.


# MAINTENANCE & CLEANING

⚠ Before cleaning, unplug the washing machine from the power mains.

⚡ Children should not clean the washing machine or perform maintenance tasks without proper supervision!

## CLEANING THE DISPENSER TRAY

⚡ The dispenser tray should be cleaned at least twice per month.

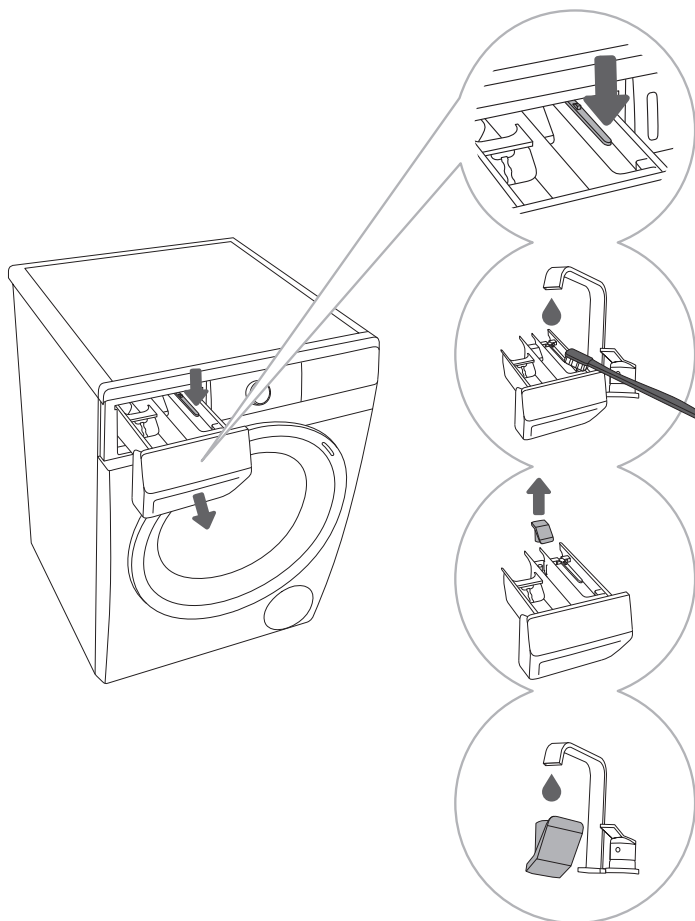

**1** To remove the dispenser tray from the housing, press the small tab.


**2** Clean the dispenser tray under running water using a brush, and dry it. Also, remove any detergent residue from the bottom of the housing.

**3** If required, remove and clean the plug cap.

**4** Clean the plug cap under running water and replace it.

⚡ Do not wash the dispenser tray in a dishwasher.

# CLEANING THE WATER SUPPLY HOSE, DETERGENT DISPENSER HOUSING, AND RUBBER DOOR GASKET

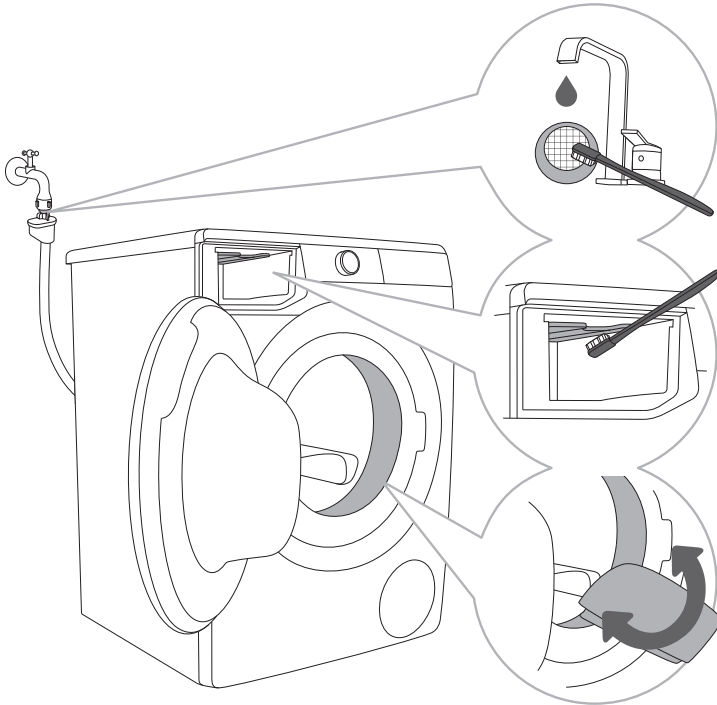


**1** Clean the net filter often under running water.

**2** Use a brush to clean the entire washing machine rinsing section, especially the nozzles on the upper side of the rinsing chamber.

**3** After every wash, wipe the rubber door seal to extend its useful life.

# CLEANING THE PUMP FILTER

⚠ During cleaning, some water may be spilled. It is therefore recommended to place an absorbent cloth on the floor.

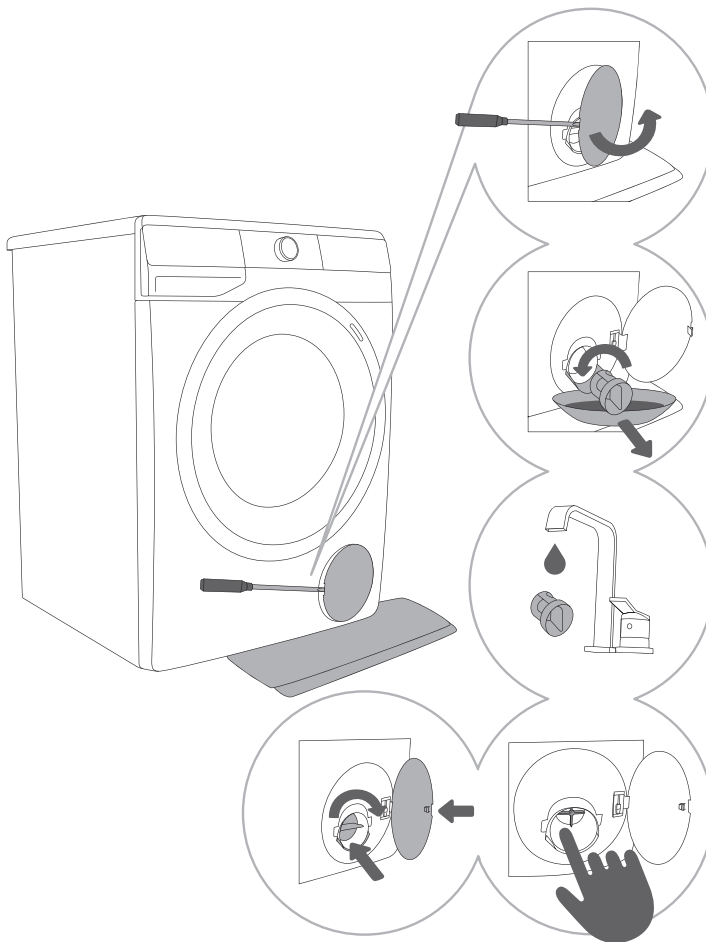

**1** Open the pump filter cap using a suitable tool (flat screwdriver or a similar tool).

**2** Pull out the water outlet funnel before cleaning the pump filter. Rotate the pump filter slowly in the counter-clockwise direction. Pull out and remove the water to slowly drain.

**3** Clean the pump filter thoroughly under running water.

**4,5** Remove all and any objects and impurities from the filter housing and the pump propeller. Replace the pump filter as shown in the figure and fasten it by rotating in the clockwise direction. For a good seal, the filter gasket surface should be clean.

⚠ The pump filter must be occasionally cleaned, especially after washing very fleecy, woolly, or very old laundry.


# CLEANING THE WASHING MACHINE EXTERIOR

**⚠ Always disconnect the washing machine from the power mains before cleaning.**

Clean the washing machine exterior and display unit using a soft damp cotton cloth and water.

**⚠ Do not use any solvents or cleaning agents that could damage the washing machine (please observe the recommendations and warnings provided by the cleaning agent manufacturers).**

**⚡ Do not clean the washing machine with a jet of water!**

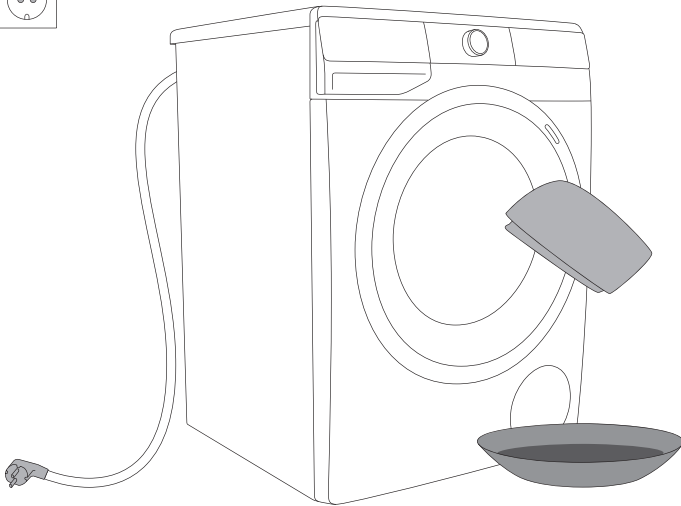



# TROUBLESHOOTING


 



## WHAT TO DO ...?


 








The washing machine shall automatically control the operation of particular functions during the washing cycle. If any irregularity is identified, this will be indicated by reporting (E:XX) on the display. The washing machine will report the error until it is switched off. Disturbances from the environment (e.g. the power grid) may result in various error reports (see TROUBLESHOOTING TABLE). In such case:





  


- Switch off the washing machine and wait for a few seconds.
- Switch on the washing machine and repeat the washing programme.
- Most errors during operation can be resolved by the user (see TROUBLESHOOTING TABLE).
- If the error persists, call an authorized service unit.
- Repairs may only be carried out by an adequately trained person.

## TROUBLESHOOTING AND ERROR TABLE


 
Errors indicated on the display unit may include the following:








 


Problem/error	Indication on the display unit and problem description	What to do?
	<b>Incorrect settings</b>	Restart the programme. If the error reoccurs, call a service technician.
	<b>Temperature sensor error</b>	Inlet water too cold. Repeat the washing programme. If the washing machine reports this error again, call a service technician.
	<b>Door lock error.</b>	Make sure the washing machine door is closed. Unplug the power cord from the outlet; then, plug the power cord back into the outlet and switch on the washing machine. If the error reoccurs, call a service technician.
	<b>Water filling error.</b>	Check the following: <ul style="list-style-type: none"><li>• is the water inlet valve open,</li><li>• is the filter on the water supply hose clean,</li><li>• is the water supply hose deformed (clipped, clogged etc.),</li><li>• is the pressure in the water mains between 0.05 and 0.8 MPa (0.5–8 bar).</li></ul> Then, press the (9) <b>START/PAUSE</b>  button to resume the programme. If the error reoccurs, call a service technician.






Problem/error	Indication on the display unit and problem description	What to do?
	<b>Water heating error</b>	Restart the programme. If the error reoccurs, call a service technician.
	<b>Water draining error</b>	Check the following: <ul style="list-style-type: none"> <li>• is the pump filter clean,</li> <li>• is the discharge hose clogged,</li> <li>• is the drain clogged,</li> <li>• if the discharge hose placed is placed below the maximum and above the minimum height (see chapter »INSTALLATION AND CONNECTION/ Connecting and securing the water discharge hose«);</li> </ul> then, press the (9) <b>START/PAUSE</b>  button again. If the error reoccurs, call a service technician.
	<b>Excessive amount of detergent</b>	Too much detergent may cause excessive foaming in the drum. See description for  .
	<b>Water leak detected in the washing machine area</b>	Turn off the washing machine and turn it back on. Inspect the exterior of the appliance. If you do not observe any leaks, you can continue to use the washing machine.
	<b>Water level sensor error</b>	Unplug the power cord from the outlet; then, plug the power cord back into the outlet and switch on the washing machine. If the error reoccurs, call a service technician.
	<b>Water overflow</b>	If there is water in the drum that exceeds a certain level, and an error is reported on the display unit, the washing program will be interrupted and water will be pumped out of the washing machine. Restart the programme. If the error reoccurs, call a service technician. If there is water in the drum that exceeds a certain level, and an error is reported on the display unit, while the washing machine continues to add water, close the water tap and call a service technician.
	<b>Excessive amount of detergent</b>	Too much detergent may cause excessive foaming in the drum. See description for  .
	<b>Motor control error</b>	Manually redistribute the laundry (stuck or tangled laundry) and repeat the washing programme.
	<b>Error while locking the door</b>	Door is closed, but it cannot be locked. Switch off the washing machine. Switch it back on and restart the washing program. If the error reoccurs, call a service technician.


Problem/error	Indication on the display unit and problem description	What to do?
 	<b>Error while unlocking the door.</b>	Door is closed, but it cannot be unlocked. Turn off the washing machine, then turn it back on. If the error reoccurs, call a service technician. To open the door, see chapter »INTERRUPTIONS AND CHANGING THE PROGRAMME/Opening the door manually«.
	<b>Electronics communication failure in the washing machine</b>	Unplug the power cord from the outlet; then, plug the power cord back into the outlet and switch on the washing machine. If the error reoccurs, call a service technician.
	<b>Electronics communication failure in the washing machine</b>	Unplug the power cord from the outlet; then, plug the power cord back into the outlet and switch on the washing machine. If the error reoccurs, call a service technician.
	<b>Warning from the system for detecting extended washing machine voltage fluctuation – 180 V &gt; U &gt; 260 V</b>	A prolonged drop of voltage do below 180 V, or voltage in excess of 260 V was detected, which can affect the washing machine operation. Check the power supply network to which your washing machine is connected.
	<b>Warning from the system for detecting incorrect power mains frequency (50/60 Hz)</b>	When the washing machine was switched on, the system detected incorrect supply power frequency, which could affect washing machine functionality. Any problems on the power network should be checked and corrected.
	<b>Appliance cannot be connected to the network</b>	The error only affects the option to remotely control (Remote control) your washing programme. it does not affect the washing process on other programmes. Call a service technician.

Warnings/information for the user, which can be indicated on the display unit, may include the following:

Warning/information	Indication on the display unit	Error cause and description, what to do?
	<b>ANTI CREASE (CREASE PREVENTION) function that you have selected as a part of the washing programme is activated and in progress.</b>	To cancel or stop the <b>ANTI CREASE (CREASE PREVENTION)</b> function, rotate the program selector knob (1) to position <b>OFF</b>  .

Warning/ information	Indication on the display unit	Error cause and description, what to do?
	<b>Water drain system alert</b> Display of warning  .	Alert about reduced water flow in the pumping stage. Check the following: <ul style="list-style-type: none"> <li>• is the pump filter clean,</li> <li>• is the discharge hose clogged,</li> <li>• is the drain clogged,</li> <li>• if the discharge hose placed is placed below the maximum and above the minimum height (see chapter »INSTALLATION AND CONNECTION/Connecting and securing the water discharge hose«).</li> </ul>
	<b>System warning to run the Drum clean (Self-cleaning programme)</b> After the washing programme is complete, the signs  and  will alternate on the display unit.	We recommend running the Drum clean (Self-cleaning programme).
	<b>Warning by the system for detecting excessive foaming during the washing programme.</b>	In case of excessive foaming in the washing machine or leak of foam through the detergent dispenser tray, the washed laundry has to be rinsed thoroughly with a large amount of water. Choose a washing programme, but do not add any detergent. <ul style="list-style-type: none"> <li>• We recommend choosing the Rinse&amp;Softening programme.</li> <li>• Decrease the amount of detergent added.</li> </ul>
	<b>Power supply failure warning (»PF«/Power Failure)</b>	The system detected a power supply failure during the washing programme progress, which affected functional execution of the washing programme. Check the power supply network to which your washing machine is connected.
	<b>Warning – U:Lo (voltage below 180 V)</b>	A prolonged drop of voltage to below 180 V was detected, which can affect the washing machine operation. Check the power supply network to which your washing machine is connected.
	<b>Unresponsive display unit and all buttons</b>	Unplug the power cord from the outlet. Check if the supply voltage is suitable for the washing machine (220–240 V); then, plug the power cord back into the outlet and switch on the washing machine.
	<b>Warning – U:Hi (voltage over 260 V)</b>	A prolonged voltage surge to over 260 V was detected, which can affect the washing machine operation. Check the power supply network to which your washing machine is connected.

Warning/ information	Indication on the display unit	Error cause and description, what to do?
	<p><b>Washing machine standing by, ready to resume the washing programme</b></p> <p>The time remaining until programme completion is alternately lit and off on the display unit.</p>	<p>To resume the washing programme, press the (9) <b>START/PAUSE</b>  button.</p>
	<p><b>Preparation for unlocking the door</b></p> <p>Signal lights will flash on the display unit.</p>	<p>Wait until the process is completed. If no error is indicated after the process, then a new programme can be started. Water has to be drained. Wait for the door to unlock.</p>
	<p><b>The appliance cannot be controlled remotely</b></p>	<p>Appliance remote control is not activated or enabled. Check if the Wi-Fi symbol  on the appliance is lit, and set the program selector knob (1) to position <b>REMOTE CONTROL (ConnectLife)</b> .</p>
	<p><b>The appliance will not connect to the Wi-Fi network</b></p>	<p>The appliance cannot find your Wi-Fi network. Check whether 2.4 GHz network is activated on your router and whether the Wi-Fi signal at the appliance is strong enough.</p>

 **Noise and vibration** – make sure the appliance is levelled using the adjustable legs and that the jam nuts are securely tightened.

Unevenly distributed laundry or lumps of laundry in the washing machine drum can cause problems such as vibration and noisy operation. The washing machine detects such problems and the UKS\* (\*stability control system) will be activated.

Smaller loads (e.g. one towel, one sweater, one bathrobe etc.) or clothes made of materials with special geometrical properties are virtually impossible to distribute evenly across the washing machine drum (slippers, large items etc.). This results in several attempts to redistribute the laundry, which in turn leads to longer programme duration. In extreme cases of unfavourable conditions, the programme can be completed without the spinning cycle.

The UKS\* (\*stability control system) allows stable operation and a longer washing machine useful life.


If the problems persist despite observing the advice above, call an authorized service technician.

# SERVICING

## Before calling a service technician

When you contact a service centre, please state your washing machine's type (1), code/ID (2), model number (3), and serial number (4).

Washing machine type, code, model, and serial number can be found on the rating (type) plate on the inner side of the washing machine door.

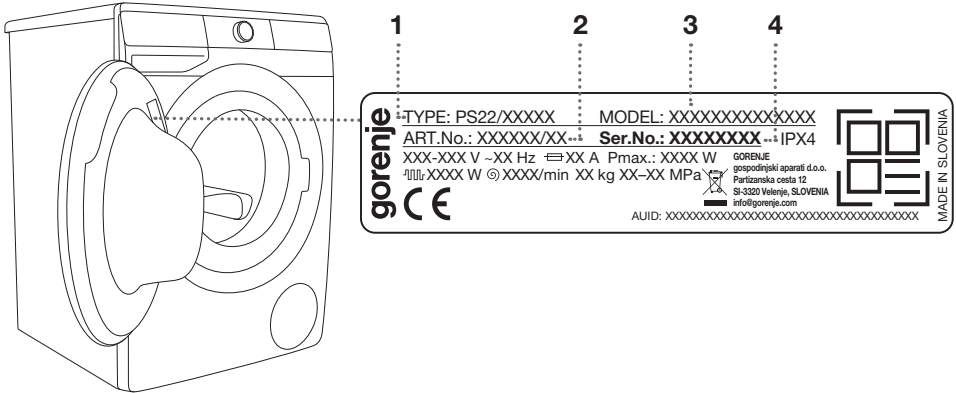

- ⚠ In case of a defect, only use approved spare parts by authorized manufacturers.
- ⚠ Repair or any warranty claim resulting from incorrect connection or use of the washing machine shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.

⚡ The warranty does not cover consumables, minor deviations in colour, increased noise that results from appliance age and which does not affect the functionality of the appliance, and aesthetic defects on components, which do not affect the functionality and safety of the appliance.

⚡ The warranty does not cover the errors or failures resulting from disturbances from the environment (lightning strike, power grid failures, natural disasters etc.).

**Additional equipment and accessories for maintenance can be viewed on our website at: [www.gorenje.com](http://www.gorenje.com)**

# RECOMMENDATIONS FOR WASHING AND ECONOMIC USE YOUR WASHING MACHINE

Wash new coloured garments separately the first time.

Wash heavily soiled laundry in smaller amounts, with more powder detergent or with a pre-wash cycle.

Apply a special stain remover on stubborn stains before the wash.

With slightly soiled laundry, we recommend a programme without a pre-wash cycle, use of shorter programmes (e.g. **FAST**) and a lower washing temperature.

If you often wash laundry at low temperatures and with liquid detergents, bacteria may spawn which can cause odour in the washing machine. To prevent such odour, we recommend occasionally running the Drum clean (Self-cleaning programme) (see PROGRAMME TABLE).

We recommend avoiding washing very small amounts of laundry as this will lead to excessive use of energy and poorer washing machine performance.

Loosen any folded laundry before putting it into the drum.  
Only use detergents for machine washing.

If water hardness exceeds 14°dH, water softener should be used. Heater damage resulting from incorrect use of water softeners shall not be covered by the warranty. Check the information on water hardness with your local water supply company or authority.

Use of chlorine-based bleaches is not recommended as they can damage the heater.

Do not add hardened lumps of powder detergent into the detergent dispenser as this may clog the piping in the washing machine.

When using thick liquid laundry care products, we recommend diluting them with water to prevent clogging the dispenser tray drain.

Liquid detergents are intended for washing programmes without a prewash cycle.

At higher spinning rates, there will be less residual moisture in the laundry. As a result, drying in a tumble dryer will be more economical and faster.

Water hardness	Hardness levels			
	°dH (°N)	m mol/l	°fH (°F)	p.p.m.
1 – soft	< 8,4	< 1,5	< 15	< 150
2 – normal	8,4–14	1,5–2,5	15–25	150–250
3 – hard	> 14	> 2,5	> 25	> 250

☼ Check the information on water hardness with your local water supply company or authority.

**1** A separator/divider tab is supplied with the washing machine, which allows adding liquid detergent to the main wash compartment ☺ (left compartment).

**2** Powder and liquid detergent level indicator.

**3** When using powder detergent, the separator/divider tab should be lifted.

**4** When using liquid detergent, the separator/divider tab should be lowered.

Symbols of detergent dispenser compartments	
☺	prewash
☺	main wash
☼	softening



☼ We recommend adding powder detergent immediately before the washing cycle. If you add it sooner, make sure the detergent compartment in the dispenser tray is completely dry before adding the powder detergent: otherwise, the powder detergent may cake before the start of the washing process.

☼ Pour the conditioner into the dispenser tray, into the compartment with the symbol ☼. Observe the recommendation on the conditioner packaging.

☼ Do not fill the conditioner compartment over the max. indication (maximum indicated level). Otherwise, the conditioner will be added to the laundry too soon, leading to poorer washing effect.

# PRODUCT INFORMATION

## PRODUCT INFORMATION SHEET According to EU-Regulation No. 2019/2014

(depending on the model)

<b>Supplier's name or trade mark:</b>					
<b>Supplier's adress (°):</b>					
<b>Model identifier:</b>					
<b>General product parameters:</b>					
Parameter	Value		Parameter	Value	
Rated capacity (°) (kg)	x,x		Dimensions in cm	Height	x
				Width	x
				Depth	x
EEI <sub>w</sub> (°)	x,x		Energy efficiency class (°)	[A/B/C/D/E/F/G] (°)	
Washing efficiency index (°)	x,xxx		Rinsing effectiveness (g/kg) (°)	x,x	
Energy consumption in kWh per cycle, based on the »eco 40-60« programme. Actual energy consumption will depend on how the appliance is used.	x,xxx		Water consumption in litre per cycle, based on the »eco 40-60« programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	x	
Maximum temperature inside the treated textile (°) (°C)	Rated capacity	x	Remaining moisture content (°) (%)	x,x	
	Half	x			
	Quarter	x			
Spin speed (°) (rpm)	Rated capacity	x	Spin-drying efficiency class (°)	[A/B/C/D/E/F/G] (°)	
	Half	x			
	Quarter	x			
Programme duration (°) (h:min)	Rated capacity	x:xx	Type	[built-in/ free standing]	
	Half	x:xx			
	Quarter	x:xx			
Airborne acoustical noise emissions in the spinning phase (°) (dB(A) re 1 pW)	x		Airborne acoustical noise emissions class (°) (spinning phase)	[A/B/C/D] (°)	
Off-mode (W)	x,xx		Standby mode (W)	x,xx	
Delay start (W) (if applicable)	x,xx		Networked standby (W) (if applicable)	x,xx	

<b>Minimum duration of the guarantee offered by the supplier <sup>(b)</sup>:</b>	
<b>This product has been designed to release silver ions during the washing cycle</b>	[YES/NO]

**Additional information:**

Weblink to the supplier's website, where the information from point 9 Anex II to Commition Regulation (EU) 2019/2023 <sup>(a)</sup> <sup>(b)</sup> is found:

- <sup>(a)</sup> for the »eco 40-60« programme.
- <sup>(b)</sup> changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
- <sup>(c)</sup> if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

## LOW STANDBY MODE

If you do not run any program or choose any settings after switching on the washing machine (program selector knob (1)), the display unit will be switched off after 5 minutes and switched to stand-by mode in order to save energy.

The display unit can be reactivated by rotating the program selector knob (1).

If you do not do anything for 5 minutes after the end of a programme, the display unit will be switched off to save power.

$P_o$ = weighted power when off [W]	< 0,5
$P_l$ = weighted power when in standby [W]	< 0,5
$T_l$ = standby time [min]	5,00

 Appliance with a wireless connection uses less than 2 W of electric energy in standby mode.

# DISPOSAL

**Packaging** is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.



**The symbol** on the product or its packaging indicates that the product should not be treated as normal household waste. Take the product to an authorized collection centre for waste electric and electronic equipment processing.

When **disposing** of the washing machine at the end of its useful life, remove all power cords, and destroy the door latch and switch to prevent the door from locking or latching (child safety).

Correct **disposal** of the product will help prevent any negative effects on the environment and health of people, which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

*We reserve the right to any changes and errors in the instructions for use.*







PS22 E SUPERIOR ENTRY  
Wi-Fi AIRDRY



885666

en (04-23)