 


EPSON

Home Projector

EH-TW850

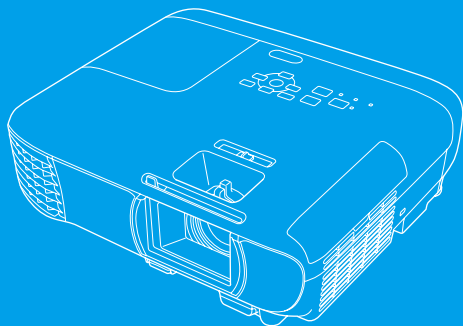

EN Quick Start Guide

DE Kurzanleitung

FR Guide de démarrage rapide

IT Guida di avvio rapido

ES Guía de inicio rápido

PT Guia de Referência Rápida

NL Introductiehandleiding

DA Introduktion

FI Pika-aloitusopas

NO Hurtigveiledning

SV Snabbstartsguide

CS Úvodní příručka

HU Bevezetés

PL Przewodnik szybkiego startu

SK Stručná příručka

BG Ръководство за бърз старт

RO Ghid de pornire rapidă

EL Οδηγός γρήγορης εκκίνησης

TR Hızlı Başlangıç Kılavuzu

SL Priročnik za hitri zagon

HR Kratke upute

CA Guia d'inici ràpid

RU Руководство по быстрой установке

UK Коротка інструкція "Початок роботи"

KK Кыска іске қосу нұсқаулығы

KO 빠른 시작 가이드

ID Panduan Ringkas

AR دليل البداية السريعة

FA راهنمای سریع برای شروع بکار

 
 
 
 
 
ZHS 设定手册

 
 
 
 
ZHT 設定説明書

TH คู่มือการใช้งานอย่างง่าย







VI Hướng dẫn khởi động nhanh





1

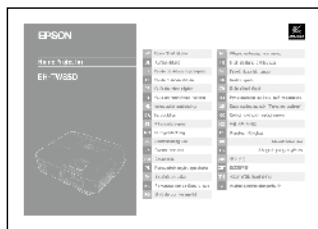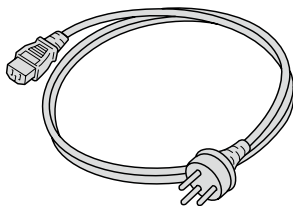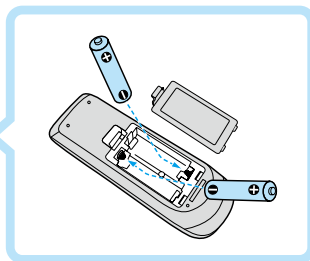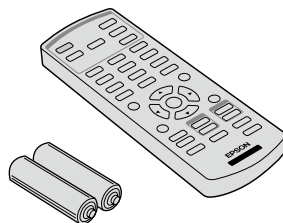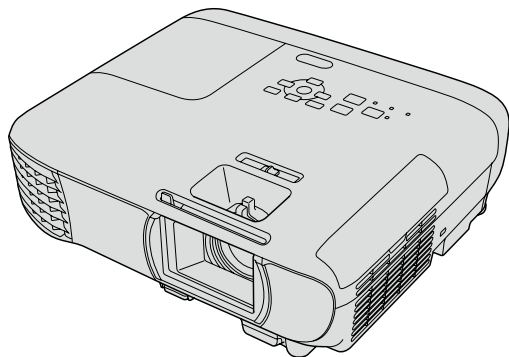

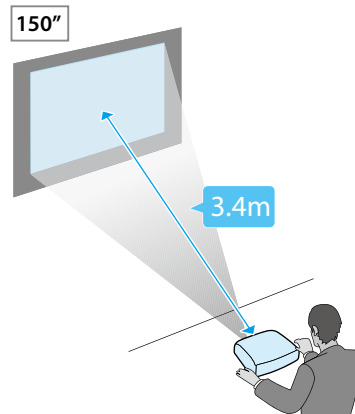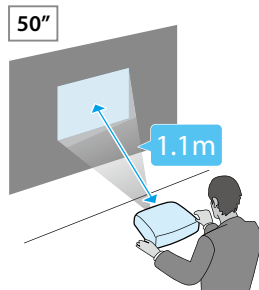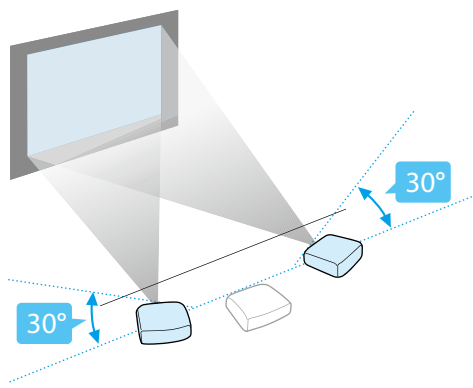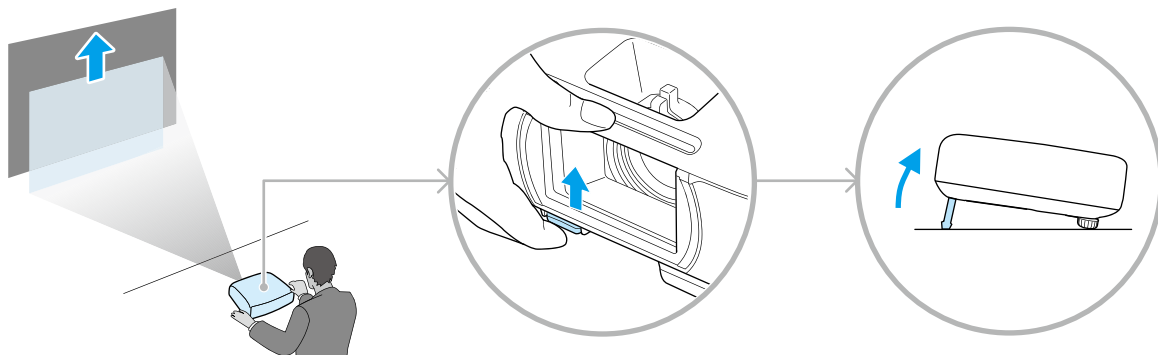



3

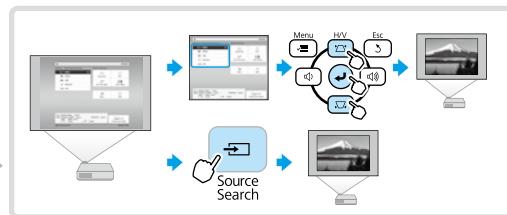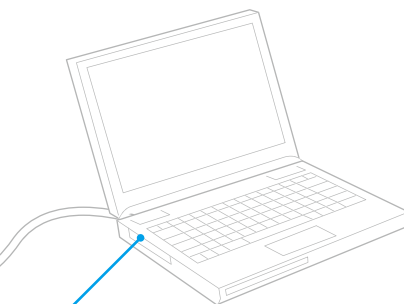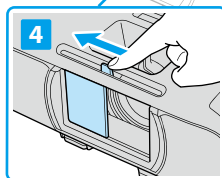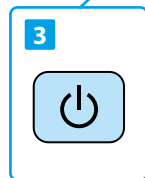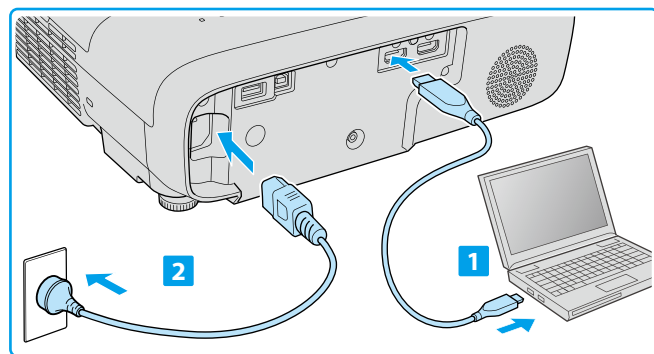      

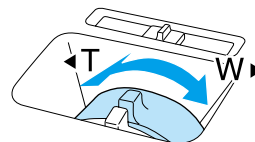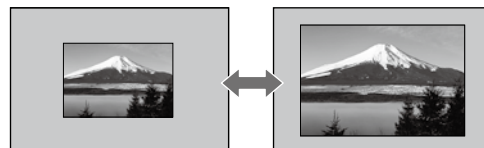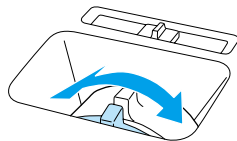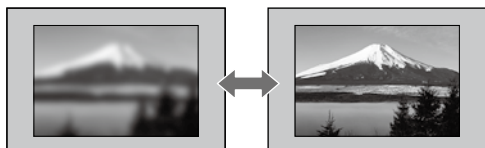    





5 Sec.

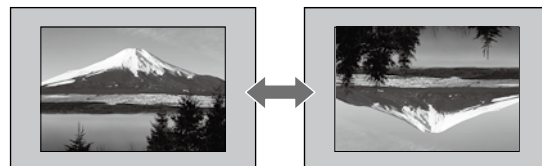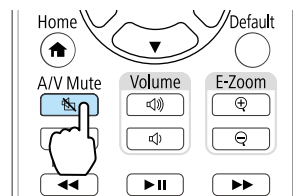  



5

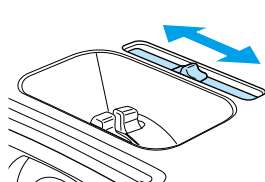 








1

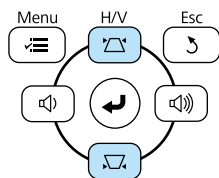 


2

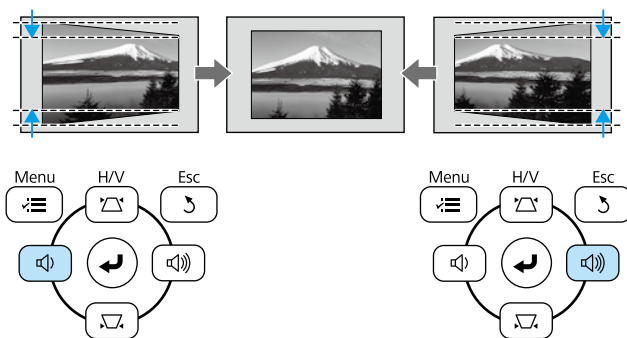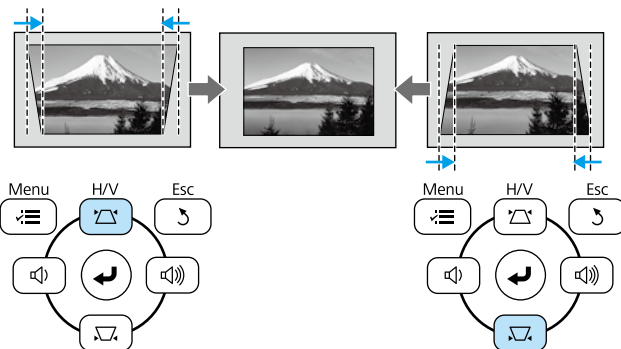  

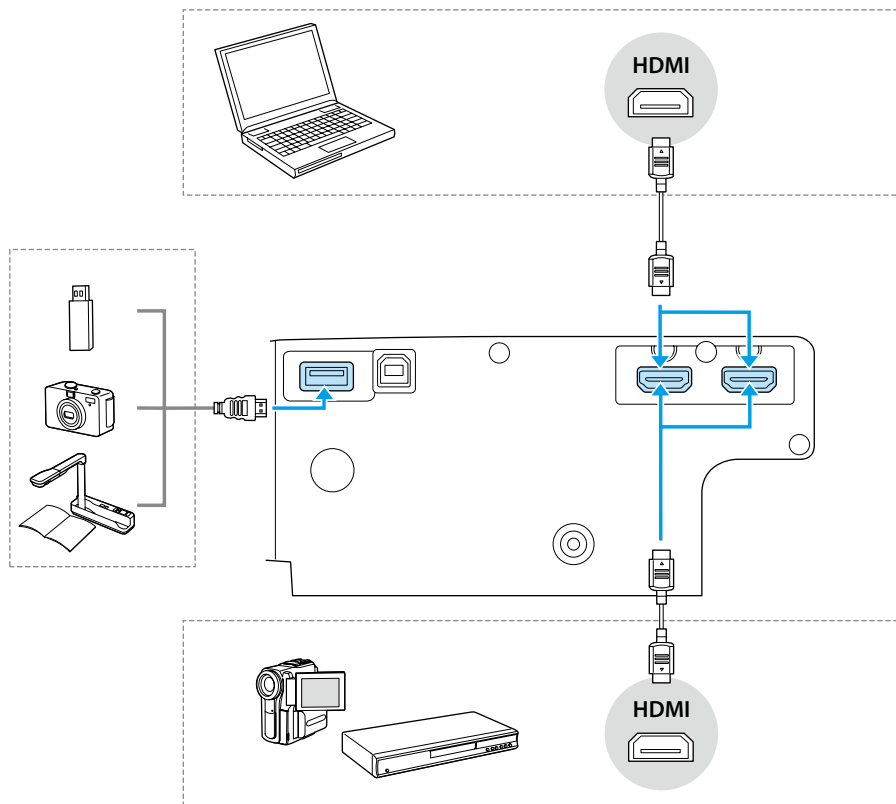 

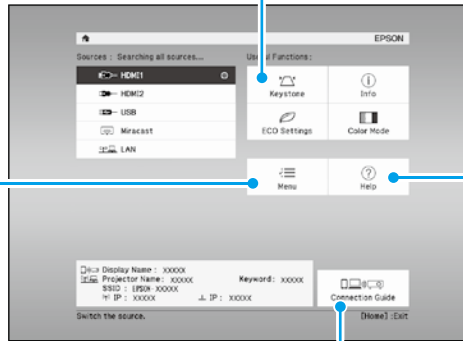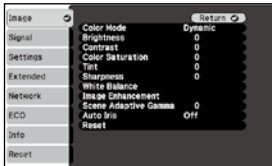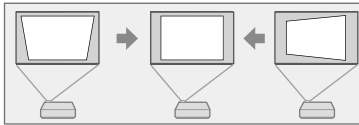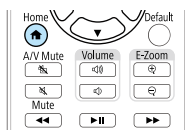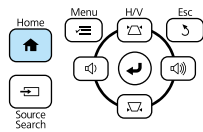      

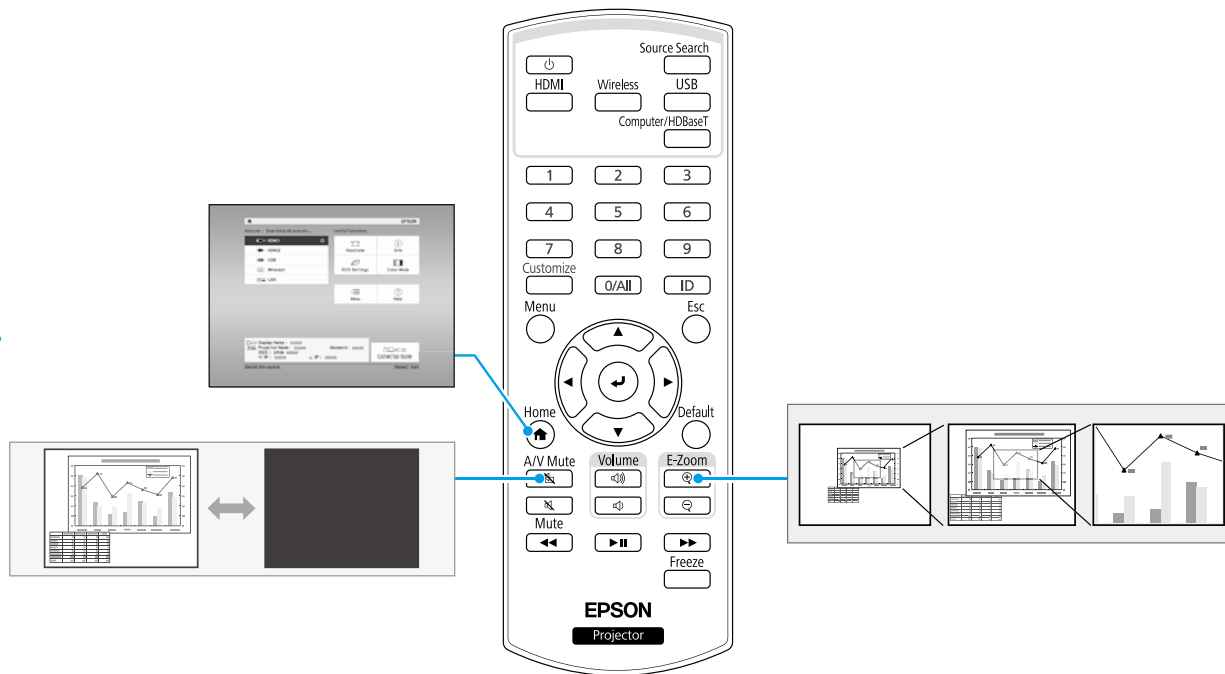 

epson.sn

