

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your projector. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

"HDMI™, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."



Information for your safety and comfort

Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

Turning the product off before cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Caution for plug as disconnecting device

Observe the following guidelines when connecting and disconnecting power to the external power supply unit:

- Install the power supply unit before connecting the power cord to the AC power outlet.
- Unplug the power cord before removing the power supply unit from the projector.
- If the system has multiple sources of power, disconnect power from the system by unplugging all power cords from the power supplies.

Caution for Accessibility

Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet.



Warnings!

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface.
- This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.
- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.

- Never use it under sporting, exercising, or any vibrating environment which will probably cause unexpected short current or damage rotor devices, lamp.

Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.
- This product's AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.



.....

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.



.....

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

- Use the product only with the supplied power supply cord set. If you need to replace the power cord set, make sure that the new power cord meets the following requirements: detachable type, UL listed/CSA certified/CCC certified, VDE approved or its equivalent, 4.5 meters (15 feet) maximum length.

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- the power cord or plug is damaged, cut or frayed
- liquid was spilled into the product
- the product was exposed to rain or water
- the product has been dropped or the case has been damaged
- the product exhibits a distinct change in performance, indicating a need for service
- the product does not operate normally after following the operating instructions



.....

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.



.....

Warning! For safety reasons, do not use non-compliant parts when adding or changing components. Consult your reseller for purchase options.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Additional safety information

- Do not look into the projector's lens when the lamp is on. The bright may hurt your eyes.
- Turn on the projector first and then signal sources
- Do not place the product in following environments:
 - Space that is poorly ventilated or confined. At least 50cm clearance from walls and free flow of air around the projector is necessary.
 - Locations where temperatures may become excessively high, such as inside of a car with all windows rolled up.
 - Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shortening the life span and darkening the image.
 - Locations near fire alarms.
 - Locations with an ambient temperature above 40 °C/104 °F.
 - Locations where the altitudes are higher than 10000 feet.
- Unplug immediately if there is something wrong with your projector. Do not operate if smoke, strange noise or odor comes out of your projector. It might cause fire or electric shock. In this case, unplug immediately and contact your dealer.
- Do not keep using this product to break or drop it. In this case contact your dealer for inspection.
- Do not face the projector lens to the sun. It can lead to fire.
- When switching the projector off, suggest to ensure the projector completes its cooling cycle before disconnecting power.
- Do not frequently turn off the main power abruptly or unplug the projector during operation. The best way is to wait for the fan to turn off

before turning main power off.

- Do not touch air outlet grille and bottom plate which becomes hot.
- Clean the air filter frequently if have. The temperature inside may rise and cause damage when the filter/ventilation slots clogged with dirt or dust.
- Do not look into the air outlet grille when projector is operating. It may hurt your eyes.
- Always open the lens shutter or remove the lens cap when the projector is on.
- Do not block the projector lens with any object when the projector is under operation as this could cause the object to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press **HIDE** on the remote control.
- The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.
- Do not operate lamps beyond the rated lamp life. It could cause it to break on rare occasions.
- Never replace the lamp assembly or any electronic components unless the projector is unplugged.
- The product will detect the life of the lamp itself. Please be sure to change the lamp when is showing warning message.
- When changing the lamp, please allow unit to cool down, and follow all changing instructions.
- Reset the "Lamp Hour Reset" function from the Onscreen display "Management" menu after replacing the lamp module.
- Do not attempt to disassemble this projector. There are dangerous high voltages inside which may hurt you. The only user serviceable part is the lamp which has its own removable cover. Refer servicing only to suitable qualified professional service personnel.
- Do not stand the projector on end vertically. It may cause the projector to fall over, causing injury or damage.
- This product is capable of displaying inverted images for ceiling mount installation. Only use acer ceiling mount kit for mounting the projector and ensure it is securely installed.
- The projector should be placed in a horizontal way by means of desktop or ceiling mount mode only, and its tilt angles should not exceed 6 degrees, otherwise it would cause dramatical decrease of lamp life or severe safety concern of system malfunction.



Caution for Listening

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surroundings.
- Decrease the volume if you can't hear people speaking near you.

Disposal instructions


Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit

<http://www.acer-group.com/public/Sustainability/sustainability01.htm>



Mercury advisory

For projectors or electronic products containing an LCD/CRT monitor or display:

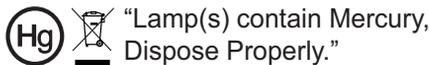


Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org



Do not stare into the beam, RG2

"As with any bright source, do not stare into the direct beam, RG2 IEC 62471-5:2015"

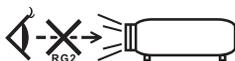

First things first

Usage Notes

Do:

- Turn off the product before cleaning.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

Don't:

- Block the slots and openings on the unit provided for ventilation.
- Use abrasive cleaners, waxes or solvents to clean the unit.
- Use under the following conditions:
 - In extremely hot, cold or humid environments.
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance that generates a strong magnetic field.
 - Place In direct sunlight.

Precautions

Follow all warnings, precautions and maintenance as recommended in this user's guide to maximize the life of your unit.



Warning:

- Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Please do not open or disassemble the product as this may cause electric shock.
- When changing the lamp, please allow unit to cool down, and follow all changing instructions.
- This product will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Reset the "Lamp Hour Reset" function from the Onscreen display "Management" menu after replacing the lamp module.
- When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power.
- Turn on the projector first and then the signal sources.
- Do not use lens cap when projector is in operation.
- When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, contact your local dealer or Acer service center.

Cleaning the lens

- Before cleaning the lens, be sure to turn off the projector and unplug the power cord to allow the projector to cool down for at least 30 minutes.
- Use a compressed air tank to remove the dust.
- Use a special cloth for cleaning lens and gently wipe the lens. Do not touch the lens with your fingers.
- Do not use alkaline/acid detergents or volatile solvents such as alcohol for cleaning lens. If the lens is damaged due to the cleaning process, it is not covered by the warranty.




Warning:

- Do not use a spray containing flammable gases to remove dust or dirt from the lens. This may cause a fire due to excessive heat inside the projector.
- Do not clean the lens if the projector is warming up as this may cause the lens' surface film to peel off.
- Do not wipe or tap the lens with a hard object.

Spec label location

- Spec label location are placed the following locations:

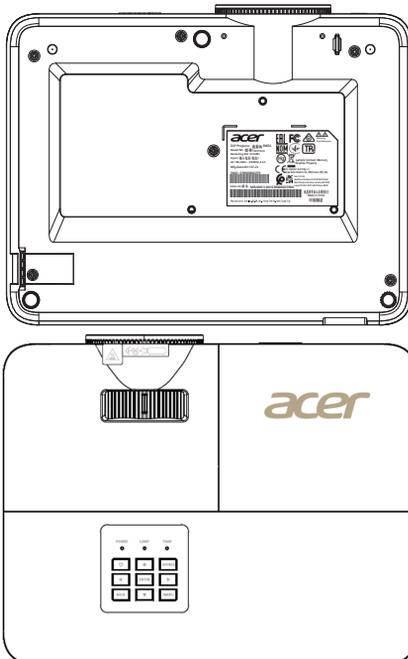

| | |
|--|------|
| Information for your safety and comfort | iii |
| First things first | viii |
| Usage Notes | viii |
| Precautions | viii |
| Cleaning the lens | ix |
| Spec label location | ix |
| Introduction | 1 |
| Product Features | 1 |
| Package Overview | 2 |
| Projector Overview | 4 |
| Projector Outlook | 4 |
| Control Panel | 7 |
| Remote Control Layout | 8 |
| Getting Started | 12 |
| Connecting the Projector | 12 |
| Turning the Projector On/Off | 14 |
| Turning on the Projector | 14 |
| Turning the projector off | 15 |
| Adjusting the Projected Image | 16 |
| Adjusting the Height of Projected Image | 16 |
| How to get a preferred image size by adjusting distance and zoom | 17 |
| User Controls | 30 |
| Installation menu | 30 |
| Onscreen Display (OSD) Menus | 31 |
| Color | 32 |
| Image | 36 |
| Setting | 39 |
| Management | 43 |
| Audio | 45 |
| 3D | 45 |
| Language | 46 |

Contents

| | |
|---|----|
| Appendices | 47 |
| Troubleshooting | 47 |
| LED & Alarm Definition Listing | 52 |
| Screen capture by PC tool | 53 |
| Replacing the Lamp (For service personnel only) | 55 |
| Ceiling Mount Installation | 56 |
| Specifications | 59 |
| Compatibility modes | 88 |
| Regulations and safety notices | 93 |

Introduction

Product Features

This product is a single-chip DLP® projector. Outstanding features include:

- DLP® technology
- Enables projecting 3D content via DLP Link Technology: Blue-Ray 3D supported
- Acer ColorBoost technology delivers nature's true colors for vivid, life-like images
- High brightness and contrast ratio
- Acer LumiSense technology can intelligently optimize the projection images to the most comfortable visual lumens automatically based on display content.
- Versatile display modes enable optimum performance in any situation
- NTSC / PAL / SECAM compatible and HDTV (480i/p, 576i/p, 720p, 1080i/p) supported
- Lower power consumption and economy (ECO) mode extend lamp life
- Acer EcoProjeciton Technology delivers Intelligent power management approach and physical efficiency improvement
- Smart detection delivers quick, intelligent source detection
- Multi-language onscreen display (OSD) menus
- Manual focus/zoom projection lens
- 0.8 ~ 2X digital zoom and pan move function
- Microsoft® Windows® 2000, XP, Vista®, Windows 7, Windows 8.1, Windows 10, Macintosh® OS compliant
- Support LumiSense
- Support HDR format under 1080p resolution
- Support 1080P/120Hz
- Support 8.3ms low input lag
- Support Acer Display Widget



.....
Note: Functions vary depending on model definition.

Package Overview


This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if any thing is missing.



Projector



Power cord

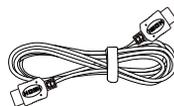

HDMI cable (option)



VGA cable (option)




Security card
(option)




Quick start guide



Carrying case
(option)

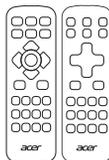


Remote control

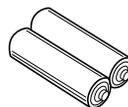

AAA battery x2
(option)




Quick start guide
(for multi-media and
wireless functions)

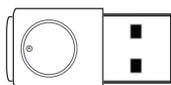


WirelessProjection-Kit
(option)



Wireless receiver cable
(EZC-CS2)
(option)

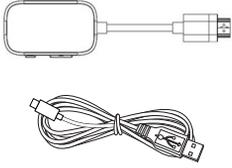

Wireless transmitter dongle
(H-1)
(Option)

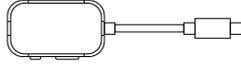

Wireless transmitter dongle
(C-1)
(Option)



(FSC-BP101Y)
(Option)

* This device needs to be used together with ProjLink app. Please see the next page for details



Note 1: When projecting a 4K2K/60Hz signal, use an HDMI Premium certified 4K2K/60Hz cable supporting 18Gbps bandwidth.



Trust the cable with the label

Note 2: Bluetooth dongle FSC-BP101Y is designed to work exclusively with the ProjLink app.

Please download and install the app from App Store or Google Play to ensure full functionality. Also, See OSD menus(setting->Bluetooth) for more detail.



Mobile System Requirements


Android: Requires Android version 12 or later

iOS: Requires iOS version 17 or later

Projector Overview



Projector Outlook

Front / upper side

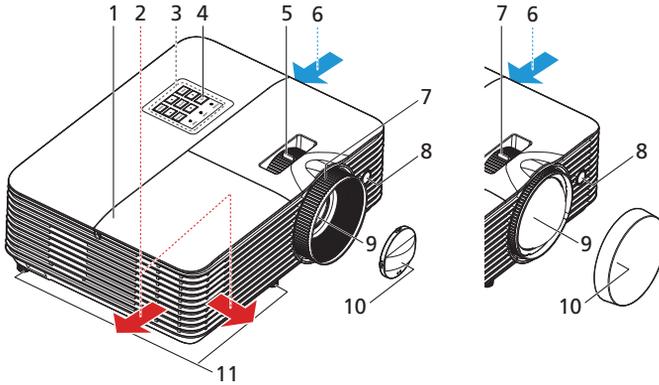


| # | Description | # | Description |
|---|---------------|----|-------------------------|
| 1 | Lamp cover | 7 | Focus ring |
| 2 | Air outlet | 8 | Remote control receiver |
| 3 | Control panel | 9 | Projection lens |
| 4 | Power button | 10 | Lens cap |
| 5 | Zoom ring | 11 | Tilt adjusting wheels |
| 6 | Air inlet | | |


Rear side (Type A)

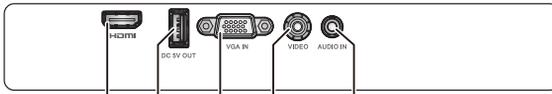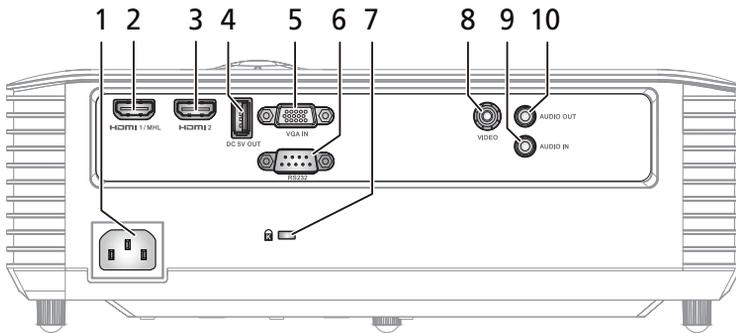

3 4 5 8 9

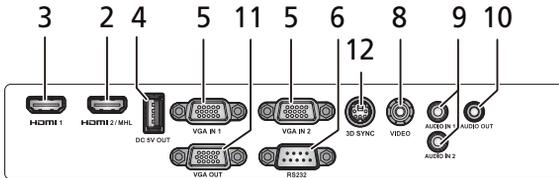

3 2 4 5 11 5 6 8 9 10 12

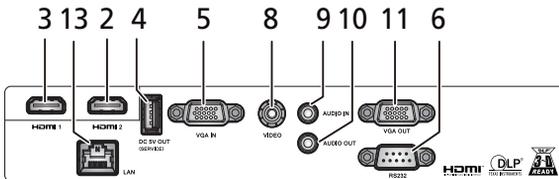


3 13 2 4 5 8 9 10 11 6

| # | Description | # | Description |
|---|---|----|---|
| 1 | Power socket | 8 | Composite video input connector |
| 2 | HDMI connector | 9 | Audio in connector |
| 3 | HDMI connector | 10 | Audio out connector |
| 4 | DC 5V output (service) | 11 | Monitor loop-through output connector (for VGA IN 1, VGA IN only) |
| 5 | PC analog signal/HDTV/component video input connector | 12 | 3D SYNC connector |
| 6 | RS232 connector | 13 | LAN (RJ45) connector |
| 7 | Kensington™ lock port | | |



Note: Functions vary depending on model definition.

Rear side (Type B)

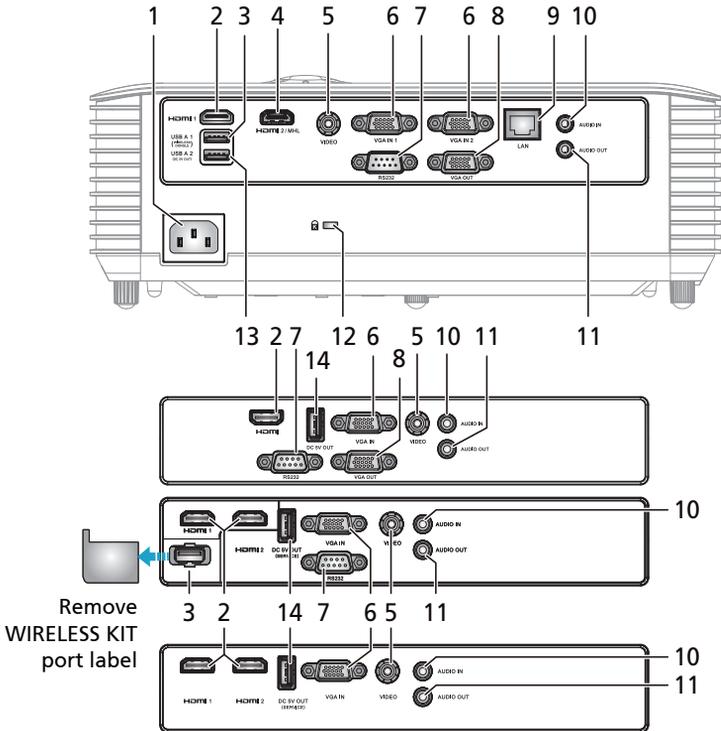


| # | Description | # | Description |
|---|---|----|--|
| 1 | Power socket | 8 | Monitor loop-through output connector (for VGA IN 1, VGA IN only) |
| 2 | HDMI connector | 9 | LAN (RJ45 Port for 10/100M Ethernet) |
| 3 | USB connector (for wifi dongle) | 10 | Audio in connector |
| 4 | HDMI connector | 11 | Audio out connector |
| 5 | Composite video input connector | 12 | Kensington™ lock port |
| 6 | PC analog signal/HDTV/component video input connector | 13 | USB connector (device charge and USB displays and support mouse page up/down and firmware upgrade functions) |
| 7 | RS232 connector | 14 | 5V DC output connector (device charge and support mouse page up/down and firmware upgrade functions) |



Note: Functions vary depending on model definition.

Control Panel

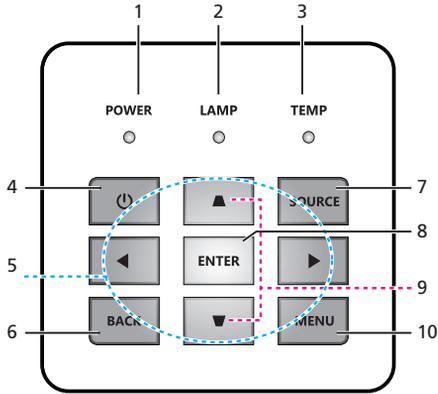


| # | Icon | Function | Description |
|----|--------|------------------------------|---|
| 1 | POWER | POWER | Power Indicator LED |
| 2 | LAMP | LAMP | Lamp Indicator LED |
| 3 | TEMP | TEMP | Temp Indicator LED |
| 4 | | POWER | See the contents in "Turning the Projector On/Off" section. |
| 5 | | Four directional select keys | Use ▲▼▶◀ to select items or make adjustments to your selection. |
| 6 | BACK | BACK | Returns to the previous operation. |
| 7 | SOURCE | SOURCE | Changes the active source. |
| 8 | ENTER | ENTER | Pop-up Manual Focus menu to adjust the image focus by Enter key. Confirm your selection of items. |
| 9 | | KEYSTONE | Adjusts the image to compensate for distortion caused by tilting the projector. |
| 10 | MENU | MENU | Press " MENU " to launch the Onscreen display (OSD) menu or exit the OSD menu. |



Note: Functions vary depending on model definition.

Remote Control Layout

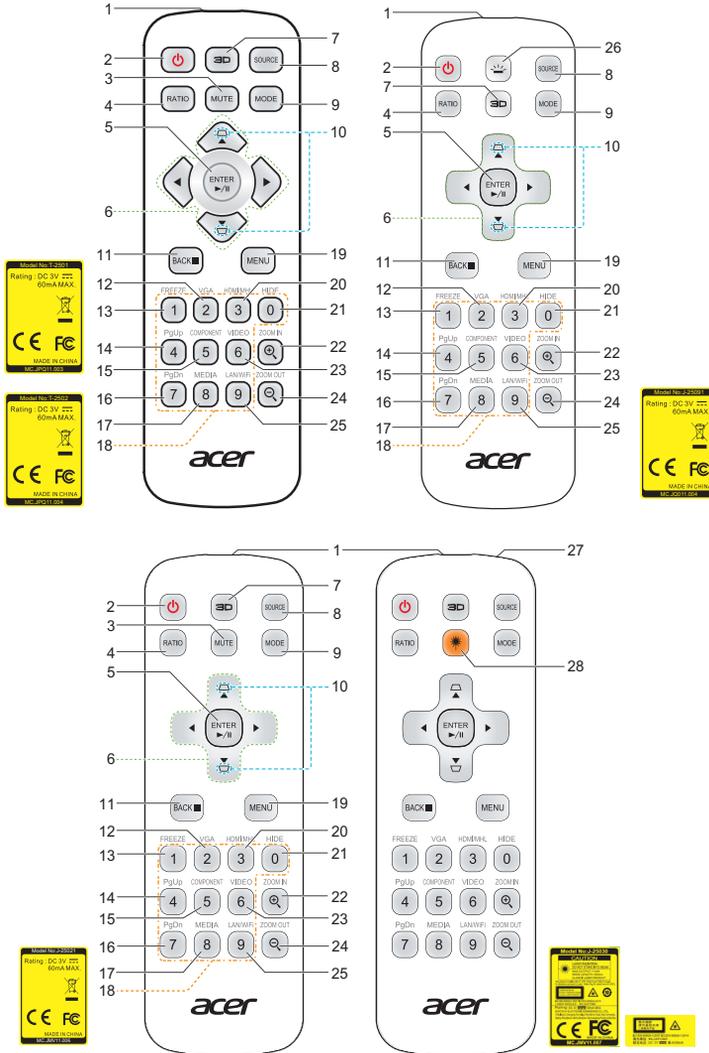

| # | Icon | Function | Description |
|---|---|----------------------|--|
| 1 | | Infrared transmitter | Sends signals to the projector. |
| 2 |  | POWER | Refer to the "Turning the Projector On/Off" section. |

| # | Icon | Function | Description |
|----|---|------------------------------|--|
| 3 |  | MUTE | To turn on/off the volume. |
| 4 |  | RATIO | To choose the desired aspect ratio. |
| 5 |  | Select/Enter | Pop-up Manual Focus menu to adjust the image focus by Enter key. Confirm your selection of items. |
| | | Play/Pause | Press to begin/pause playback. |
| 6 |  | Four directional select keys | Use up, down, left, right buttons to select items or make adjustments to your selection. |
| 7 |  | 3D | Press "3D" to select 3D models. |
| 8 |  | SOURCE | Changes the active source. |
| 9 |  | MODE | Chooses a display mode. |
| 10 |  | KEYSTONE | Adjusts the image to compensate for distortion caused by tilting the projector. |
| 11 |  | BACK | Returns to the previous operation. |
| | | STOP | Press to stop playback. |
| 12 |  | VGA | Press "VGA" to change source to the VGA connector. This connector supports analog RGB, YPbPr (480p/576p/720p/1080i), YCbCr (480i/576i) and RGBsync. |
| 13 |  | FREEZE | To pause the screen image. |
| 14 |  | PgUp | For computer mode only. Use this button to select the previous page. This function is only available when USB Ctrl connector (mini type B) is connected to a computer via a USB cable. |
| 15 |  | COMPONENT | No function. |
| 16 |  | PgDn | For computer mode only. Use this button to select the next page. This function is only available when USB Ctrl connector (mini type B) is connected to a computer via a USB cable. |
| 17 |  | MEDIA | Press "MEDIA" to return to the home page of media mode. |
| 18 |  | KeyPad 0~9 | Press "0~9" to input a password in the "Security" OSD. |
| 19 |  | MENU | Press "MENU" to launch the Onscreen display (OSD) menu or exit the OSD menu. |
| 20 |  | HDMI™/MHL | To change source to HDMI/MHL. |
| 21 |  | HIDE | Momentarily turns off the video. Press "HIDE" to hide the image, press again to display the image. |

| # | Icon | Function | Description |
|----|--|---------------|---|
| 22 |  ZOOM IN | ZOOM IN | Zooms the projector display in. |
| 23 |  VIDEO | VIDEO | To change source to COMPOSITE VIDEO. |
| 24 |  ZOOM OUT | ZOOM OUT | Zooms the projector display out. |
| 25 |  LAN/WiFi | LAN/WiFi | No function. |
| 26 |  | Backlight | Remote backlight. |
| 27 | | Laser pointer | Aim the remote at the viewing screen. |
| 28 | | Laser button | Aim the remote at the viewing screen, press and hold this button to activate the laser pointer. |



Note: Functions vary depending on model definition.

Safety precautions and maintenance


Caution (Applicable models with battery)

- Replacement of a battery with an incorrect type that can defeat a safeguard;
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Risk of fire or explosion if the battery is replaced by an incorrect type
- Do not ingest battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

To install or replace batteries:

- 1 Press and then slide the cover to open it.
- 2 Align the batteries according to the (+) and (-) indications inside the battery compartment.

3 Replace the cover.

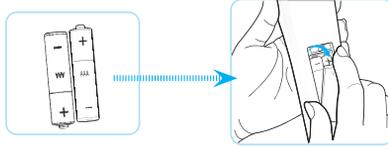


Note: The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- Place "AAA" batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- Do not mix battery types.
- Do not combine new batteries with used ones. It causes shorter life or leakage of batteries.
- Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.
- If you do not intend to use the remote control for a long period, remove the batteries.

Getting Started

Connecting the Projector

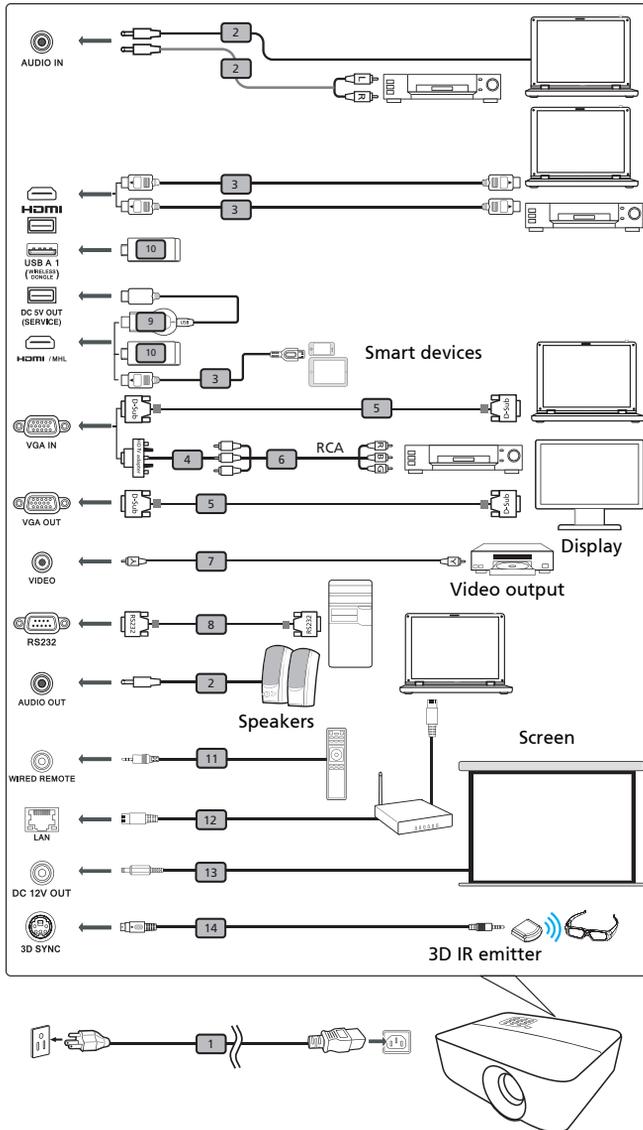

| # | Description | # | Description |
|---|-------------------------------|----|----------------------|
| 1 | Power cord | 8 | RS232 cable |
| 2 | Audio cable | 9 | WirelessHD dongle |
| 3 | HDMI cable | 10 | Wireless dongle |
| 4 | VGA to component/HDTV adapter | 11 | Wired remote control |
| 5 | VGA cable | 12 | LAN cable |
| 6 | 3 RCA component cable | 13 | 12V DC cable |
| 7 | Composite video cable | 14 | 3D SYNC cable |



.....

Note 1: To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with the projector.

Note 2: Functions vary depending on model definition

Note 3: USB cable needs powered extender if the length is over 5 m.

Note 4: USB DC 5V out connector support 5V power output for power bank charging.

Note 5: VGA OUT loops through for VGA IN 1 only.

Note 6: Compatible HDMI dongles: WirelessHD (MWIHD1), MWA3, Chromecast™.

Turning the Projector On/Off

Turning on the Projector

- 1 Ensure that the power cord and signal cable are securely connected. The Power indicator LED will flash red.
- 2 Turn on the projector by pressing "Power" button on the control panel or remote control, and the Power indicator LED will turn blue.
- 3 Turn on your source (computer, notebook, video player ,etc.). The projector will detect your source automatically.
 - If the screen displays "Lock" and "Source" icons, it means the projector is locked onto a specific source type and there is no such type of input signal detected.
 - If the screen displays "No Signal", please make sure the signal cables are securely connected or press source direct key.
 - If you connect to multiple sources at the same time, use the "Source" button on either control panel or the remote control or direct source key on the remote control to switch between inputs.

Turning the projector off

- 1 To turn the projector off, press and hold the power button. This message appears: **"Please press the power button again to complete the shutdown process."** Press the power button again.
- 2 The LED power indicator will turn RED and blink rapidly after the projector is turned off, and the fan(s) will continue to operate for about 2 minutes to ensure that the system cools properly. (only supported under "Instant Resume" mode)
- 3 As long as the power cord remains plugged in, you can press the power button to turn the projector immediately back on anytime during the 2-minute shutdown process. (only supported under "Instant Resume" mode)
- 4 Once the system has finished cooling, the LED power indicator will stop blinking and turn solid red to indicate standby mode.
- 5 It is now safe to unplug the power cord.



Warning indicators:

- **"Projector Overheated. Lamp will automatically turn off soon."**
This onscreen message indicates that the projector has overheated. The lamp will automatically turn off, the projector will automatically shut down, and the LED temp indicator will turn solid red. Contact your local dealer or service center.
- **"Fan failed. Lamp will automatically turn off soon."**
This onscreen message indicates that the fan has failed. The lamp will automatically turn off, the projector will automatically shut down, and the LED temp indicator will blink. Contact your local dealer or service center.



Note 1: Whenever the projector automatically shuts down and the LED lamp indicator turns solid red, contact your local reseller or service center.

Note 2: Functions vary depending on model definition.

Attention! The projector will enter a two minute cool down period to ensure continued optimal lamp operation.

Attention! Please do not turn off projector within 1 minute after power on.


Adjusting the Projected Image

Adjusting the Height of Projected Image

The projector is equipped with elevator feet for adjusting the height of image.

To raise/lower the image:

Use Tilt adjusting wheel to fine-tune the display angle.

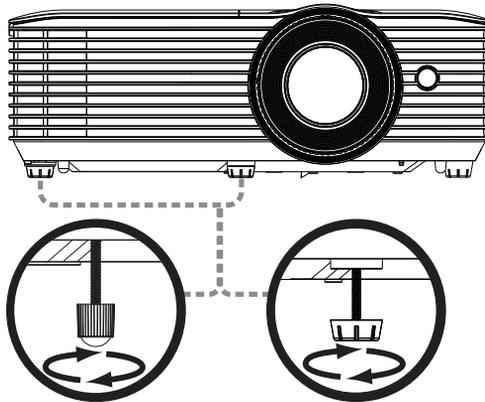


Tilt adjusting wheel

How to get a preferred image size by adjusting distance and zoom

The table below shows how to achieve a desired image size by adjusting either the position or the zoom ring.

- SVGA/XGA series

To obtain an image size of 60" set the projector at a distance 2.4 m and 2.6 m from the screen.

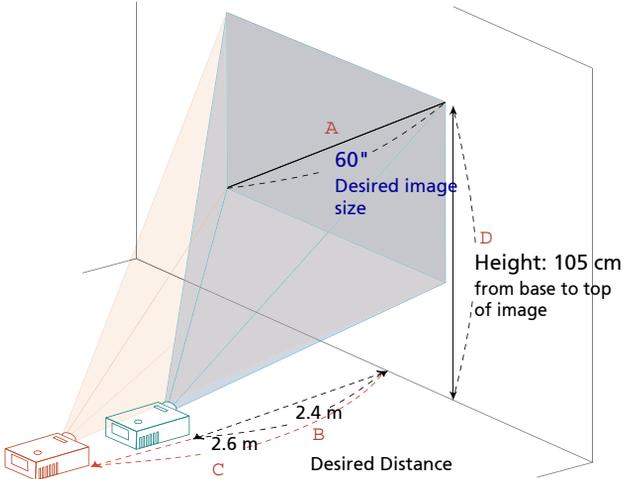


| Throw ratio | | 1.94~2.16 | | |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Desired Image Size | | Distance (m) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 30 | 61 x 46 | 1.18 | 1.32 | 53 |
| 40 | 81 x 61 | 1.58 | 1.76 | 70 |
| 50 | 102 x 76 | 1.97 | 2.19 | 88 |
| 60 | 122 x 91 | 2.37 | 2.63 | 105 |
| 70 | 142 x 107 | 2.76 | 3.07 | 123 |
| 80 | 163 x 122 | 3.15 | 3.51 | 140 |
| 90 | 183 x 137 | 3.55 | 3.95 | 158 |
| 100 | 203 x 152 | 3.94 | 4.39 | 175 |
| 150 | 305 x 229 | 5.91 | 6.58 | 263 |
| 180 | 366 x 274 | 7.10 | 7.90 | 315 |
| 200 | 406 x 305 | 7.88 | 8.78 | 351 |
| 250 | 508 x 381 | 9.86 | 10.97 | 438 |
| 300 | 610 x 457 | 11.83 | NA | 526 |

Zoom Ratio: 1.1x

- WXGA series

To obtain an image size of 60" set the projector at a distance 2.0 m and 2.2 m from the screen.

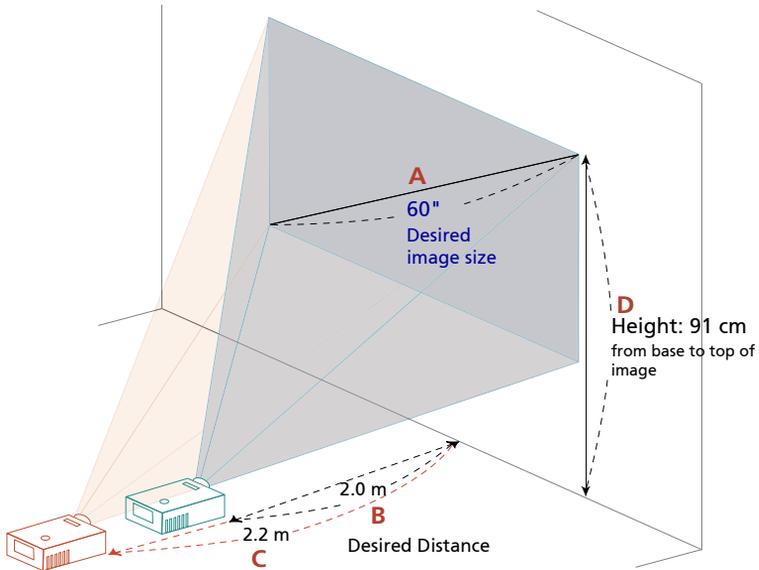


| Throw ratio | | 1.55~1.70 | | |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Desired Image Size | | Distance (m) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 30 | 65 x 40 | 1.10 | 1.00 | 45 |
| 40 | 86 x 54 | 1.46 | 1.34 | 61 |
| 50 | 108 x 67 | 1.83 | 1.67 | 76 |
| 60 | 129 x 81 | 2.20 | 2.00 | 91 |
| 70 | 151 x 94 | 2.56 | 2.34 | 106 |
| 80 | 172 x 108 | 2.93 | 2.67 | 121 |
| 90 | 194 x 121 | 3.30 | 3.00 | 136 |
| 100 | 215 x 135 | 3.66 | 3.34 | 151 |
| 150 | 323 x 202 | 5.49 | 5.01 | 227 |
| 180 | 388 x 242 | 6.59 | 6.01 | 272 |
| 200 | 431 x 269 | 7.32 | 6.68 | 303 |
| 250 | 538 x 337 | 9.15 | 8.35 | 378 |
| 300 | 646 x 404 | 10.98 | NA | 454 |

Zoom Ratio: 1.1x

- WUXGA series

To obtain an image size of 60" set the projector at a distance 1.9 m and 2.1 m from the screen.

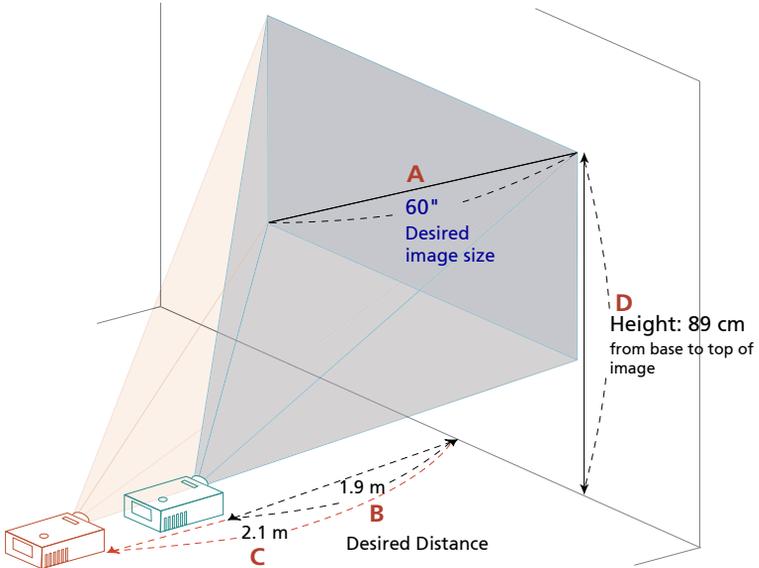


| Desired Image Size | | Distance (m) | | Top (cm) |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 34 | 73 x 46 | 1.1 | 1.2 | 50 |
| 50 | 108 x 67 | 1.6 | 1.7 | 74 |
| 60 | 129 x 81 | 1.9 | 2.1 | 89 |
| 70 | 151 x 94 | 2.2 | 2.4 | 104 |
| 80 | 172 x 108 | 2.5 | 2.8 | 118 |
| 90 | 194 x 121 | 2.8 | 3.1 | 133 |
| 100 | 215 x 135 | 3.2 | 3.5 | 148 |
| 120 | 258 x 162 | 3.8 | 4.2 | 178 |
| 150 | 323 x 202 | 4.7 | 5.2 | 222 |
| 200 | 431 x 269 | 6.3 | 7.0 | 296 |
| 250 | 538 x 337 | 7.9 | 8.7 | 370 |
| 300 | 646 x 404 | 9.5 | 10.5 | 444 |

Zoom Ratio: 1.1x

- WUXGA series

To obtain an image size of 60" set the projector at a distance 2.0 m and 2.7 m from the screen.

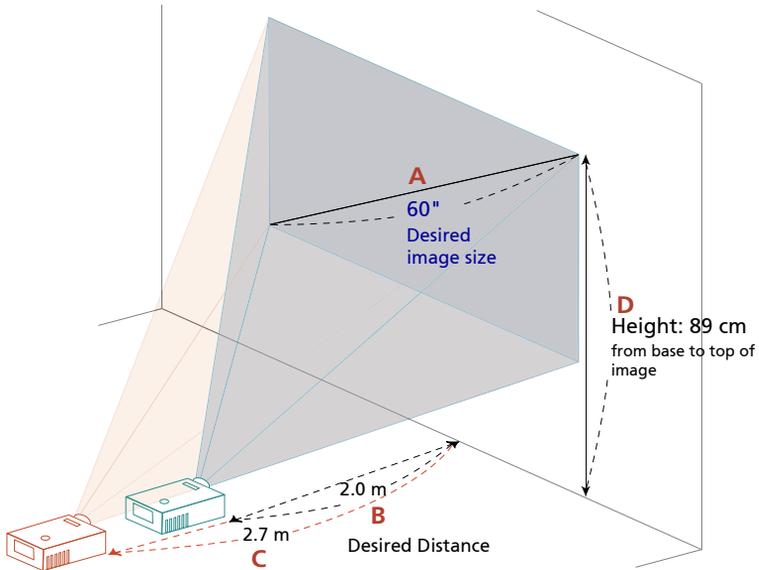


| Desired Image Size | | Distance (m) | | Top (cm) |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 34 | 73 x 46 | 1.2 | 1.5 | 50 |
| 50 | 108 x 67 | 1.7 | 2.2 | 74 |
| 60 | 129 x 81 | 2.0 | 2.7 | 89 |
| 70 | 151 x 94 | 2.4 | 3.1 | 104 |
| 80 | 172 x 108 | 2.7 | 3.5 | 118 |
| 90 | 194 x 121 | 3.1 | 4.0 | 133 |
| 100 | 215 x 135 | 3.4 | 4.4 | 148 |
| 120 | 258 x 162 | 4.1 | 5.3 | 178 |
| 150 | 323 x 202 | 5.1 | 6.7 | 222 |
| 200 | 431 x 269 | 6.8 | 8.9 | 296 |
| 250 | 538 x 337 | 8.5 | 11.1 | 370 |
| 300 | 646 x 404 | 10.2 | | 444 |

Zoom Ratio: 1.3x

- WUXGA series

To obtain an image size of 60" set the projector at a distance 1.6 m and 2.1 m from the screen.

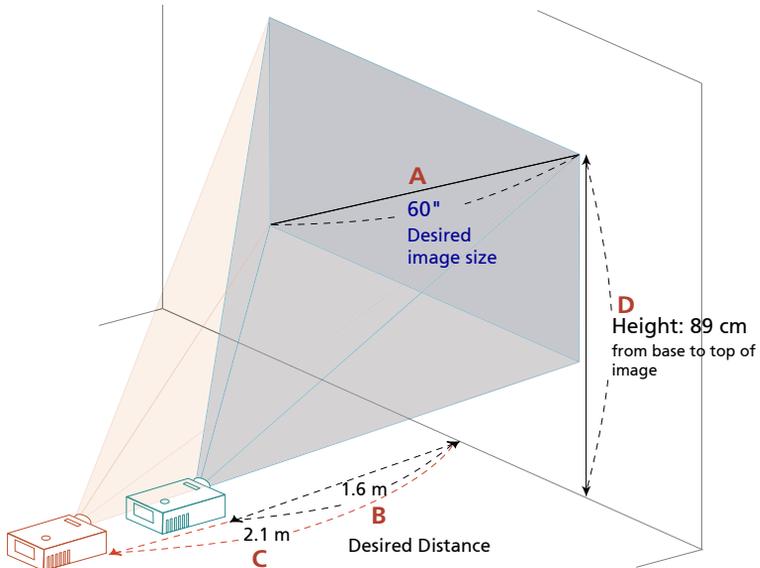


| Desired Image Size | | Distance (m) | | Top (cm) |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 40 | 86 x 54 | 1.0 | 1.4 | 59 |
| 50 | 108 x 67 | 1.3 | 1.7 | 74 |
| 60 | 129 x 81 | 1.6 | 2.1 | 89 |
| 70 | 151 x 94 | 1.8 | 2.4 | 104 |
| 80 | 172 x 108 | 2.1 | 2.7 | 118 |
| 90 | 194 x 121 | 2.3 | 3.1 | 133 |
| 100 | 215 x 135 | 2.6 | 3.4 | 148 |
| 120 | 258 x 162 | 3.1 | 4.1 | 178 |
| 150 | 323 x 202 | 3.9 | 5.1 | 222 |
| 200 | 431 x 269 | 5.2 | 6.8 | 296 |
| 250 | 538 x 337 | 6.5 | 8.6 | 370 |
| 300 | 646 x 404 | 7.8 | 10.3 | 444 |

Zoom Ratio: 1.3x

- 1080p series

To obtain an image size of 60" set the projector at a distance 1.5 m and 2.0 m from the screen.

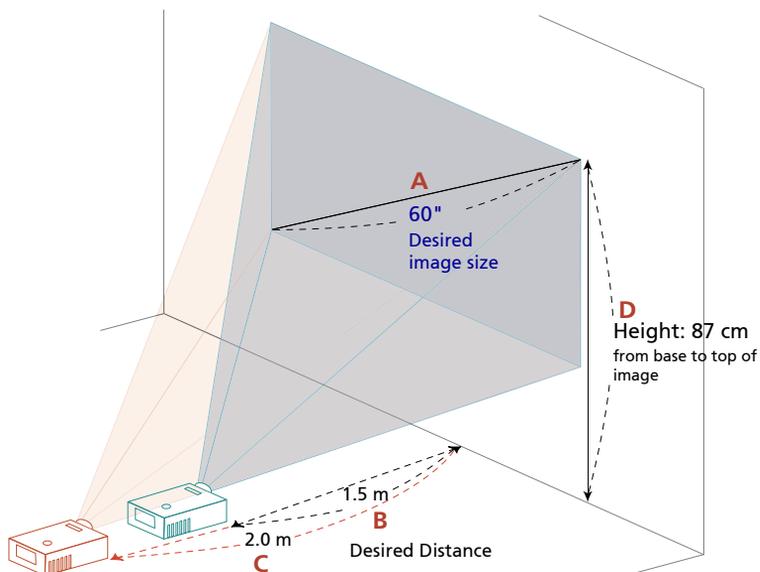


| Throw ratio | | 1.21~1.59 | | 1.13~1.47 | | |
|---------------------|-----------------|---------------|--------------|---------------|--------------|-------------------------------|
| Desired Image Size | | Distance (cm) | | Distance (cm) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | Max zoom | Min zoom <C> | From base to top of image <D> |
| 30 | 66 x 37 | 80 | 106 | 75 | 98 | 43 |
| 40 | 89 x 50 | 107 | 141 | 100 | 130 | 58 |
| 50 | 111 x 62 | 134 | 176 | 125 | 163 | 72 |
| 60 | 133 x 75 | 161 | 211 | 150 | 195 | 87 |
| 70 | 155 x 87 | 188 | 246 | 175 | 228 | 101 |
| 80 | 177 x 100 | 214 | 282 | 200 | 260 | 116 |
| 90 | 199 x 112 | 241 | 317 | 225 | 293 | 130 |
| 100 | 221 x 125 | 268 | 352 | 250 | 325 | 144 |
| 120 | 266 x 149 | 321 | 422 | 300 | 391 | 173 |
| 150 | 332 x 187 | 402 | 528 | 375 | 488 | 217 |
| 180 | 398 x 224 | 482 | 634 | 450 | 586 | 260 |
| 200 | 443 x 249 | 536 | 704 | 500 | 651 | 361 |
| 250 | 553 x 311 | 670 | 880 | 625 | 814 | 433 |
| 300 | 664 x 374 | 804 | 1056 | 750 | 976 | 466 |

Zoom Ratio: 1.3x

• XGA series

To obtain an image size of 50" set the projector at a distance 1.5 m and 2.0 m from the screen.

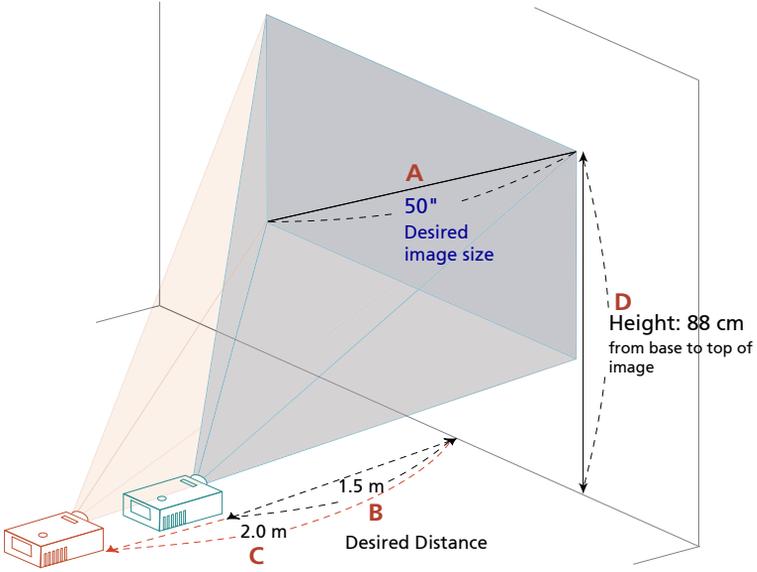


| Desired Image Size | | Distance (m) | | Top (cm) |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 26 | 53 x 40 | | 1.0 | 46 |
| 30 | 61 x 46 | 0.9 | 1.2 | 53 |
| 40 | 81 x 61 | 1.2 | 1.6 | 70 |
| 50 | 102x76 | 1.5 | 2.0 | 80 |
| 60 | 122 x 91 | 1.8 | 2.4 | 105 |
| 70 | 142 x 107 | 2.1 | 2.7 | 123 |
| 80 | 163 x 122 | 2.4 | 3.1 | 140 |
| 90 | 183 x 137 | 2.7 | 3.5 | 158 |
| 100 | 203 x 152 | 3.0 | 3.9 | 175 |
| 150 | 305 x 229 | 4.5 | 5.9 | 263 |
| 180 | 366 x 274 | 5.4 | 7.1 | 315 |
| 200 | 406 x 305 | 6.0 | 7.8 | 351 |
| 266 | 541 x 405 | 8.0 | | 466 |

Zoom Ratio: 1.3x

- WXGA series

To obtain an image size of 60" set the projector at a distance 1.5 m and 2.0 m from the screen.

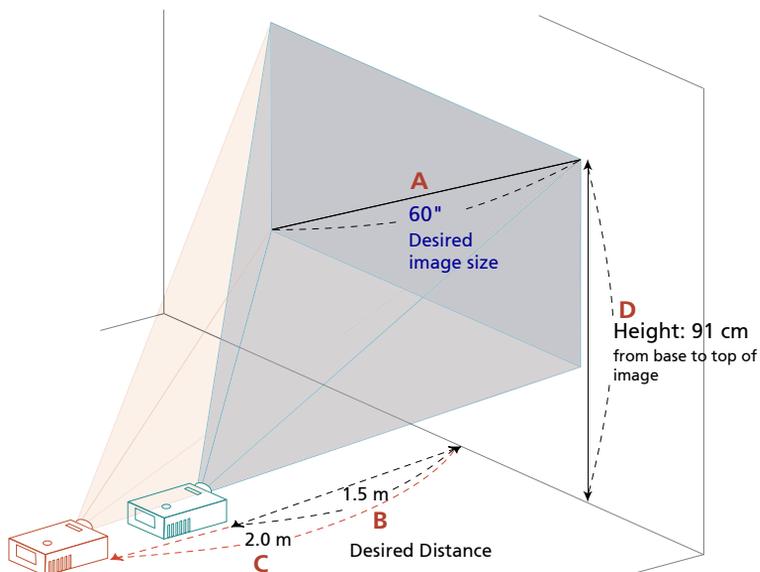


| Throw ratio | | 1.18~1.54 | | |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Desired Image Size | | Distance (m) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 30 | 65 x 40 | NA | 1.00 | 45 |
| 40 | 86 x 54 | 1.02 | 1.33 | 61 |
| 50 | 108 x 67 | 1.28 | 1.66 | 76 |
| 60 | 129 x 81 | 1.53 | 2.00 | 91 |
| 70 | 151 x 94 | 1.79 | 2.33 | 106 |
| 80 | 172 x 108 | 2.05 | 2.66 | 121 |
| 90 | 194 x 121 | 2.30 | 2.99 | 136 |
| 100 | 215 x 135 | 2.56 | 3.33 | 151 |
| 150 | 323 x 202 | 3.84 | 4.99 | 227 |
| 180 | 388 x 242 | 4.60 | 5.99 | 272 |
| 200 | 431 x 269 | 5.11 | 6.65 | 303 |
| 250 | 538 x 337 | 6.39 | 8.31 | 378 |
| 300 | 646 x 404 | 7.67 | NA | 454 |
| 315 | 678 x 424 | 8.05 | NA | 476 |

Zoom Ratio: 1.3x

- 1080p series

To obtain an image size of 60" set the projector at a distance 2.0 m and 2.2 m from the screen.

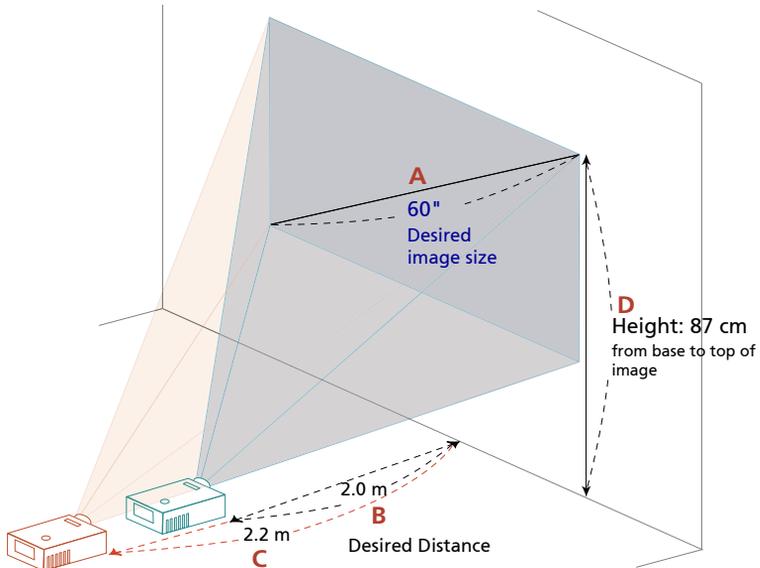


| Throw ratio | | 1.5~1.66 | | 1.48~1.62 | | |
|---------------------|-----------------|---------------|--------------|---------------|--------------|-------------------------------|
| Desired Image Size | | Distance (cm) | | Distance (cm) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | Max zoom | Min zoom <C> | From base to top of image <D> |
| 27 | 60 x 34 | 90 | 99 | 88 | 97 | 39 |
| 50 | 111 x 62 | 170 | 184 | 164 | 179 | 72 |
| 60 | 133 x 75 | 200 | 220 | 197 | 215 | 87 |
| 70 | 155 x 87 | 230 | 257 | 229 | 251 | 101 |
| 80 | 177 x 100 | 270 | 294 | 262 | 287 | 116 |
| 90 | 199 x 112 | 300 | 331 | 295 | 323 | 130 |
| 100 | 221 x 125 | 330 | 367 | 328 | 359 | 144 |
| 120 | 266 x 149 | 400 | 441 | 393 | 430 | 173 |
| 150 | 332 x 187 | 500 | 551 | 491 | 538 | 217 |
| 200 | 443 x 249 | 660 | 735 | 655 | 717 | 289 |
| 250 | 553 x 311 | 830 | 919 | 819 | 897 | 361 |
| 300 | 664 x 374 | 1000 | 1102 | 983 | 1076 | 433 |

Zoom Ratio: 1.1x

- 720p series

To obtain an image size of 60" set the projector at a distance 2.1 m and 2.3 m from the screen.

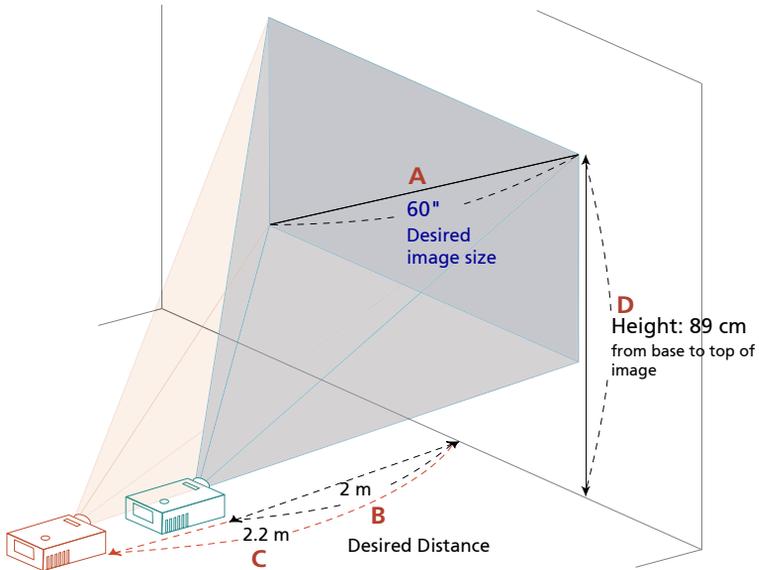


| Throw ratio | | 1.55~1.70 | | |
|------------------------|-----------------|-----------------|-----------------|-------------------------------------|
| Desired Image Size | | Distance (m) | | Top (cm) |
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | Min zoom <C> | From base to top of image <D> |
| 26 | 58 x 32 | NA | 0.87 | 39 |
| 40 | 89 x 50 | 1.46 | 1.34 | 59 |
| 50 | 111 x 62 | 1.83 | 1.67 | 74 |
| 60 | 133 x 75 | 2.20 | 2.00 | 89 |
| 70 | 155 x 87 | 2.56 | 2.34 | 104 |
| 80 | 177 x 100 | 2.93 | 2.67 | 119 |
| 90 | 199 x 112 | 3.30 | 3.00 | 134 |
| 100 | 221 x 125 | 3.66 | 3.34 | 149 |
| 150 | 332 x 187 | 5.49 | 5.01 | 223 |
| 180 | 398 x 224 | 6.59 | 6.01 | 267 |
| 200 | 443 x 249 | 7.32 | 6.68 | 297 |
| 250 | 553 x 311 | 9.15 | 8.35 | 371 |
| 300 | 664 x 374 | 10.98 | NA | 446 |

Zoom Ratio: 1.1x

- XGA series

To obtain an image size of 60" set the projector at a distance 0.8 m from the screen.

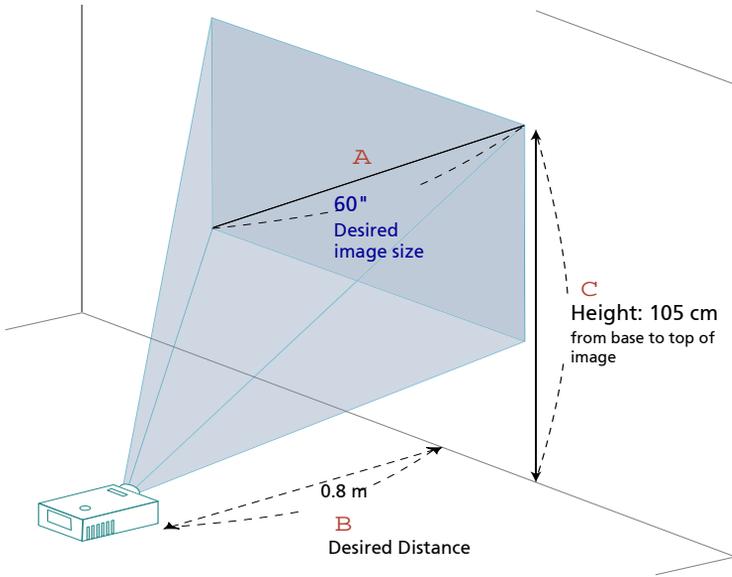


| Desired Image Size | | Distance (m) | Top (cm) |
|------------------------|-----------------|-----------------|----------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | From base to top of image <C> |
| 30 | 61 x 46 | 0.4 | 53 |
| 40 | 81 x 61 | 0.5 | 70 |
| 50 | 102 x 76 | 0.6 | 88 |
| 60 | 122 x 91 | 0.8 | 105 |
| 70 | 142 x 107 | 0.9 | 123 |
| 80 | 163 x 122 | 1.0 | 140 |
| 90 | 183 x 137 | 1.1 | 158 |
| 100 | 203 x 152 | 1.3 | 175 |
| 120 | 244 x 183 | 1.5 | 210 |
| 150 | 305 x 229 | 1.9 | 263 |
| 180 | 366 x 274 | 2.3 | 315 |
| 200 | 406 x 305 | 2.5 | 351 |
| 247 | 502 x 376 | 3.1 | 433 |
| 303 | 616 x 462 | 3.8 | 531 |

Zoom Ratio: 1.0x

- WXGA series

To obtain an image size of 60" set the projector at a distance 0.7 m from the screen.

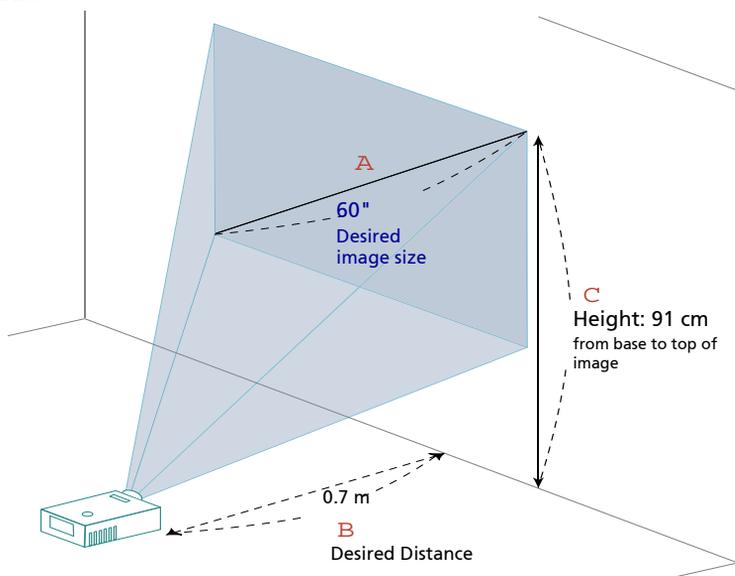


| Desired Image Size | | Distance (m) | Top (cm) |
|------------------------|-----------------|-----------------|----------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | From base to top of image <C> |
| 36 | 78 x 48 | 0.4 | 54 |
| 50 | 108 x 67 | 0.6 | 76 |
| 60 | 129 x 81 | 0.7 | 91 |
| 70 | 151 x 94 | 0.8 | 106 |
| 80 | 172 x 108 | 0.9 | 121 |
| 90 | 194 x 121 | 1.0 | 136 |
| 100 | 215 x 135 | 1.1 | 151 |
| 120 | 258 x 162 | 1.3 | 182 |
| 150 | 323 x 202 | 1.7 | 227 |
| 180 | 388 x 242 | 2.0 | 272 |
| 200 | 431 x 269 | 2.2 | 303 |
| 250 | 538 x 337 | 2.8 | 378 |
| 303 | 653 x 408 | 3.4 | 458 |

Zoom Ratio: 1.0x

- 1080p series

To obtain an image size of 60" set the projector at a distance 0.7 m from the screen.

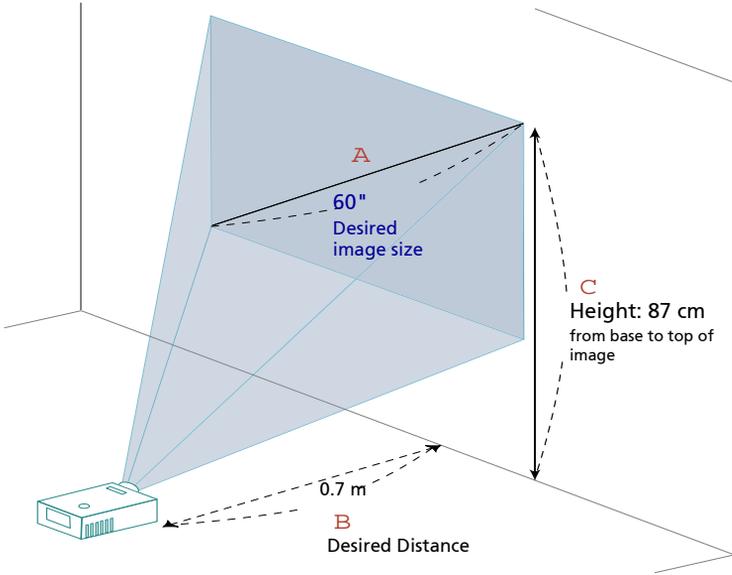

| Desired Image Size | | Distance (m) | Top (cm) |
|------------------------|-----------------|-----------------|----------------------------------|
| Diagonal (inch) <A> | W (cm) x H (cm) | Max zoom | From base to top of image <C> |
| 45 | 100 x 56 | 0.5 | 65 |
| 50 | 111 x 62 | 0.6 | 72 |
| 60 | 133 x 75 | 0.7 | 87 |
| 70 | 155 x 87 | 0.8 | 101 |
| 80 | 177 x 100 | 0.9 | 116 |
| 90 | 199 x 112 | 1.0 | 130 |
| 100 | 221 x 125 | 1.1 | 144 |
| 120 | 266 x 149 | 1.3 | 173 |
| 150 | 332 x 187 | 1.7 | 217 |
| 180 | 398 x 224 | 2.0 | 260 |
| 200 | 443 x 249 | 2.2 | 289 |
| 250 | 553 x 311 | 2.8 | 361 |
| 303 | 671 x 377 | 3.3 | 438 |

Zoom Ratio: 1.0x

User Controls

Installation menu

The installation menu provides an onscreen display (OSD) for projector installation and maintenance. Use the OSD only when the message "No signal input" is displayed on the screen.

The menu options include settings and adjustments for screen size and distance, focus, keystone correction and more .

- 1 Turn on the projector by pressing "**Power**" button on the control pad.
- 2 Press the "**MENU**" button on the remote control to launch the OSD for projector installation and maintenance.



- 3 The background pattern acts as a guide to adjusting the calibration and alignment settings, such as screen size and distance, focus and more .
- 4 The Installation menu includes the several options.

Use the up and down arrow keys to select an option, the left and right arrow keys to adjust selected option settings, and the "ENTER" to enter a submenu for feature setting. The new settings will be saved automatically upon exiting the menu.

- 5 Push the "MENU" or "BACK" button anytime to exit the menu and return to the Acer welcome screen.




Note: Functions vary depending on model definition.

Onscreen Display (OSD) Menus

The projector has multilingual OSD that allow you to make image adjustments and change a variety of settings.

Using the OSD menus

- To open the OSD menu, press **"MENU"** on the remote control or control panel.
- When the OSD is displayed, use the   keys to select any item in the main menu. After selecting the desired main menu item, press **"ENTER"** to enter submenu for feature setting.
- Use the   keys to select the desired item and adjust the settings by using the   keys.
- Select the next item to be adjusted in the submenu and adjust as described above.
- Press **"BACK"** on the remote control or control panel, the screen will return to the main menu.
- To exit OSD, press **"BACK"** on the remote control or control panel. The OSD menu will close and the projector will automatically save the new settings.

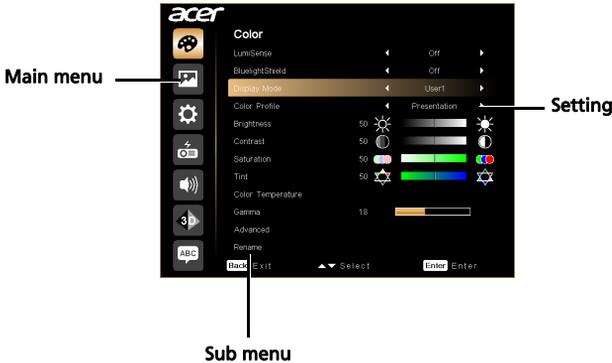

Note 1: Some of the following OSD settings may not be available. Please refer to the actual OSD of your projector.

Note 2: Functions vary depending on model definition.

Color

| | |
|-----------------|--|
| LumiSense | <p>Acer LumiSense technology can intelligently optimize the projection images to the most comfortable visual lumens automatically based on display content. The feature greatly enhances dark detail visibility and color saturation.</p> <ul style="list-style-type: none"> ● Off: Default setting. ● Normal: Select "Normal" to meet the visual effect of dark detail enhancement. ● Boost: Select "Boost" to meet the visual effect of brightness boost. ● Dynamic Black: automatically optimize the display of dark movie scenes enabling them to be shown in incredible detail. <p><Note>: Once LumiSense is enabled, BlueLightShield switches to "Off".</p> |
| BlueLightShield | <ul style="list-style-type: none"> ● Off: Default setting. ● Low / Medium / High: Select Low / Medium / High to reduce different exposure levels of blue light dynamically. <p><Note>: Once BlueLightShield is enabled, LumiSense switches to "Off".</p> |
| Display Mode | <p>There are many factory presets optimized for various types of images.</p> <ul style="list-style-type: none"> ● Bright: For brightness optimization. ● Presentation: For meeting presentation. ● Standard: For common environment. ● Video: For playing video in a bright environment. ● Game: For game content. ● Education: For education environment. ● Movie: For brighter and general movie/video/photo playing. ● Game Dark: Play game in the dark environment. ● Game Bright: Play game in the bright environment. ● sRGB: standard RGB color space. ● Football: For football performance. ● Dark Cinema: For dark movie content. ● Rec. 709: standard Rec. 709 color space. ● ISF Day: Calibrate and optimize the projection image based on bright environment by an ISF Certified technician. ● ISF Night: Calibrate and optimize the projection image based on dark environment by an ISF Certified technician. ● Game Auto: For game content and automatically adjusts image contrast and saturation according to the displayed content. ● Dark FPS: For darker game content and brings out more details in the darker areas. ● Bright FPS: For brighter game content and increases image contrast and saturation. ● User: Memorize user's settings. |

| | |
|-------------------|---|
| Color Profile | User can choose all the display mode setting as reference setting of the current "User 1", "User 2" or "User 3" except itself. When User choose the display mode "User 1", "User 2" and "User 3", then OSD will showup the "color profile" and "rename". Both of User1/ User2/User3 are default Standard. |
| Wall color | Use this function to choose a proper color according to the wall. There are several choices, including white, light yellow, light blue, pink, dark green. It will compensate the color deviation due to the wall color to show the correct image tone. |
| Brightness | Adjust the brightness of the image. <ul style="list-style-type: none"> • Press ◀ to darken the image. • Press ▶ to lighten the image. |
| Contrast | "Contrast" controls the difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image. <ul style="list-style-type: none"> • Press ◀ to decrease the contrast. • Press ▶ to increase the contrast. |
| Saturation | Adjusts a video image from black and white to fully saturated color. <ul style="list-style-type: none"> • Press ◀ to decrease the amount of color in the image. • Press ▶ to increase the amount of color in the image. |
| Tint | Adjusts the color balance of red and green. <ul style="list-style-type: none"> • Press ◀ to increase the amount of green in the image. • Press ▶ to increase the amount of red in the image. |
| Color Temperature | Mode Use this function to choose CT1, CT2, CT3, User mode. |
| | R Gain Adjusts the red gain for color temperature optimization. |
| | G Gain Adjusts the green gain for color temperature optimization. |
| | B Gain Adjusts the blue gain for color temperature optimization. |
| Gamma | Effects the representation of dark scenery. With greater gamma value, dark scenery looks brighter. |

| | |
|----------|--|
| Advanced | Ind. Color Management Adjusts the red, green, blue, cyan, yellow and magenta colors. |
| | Ind. Hue Adjusts the color balance of red and green. |
| | Ind. Saturation Adjusts the selected color to be less or more saturated color. |
| | Ind. Gain Adjusts the selected color's contrast. |
| | Brilliant Color Produces an expanded on-screen color spectrum that delivers enhanced color saturation for bright, true-to-life images. |
| | White Peaking Increases the brightness of whites that are near 100%. (video sources only) |
| | Film Mode Sets the image optimized to 24-frame True Film mode. |
| | Noise Reduction Adjusts signal noise reduction. "0" means the noise reduction is off, ">0" increase noise reduction. |
| | Black Extension This ensures optimum black level for each analog source. |
| | Wall color Use this function to choose a proper color according to the wall. There are several choices, including white, light yellow, light blue, pink, dark green. It will compensate the color deviation due to the wall color to show the correct image tone. |
| | ISF 1. The certified ISF technician will calibrate and optimize the projection image according to your actual environment. The ISF input password will be kept by technician only. 2. "ISF Day" and "ISF Night" will not be shown in display mode if projector equipped with ISF function has not been calibrated by an ISF certified technician. For more information, please go to ISF official website: https://www.imagingscience.com and contact the dealer located in your country. 3. The ISF calibration will be charged and guaranteed by ISF certified calibrator, and thereby Acer is not responsible for the calibration service. |
| | Low Input Lag Use this function to make the projected screen smoothly without any lag. Only support 1920x1080@60Hz. <Note> When the setting is set to "On", the 3D/Aspect Ratio/Keystone/H. Position/V. Position/HDMI Scan Info/Tracking/Digital Zoom function will be reset to its factory default settings. Aspect Ratio/Digital Zoom Out/4 Corner Correction/Auto Keystone/H Keystone/V Keystone/HDMI Scan Info/3D will be disable and set to default value when Low Input Lag is on. These items will be enabled and restored values automatically when Low Input Lag set to off. |

| Rename | <div style="text-align: center; border: 1px solid black; background-color: #333; color: white; padding: 5px;"> Rename User Mode </div> <div style="border: 1px solid black; background-color: #333; color: white; padding: 5px;"> <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding: 2px;">User</th> <th style="text-align: right; padding: 2px;">4/8</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">1 2 3 4 5 6 7 8 9 0</td> <td></td> </tr> <tr> <td style="padding: 2px;">Q W E R T Y U I O P</td> <td></td> </tr> <tr> <td style="padding: 2px;">A S D F G H J K L Del</td> <td></td> </tr> <tr> <td style="padding: 2px;">Z X C V B N M Space Caps</td> <td></td> </tr> <tr> <td style="padding: 2px;">Back Exit</td> <td style="padding: 2px;">Enter Enter</td> </tr> </tbody> </table> </div> <p style="margin-top: 10px;"> 1. When User choose the display mode "User 1", "User 2" or "User 3", then OSD will showup the "color profile" and "rename" 2. Timely saved when user change the name. 3. Only English is supported. When user changes any kind of system languages, show the English characters which user renamed. </p> | User | 4/8 | 1 2 3 4 5 6 7 8 9 0 | | Q W E R T Y U I O P | | A S D F G H J K L Del | | Z X C V B N M Space Caps | | Back Exit | Enter Enter |
|--------------------------|---|------|-----|---------------------|--|---------------------|--|-----------------------|--|--------------------------|--|-----------|-------------|
| User | 4/8 | | | | | | | | | | | | |
| 1 2 3 4 5 6 7 8 9 0 | | | | | | | | | | | | | |
| Q W E R T Y U I O P | | | | | | | | | | | | | |
| A S D F G H J K L Del | | | | | | | | | | | | | |
| Z X C V B N M Space Caps | | | | | | | | | | | | | |
| Back Exit | Enter Enter | | | | | | | | | | | | |



Note 1: "Saturation" and "Tint" functions are not supported under computer or HDMI mode.

Note 2: Functions vary depending on model definition.

Image

| | |
|---------------------|--|
| Projection | <ul style="list-style-type: none"> •  Front: The factory default setting. •  Rear: Reverses the image so you can project from behind a translucent screen. •  Rear-Ceiling: When you select this function, the projector reverses and inverts the image at same time. You can project from behind a translucent screen with ceiling mounted projection. •  Front-Ceiling: When you select this function, the projector inverts the image for ceiling-mounted projection. |
| Projection Mode | <ul style="list-style-type: none"> •  Front: The factory default setting. •  Rear: Reverses the image so you can project from behind a translucent screen. |
| Projection Location | <ul style="list-style-type: none"> •  Auto: Automatically adjusts projection location of image. •  Desktop •  Ceiling: Turns the image upside down for ceiling-mounted projection. |
| Aspect Ratio | <p>Use this function to choose your desired aspect ratio.</p> <ul style="list-style-type: none"> • Auto: Keep the image with original width-high ratio and maximize the image to fit native horizontal or vertical pixels. • Full: Resize image to fit full screen by width (3840 pixels) and height (2160 pixels). • 4:3: The image will be scaled to fit the screen and displayed using a 4:3 ratio. • 16:9: The image will be scaled to fit the width of the screen and the height adjusted to display the image using a 16:9 ratio. • L.Box: Keep original signal aspect ratio and zoom in by 1.333 times. |
| Keystone | <p>Adjust image distortion caused by tilting projection.</p>  |
| Auto Keystone | <p>Automatically adjusts vertical image. <Note> Automatically adjusts vertical and horizontal image for X1328AF.</p> |
| Manual Keystone | <p>Adjust image distortion caused by tilting projection.</p>  <p><Note> The Manual Keystone function is unavailable under Auto Keystone setting to "On".</p> |

| | |
|--------------------------------------|--|
| H./V. Keystone | <p>H. Keystone</p> <p>Press the ◀ or ▶ button to adjust image distortion horizontally and makes a squarer image.</p> <p>V. Keystone</p> <p>Press the ◀ or ▶ button to adjust image distortion vertically and makes a squarer image.</p> |
| 4 Corner Correction | <p>Manually adjusts the shape and size of an image that is unevenly rectangular on all sides. Press "MODE" repeatedly to select the corner that you wish to adjust. Press four directional selection keys to adjust the image shape.</p> <div data-bbox="445 421 800 624" style="text-align: center;"> </div> <p><Note> The function is unavailable when H./V. Keystone is adjusted.</p> |
| Auto Focus | Enable Auto Focus to adjust the focus by auto-detection. |
| Manual Focus | Adjust focus by users and save the focus setting. |
| Native Resolution | Adjust the resolution by changing Native Resolution settings. |
| Digital Zoom Out | Sets the default size of the projected image. You can further zoom in or out the image by pressing ◀ or ▶. Using the functions of Digital Zoom Out and Image Shift together helps you fit the projected image full screen without adjusting the existing ceiling mount settings. |
| Digital lens shift/ Image Shift | <ul style="list-style-type: none"> • Digital lens shift: Shifts the projected image by pressing ▲ ▼. • Image Shift: Shifts the projected image by pressing ▲ ▼ ◀ ▶. The function is only available when the setting of Digital Zoom Out is less than 1.0. |
| Sharpness | <p>Adjusts the sharpness of the image.</p> <ul style="list-style-type: none"> • Press ◀ to decrease the sharpness. • Press ▶ to increase the sharpness. |
| H. Position (Horizontal position) | <ul style="list-style-type: none"> • Press ◀ to move the image left. • Press ▶ to move the image right. |
| V. Position (Vertical position) | <ul style="list-style-type: none"> • Press ◀ to move the image down. • Press ▶ to move the image up. |
| Frequency | "Frequency" changes the projector's refresh rate to match the frequency of your computer's graphics card. If you can see a vertical flickering bar in the projected image, use this function to make the necessary adjustments. |
| Tracking | Synchronizes the signal timing of the projector with the graphics card. If you experience an unstable or flickering image, use this function to correct it. |

| | |
|------------------|--|
| HDMI Color Range | Adjust the color range of the HDMI image data to correct color display error. <ul style="list-style-type: none"> • Auto: Automatically adjust by information from player. • Limited Range: Process the input image as limited color range data. • Full Range: Process the input image as full color range data. |
| HDMI Scan Info | Adjust the overscan ratio of the HDMI image on screen. <ul style="list-style-type: none"> • Auto: Automatically adjust by information from player. • Underscan: Always no overscan on HDMI image. • Overscan: Always keep overscan on HDMI image. |



.....

Note 1: "H. Position", "V. Position", "Frequency" and "Tracking" functions are not supported under HDMI or Video mode.

Note 2: "HDMI Color Range" and "HDMI Scan Info" functions are only supported under HDMI mode.

Note 3: Functions vary depending on model definition.

Setting

| | |
|-------------------|---|
| Startup Screen | <p>Use this function to select your desired startup screen. If you change the setting, the changes will take effect when you exit the OSD menu.</p> <ul style="list-style-type: none"> • Acer: The default startup screen of your Acer projector. • User: Use memorize picture from "Screen Capture" function. |
| Screen Capture | <p>Use this function to customize the startup screen. To capture the image that you want to use as the startup screen, follow the instructions below.</p> <p>Notice: Before proceeding with the following steps, make sure that the "Keystone" is set to the default value 0.</p> <ul style="list-style-type: none"> • Press "Screen Capture" to customize the startup screen. • Pop message to suggest user to input native source. The "resolution" shown in the text is based on native timing. Press "Start" to go next UI; press "Back" to previous UI . • A dialog box appears to confirm the action. Show a message: Adjust your desired image in the red frame and system will capture your image after pressing "ENTER". Choose "ENTER" to use the current image as your customized startup screen. Choose "Back" to cancel the screen capture and exit the onscreen display (OSD). • A message appears, stating that the screen capture is in progress. • When the screen capture is finished, the message disappears and the original display is shown. • The customized startup screen takes effect when there is a new input signal or when you restart the projector. |
| Source Selection | Manual by source menu, Auto by Smart Detection. |
| Closed Caption | <p>Selects a preferred closed captioning mode from CC1, CC2, CC3, CC4, (CC1 displays captions in the primary language in your area). Select "Off" to turn off the captioning feature. This function is only available when a composite video or S-Video input signal is selected and its system format is NTSC.</p> <p><Note> Set your screen aspect ratio to 4:3. This function is not available when the aspect ratio is "16:9" or "Auto" .</p> |
| VGA OUT (Standby) | Default is "Off". Choose "On" to enable VGA OUT connection. |
| HDMI CEC | Default is "Off". Choose "On" to enable HDMI CEC function. |
| HDMI Long Cable | <p>Default: "Off". Select "On", "HDMI 1", or "HDMI 2". Depending on the selected HDMI option, the DC 5V out (USB-A) power may be turned off to help reduce possible interference to the HDMI signal caused by nearby wireless devices.</p> <p><Note></p> <ol style="list-style-type: none"> 1. For wireless models, enabling this function or switching input sources may require waiting for the wireless module to power on. 2. When using a multimedia streaming device powered via the projector's DC 5V out (USB-A), do not select the HDMI option to which the device is connected. Otherwise, the device may repeatedly power on and off. |

| | |
|----------|---|
| Security | <p>Security This projector provides a useful security function for the administrator to manage usage of the projector . Press "ENTER" to change the "Security" setting. If the security function is enabled, you must enter the "Administrator Password" first before changing the security settings.</p> <ul style="list-style-type: none"> • Select "On" to enable the security function. The user has to enter a password to operate the projector. Please refer to the "User Password" section for details. • If "Off" is selected, then the user can turn on the projector without password. <p>Timeout(Min.) Once "Security" is activated to "On", the administrator can set timeout function.</p> <ul style="list-style-type: none"> • Press ◀ or ▶ to select the timeout interval. • The range is from 10 minute to 990 minutes. • When the time is up, the projector will prompt the user to enter the password again. • The factory default setting of "Timeout(Min.)" is "Off". • Once the security function is enabled, the projector will request user to enter password when switch on the projector . Both "User Password" and "Administrator Password" can be accepted for this dialogue. <p>User Password</p> <ul style="list-style-type: none"> • Press "ENTER" to setup or change the "User Password". • Press number keys to set your password on the remote control and press "ENTER" to confirm. • Press ◀ to delete character. • Enter the password when you see "Confirm Password" displayed. • The password should be between 4 and 8 characters long. • If you select "Request password only when plugging the power cord in.", the projector will prompt the user to enter the password every time the power cord is plugged. • If you select "Always request password while projector turns on.", the user has to enter the password every time when the projector is turned on. <p>Administrator Password The "Administrator Password" can be used in both the "Enter Administrator Password" and "Enter Password" dialog boxes.</p> <ul style="list-style-type: none"> • Press "ENTER" to change the "Administrator Password". • The factory default of "Administrator Password" is "1234". <p>If you forgot your administrator password, do the following to retrieve the administrator password:</p> <ul style="list-style-type: none"> • An unique 6-digit "Universal Password" which is printed on the Security Card (please check accessory in the box). This unique password is the number which will be accepted by projector anytime no matter what the Administrator Password is. • If losing this security card and number, please contact with an Acer service center. |
|----------|---|

| | |
|---------|---|
| | <p>Lock User Startup Screen Default Lock User Startup Screen is "Off". If lock user startup screen is "On", users cannot change startup screen anymore and avoid other users change that arbitrarily. Choose "Off" to unlock startup screen.</p> |
| Network | <p>LAN IP/Mask Identify IP and Mask address.</p> |
| | <p>WiFi IP/Mask Identify IP and Mask address.</p> |
| | <p>MAC Address Identify MAC address.</p> |
| | <p>Wake on LAN (Standby) Set to "On" to enable wake-on-LAN function to power on projector via LAN under standby status. It is required to download WOL (wake-on-LAN; WOL) tool or app for PC/Mobile by users for this function. According to the ERP energy-saving regulations, when set to ON, if the projector is not powered on within 20 minutes, the LAN function will be disabled to achieve energy savings. In this state, the projector must be powered off and on again to be awakened via the network. If you want to bypass the ERP energy-saving regulations, you can set it to ERP OFF, allowing the LAN function to remain active during standby without being disabled.</p> |
| | <p>DHCP <ul style="list-style-type: none"> • On: Projector will obtain an IP address automatically from your network. • Off: Assign an IP address manually. <Note> 1. Only available when DHCP set to Off, and will gray out if DHCP set to On. 2. Press "Enter" to let users key in values and press "Enter" again to save values temporarily. 3. Press "Apply" to confirm to save the settings for all in LAN setting page. <Note> Grey out when LAN isn't plugged in and LAN IP X.X.X.X show 0.0.0.0</p> |
| | <p>LAN Reset Reset LAN function.</p> |
| Reset | <p>Press the "ENTER" button and choose "Yes" to return the parameters on all menus to the factory default settings.</p> |

| | |
|-----------|---|
| Bluetooth | <p>Smart Control Default is "On". Once Smart Control "Off", Bluetooth (Standby) & Bluetooth ID will disable and gray out. When using projector with the Bluetooth dongle FSC-BP101Y (projector OSD select Smart Control On), user is allow to control the projector remotely by using ProjLink app.</p> |
| | <p>Bluetooth (Standby) Default is "Off", according to the ERP energy-saving regulations, when set to OFF, if the projector is not powered on within 20 minutes, the function will be disabled to achieve energy savings. In this state, the projector must be powered off and on again to be awakened via the DC 5V out port. If you want to bypass the ERP energy-saving regulations, you can set it to Bluetooth (Standby) ON, allowing DC 5V out remain active during standby without being disabled.</p> |
| | <p>Bluetooth ID Bluetooth ID always shows "Acer_XXXXXXXX". Check the Bluetooth Dongle ID on screen.</p> |



Note: Functions vary depending on model definition.

Management

| | |
|-----------------------------|--|
| ECO Mode | Choose "On" to dim the projector lamp which will lower power consumption, extend the lamp life and reduce noise. Choose "Off" to return normal mode. <Note> Gray out ECO mode item while either Lumisense or BluelightShield item is "On". |
| High Altitude | Choose "On" to turn on High Altitude mode. Operate the fans at full speed continuously to allow for proper high altitude cooling of the projector. |
| Turn Off Mode | <ul style="list-style-type: none"> ● Standard: Properly shuts down the projector after fan cooling. ● Instant Resume: Resumes the system when the Power button is pressed again within 2 minutes. |
| Auto Shutdown | The projector will automatically shutdown when there is no signal input after the allocated time. (default is 15 minutes) |
| Menu Display Time (Seconds) | Choose the OSD menu display time. (Default is 15 seconds). Select "Manual" to turn off main menu/one direct-key menu manually by user. |
| Auto Power On | AC Power On Choose "On" to power on projector while AC power plug in. |
| | HDMI Power On Choose "On" to power on projector while HDMI power plug in. |
| | VGA Power On Choose "On" to power on projector while VGA power plug in. |
| Control Panel Lock | Off Default is set to "Off". |
| | Child Lock <ul style="list-style-type: none"> ● Enable "Child Lock" to disable the power key on projector while in the standby mode to avoid power trigger from children. (Take effect after power off). ● Disable "Child Lock" temporarily to turn on projector by quick key, holding the power key on projector for 3 seconds. No need to lock any key after power on. |
| | Full Lock <ul style="list-style-type: none"> ● Enable "Full Lock" to lock all keys on projector. (Take effect once done the setting; show warning message while user presses keypad.) ● Disable "Full Lock" function, press "ENTER" key for 7 seconds. And then, the OSD of "Control Panel Lock" is set to "Off" and not required to go back to "Full Lock" again. ● Pop up a warning message: To disable "Full Lock" function, press "ENTER" key for 7 second, while user presses any key on keypad panel under "Full Lock" mode. |
| Lamp Information | Lamp Hour Elapse Displays the lamp's elapsed operating time (in hours). |
| | Lamp Reminding Activate this function to display a reminder to change the lamp 30 hours before its expected end-of-life. |
| | Lamp Hour Reset Choose "Yes" and press "ENTER" to turn the lamp hour counter to 0 hours. |

| | |
|-------------|--|
| Information | Display the projector information for Model Name, Input Source, Signal Type, Display Mode, Serial No., Software Version and QR code on the screen. |
| | Scan QR code linking to Acer projector portal via mobile.  |



.....

Note 1: Functions vary depending on model definition.

Note 2: Adjusting power-related functions may increase energy consumption.

Audio

| | |
|---------------------|--|
| Volume | <ul style="list-style-type: none"> Press  to decrease the volume. Press  to increase the volume. |
| Mute | <ul style="list-style-type: none"> Choose "On" to mute the volume. Choose "Off" to restore the volume. |
| HDMI Audio | Select the voice source: HDMI & Audio In <ul style="list-style-type: none"> HDMI: choose audio from HDMI Audio In: choose audio from Audio In |
| Power On/Off Volume | Select this function to adjust the notification volume when turning the projector on/off. |



Note: Functions vary depending on model definition.

3D

| | |
|--------------------|---|
| 3D | Choose "On" to enable DLP 3D function. <ul style="list-style-type: none"> On: Choose this item while using DLP 3D glasses, 120Hz 3D capable graphics cards and HQFS format file or DVD with corresponding SW player. Off: Turn off 3D mode. |
| 3D Format | If the 3D content is not displayed correctly, you can select a 3D format that suits the 3D content you are viewing and obtain the best result. |
| 24P 3D | Choose "96Hz" or "144Hz" to compatible with 3D glasses. |
| 3D L/R Invert | If you see a discrete or overlapping image while wearing DLP 3D glasses, you may need to execute "Invert" to get best match of left/right image sequence to get the correct image (for DLP 3D). |
| 3D Warning Message | Choose "On" to display the 3D warning message. <div style="background-color: black; color: white; padding: 5px; margin-top: 10px;"> <p>Note: 3D display is now enabled.</p> <ol style="list-style-type: none"> Please make sure you have the correct 3D signals and glasses. Remember to turn 3D off if you don't want to see 3D images. If the 3D display isn't correct, please try to enable 3D Sync Invert. Display mode options will be disabled while in 3D mode. </div> |



Note 1: It needs correct settings on graphic card 3D application program for correct 3D display.

Note 2: The SW players, such as Stereoscopic Player and DDD TriDef Media Player can support 3D format files. You can download these three players on web page below,

- Stereoscopic Player (Trial):

http://www.3dtv.at/Downloads/Index_en.aspx

- DDD TriDef Media Player (Trial):

<http://www.tridef.com/download/TriDef-3-D-Experience-4.0.2.html>

Note 3: "3D L/R Invert" is only available when 3D is enabled.

Note 4: There has reminder screen if 3D still enable when power on projector. Please adjust setting depended on your purpose.

Note 5: WUXGA model 24P 3D cannot be scaling due to TI ASIC buffer memory limitation, and once detect 24P 3D (96Hz or 144Hz) inputs, Aspect Ratio / HDMI Scan Info will be gray out, also HIDE will be not supported.

Language

| | |
|----------|--|
| Language | <p>Choose the multilingual OSD menu. Use the     key to select your preferred menu language.</p> <ul style="list-style-type: none"> ● Press "ENTER" to confirm the selection. |
|----------|--|

Appendices

Troubleshooting

If you experience a problem with your Acer projector, refer to the following troubleshooting guide. If the problem persists, please contact your local reseller or service center.

Image Problems and Solutions

| # | Problem | Solution |
|---|--|--|
| 1 | No image appears onscreen | <ul style="list-style-type: none"> • Connected as described in the "Getting Started" section. • Ensure none of the connector pins are bent or broken. • Check if the projector lamp has been securely installed. Please refer to the "Replacing the Lamp (For service personnel only)" section. • Make sure you have removed the lens cap and the projector is switched on. |
| 2 | Partial, scrolling or incorrectly displayed image (for PC (Windows 2000/XP/Vista/Windows 7/Windows 8)) | <ul style="list-style-type: none"> • For an incorrectly displayed image: <ul style="list-style-type: none"> • Open "My Computer", open the "Control Panel", and then double-click the "Display" icon. • Select the "Settings" tab. • Verify that your display resolution setting is lower than or equal to WUXGA-RB (1920 x 1200). • Click the "Advanced Properties" button. • If the problem still appears, change the monitor display you are using and follow the steps below: <ul style="list-style-type: none"> • Verify that the resolution setting is lower than or equal to WUXGA-RB (1920 x 1200). • Click the "Change" button under the "Monitor" tab. • Click "Show all devices". Next, select "Standard monitor types" under the SP box, and choose the resolution mode you need under the "Models" box. • Verify that the resolution setting of the monitor display is lower than or equal to WUXGA-RB (1920 x 1200). |

| | | |
|---|---|---|
| 3 | Partial, scrolling or incorrectly displayed image (For notebooks) | <ul style="list-style-type: none"> For an incorrectly displayed image: <ul style="list-style-type: none"> Follow the steps for item 2 (above) to adjust the resolution of your computer. Press the toggle output settings. Example: [Fn]+[F4], Compaq [Fn]+[F4], Dell [Fn]+[F8], Gateway [Fn]+[F4], IBM [Fn]+[F7], HP [Fn]+[F4], NEC [Fn]+[F3], Toshiba [Fn]+[F5] If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector. |
| 4 | The screen of the notebook computer is not displaying your presentation | <ul style="list-style-type: none"> If you are using a Microsoft® Windows® based notebook: Some notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's manual for detailed information. If you are using an Apple® Mac® OS based notebook: In System Preferences, open Display and select Video Mirroring "On". |
| 5 | Image is unstable or flickering | <ul style="list-style-type: none"> Adjust the "Tracking" to correct it. Refer to the "Image" section for more information. Change the display color depth settings on your computer. |
| 6 | Image has vertical flickering bar | <ul style="list-style-type: none"> Use "Frequency" to make an adjustment. Refer to the "Image" section for more information. Check and reconfigure the display mode of your graphics card to make it compatible with the projector. |
| 7 | Image is out of focus | <ul style="list-style-type: none"> Make sure the lens cap is removed. Adjusts the focus ring on the projector lens. Make sure the projection screen is within the required distance from the projector. Refer to the "How to get a preferred image size by adjusting distance and zoom" section for more information. |
| 8 | Image is stretched when displaying a "widescreen" DVD title | <p>When you play a DVD encoded in anamorphic or 16:9 aspect ratio you may need to adjust the following settings:</p> <ul style="list-style-type: none"> If you play a 4:3 format DVD title, please change the format to 4:3 in the projector OSD. If the image is still stretched, you will also need to adjust the aspect ratio. Set up the display format to 16:9 (wide) aspect ratio on your DVD player. If you play an Letterbox (LBX) format DVD title, please change the format to Letterbox (LBX) in the projector OSD. |

| | | |
|----|---|--|
| 9 | Image is too small or too large | <ul style="list-style-type: none"> • Adjust the zoom ring on the projector. • Move the projector closer to or further from the screen. • Press "MENU" on the remote control. Go to "Image -> Aspect Ratio" and try different settings or press "RATIO" on the remote control to adjust directly. |
| 10 | Image has slanted sides | <ul style="list-style-type: none"> • If possible, reposition the projector so that it is centered on the screen. • Press the "Keystone Δ / ∇" button on the remote control until the sides are vertical. |
| 11 | Image is reversed | <ul style="list-style-type: none"> • Select "Image --> Projection Mode" on the OSD and adjust the projection direction. |
| 12 | LAN/WiFi, USB Display source show No signal | <ul style="list-style-type: none"> • Power off projector and power on again. |
| 13 | Image hangs up when displaying photo or document in Media | <ul style="list-style-type: none"> • Power off projector and power on again. |

OSD Messages

| # | Condition | Message Reminder |
|---|-----------|--|
| 1 | Message | <ul style="list-style-type: none"> <li data-bbox="394 280 757 300">• Fan Fail - the system fan is not working. <div data-bbox="388 301 936 381" style="background-color: black; color: white; padding: 5px; text-align: center;"> <p data-bbox="621 317 689 336">Fan Fail.</p> <p data-bbox="517 341 794 360">Lamp will automatically turn off soon.</p> </div> <ul style="list-style-type: none"> <li data-bbox="394 408 929 496">• Projector Overheated - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it may be used. Please check the following message. <div data-bbox="388 504 936 639" style="background-color: black; color: white; padding: 5px;"> <p data-bbox="399 512 812 531">Projector overheated, system will turn off automatically soon, please:</p> <ol style="list-style-type: none"> <li data-bbox="410 536 860 555">1. Check if operation ambient temperature between 5 degree and 40 degree. <li data-bbox="410 560 631 579">2. Check if filter needs to be cleaned. <li data-bbox="410 584 620 603">3. Check if inlet or outlet is blocked. <li data-bbox="410 608 921 627">4. Check if high altitude mode is set when the projector operating at high altitude area. </div> <p data-bbox="394 647 899 687">Please also check the dust filters if they are installed. If the dust filter is clogged with dust, please clean it.</p> <ul style="list-style-type: none"> <li data-bbox="394 719 926 759">• Replace the lamp - the lamp is about to reach its maximum lifetime. Prepare to replace it soon. <div data-bbox="388 764 936 831" style="background-color: black; color: white; padding: 5px; text-align: center;"> <p data-bbox="405 775 904 794">Lamp is approaching the end of its useful life in full power operation.</p> <p data-bbox="565 799 746 818">Replacement suggested!</p> </div> <ul style="list-style-type: none"> <li data-bbox="394 839 929 903">• Auto Focus error- the auto focus function is disable. Please reboot the projector and enable the auto focus function or use OSD / Remote control / Keypad to set "Manual Focus". <div data-bbox="388 911 936 975" style="background-color: black; color: white; padding: 5px;"> <p data-bbox="410 919 492 930">Auto Focus Error</p> <p data-bbox="410 935 921 967">Please reboot the projector and enable the auto focus function or use OSD / Remote control / Keypad to set "Manual Focus".</p> </div> <ul style="list-style-type: none"> <li data-bbox="394 983 689 1002">• Auto Keystone Is Out of Range. <div data-bbox="388 1007 936 1094" style="background-color: black; color: white; padding: 5px;"> <p data-bbox="410 1015 620 1034">Auto Keystone Is Out Of Range.</p> <p data-bbox="410 1038 779 1058">The range of H/V keystone is between -30 to 30 degree.</p> <p data-bbox="410 1062 904 1082">Please keep rotation / tilt angle of projector is between -30 and 30 degree.</p> </div> <p data-bbox="394 1099 929 1163">The range of H/V keystone is between -30 to 30 degree, Please keep rotation / tilt angle of projector is between -30 and 30 degree.</p> |

Problems with the Projector

| # | Condition | Solution |
|---|--|---|
| 1 | The projector stops responding to all controls | <ul style="list-style-type: none">• If possible, turn off the projector, then unplug the power cord and wait at least 30 seconds before reconnecting power.• Make sure that the control panel lock function is disabled. |
| 2 | Lamp burns out or makes a popping sound | <ul style="list-style-type: none">• When the lamp reaches the end of its useful life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp (For service personnel only)" section. |


LED & Alarm Definition Listing

LED Messages

| Message | Lamp_LED | Temp_LED | Power LED | |
|--|-----------------------|-----------------------|-----------------------|----------------|
| | Red | Red | Red | Blue |
| Input power plug | Flash ON to OFF 100ms | Flash ON to OFF 100ms | Flash ON to OFF 100ms | -- |
| Standby | -- | -- | ON | -- |
| Power button ON | -- | -- | -- | ON |
| Lamp retry | -- | -- | -- | Quick Flashing |
| Power off (Cooling state) | -- | -- | Quick Flashing | -- |
| Power button OFF (cooling completed; standby mode) | -- | -- | ON | -- |
| Error (thermal failure) | -- | ON | -- | ON |
| Error (fan lock) | -- | Quick Flashing | -- | ON |
| Error (lamp breakdown) | ON | -- | -- | ON |
| Error (color wheel fail) | Quick Flashing | -- | -- | ON |

Screen capture by PC tool

- 1 Set "Startup Screen" to "User"
Set the "Startup Screen" to "User" in Setting options menu.
- 2 Enter download mode
Hold both "Power" and "Enter" buttons and then plug in power cord.
Release the buttons until Power/Lamp/Temp LED indicators are lighting red.
- 3 Connect USB cable between PC and projector
Please find the "SERVICE" USB port and plug-in USB cable.

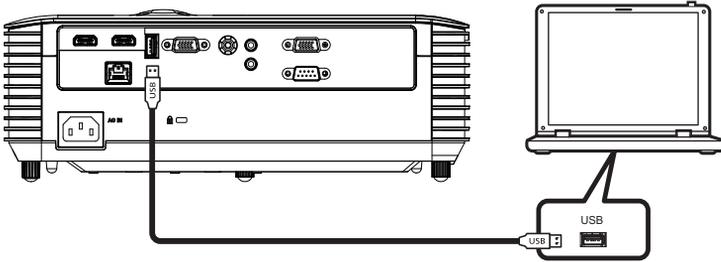

- 4 Copy and Click Splash Downloader
Copy the Acer_Splash_Downloader folder from the CD (User's Guide) to your computer, click the Acer_Splash_Downloader.exe program, and follow the on-screen instructions. If the message says "Projector found", the projector has been connected successfully.



.....

Note: If "Error: No Projector found.", the projector is not connected. Please retry step 2 and step 3.

- 5 Select logo file
Click the "Browse" button and select logo file. The recommended resolution of logo should not exceed the default logo resolution (For example, logo resolution is 1920x1200*). The purpose is that keeping the quality of the image. If not, the logo may be blurred



.....

Note: Support ".bmp/.jpg/.png/.gif/.tiff" file format. (.png file recommendation)

| Projector Type | Default Logo Resolution |
|-----------------|-------------------------|
| XGA Projector | 1024x768 |
| WXGA Projector | 1280x800 |
| 1080P Projector | 1920x1080 |
| WUXGA Projector | 1920x1200 |

- 6 Download logo to projector
Click the "Flash Image" button. If the file was written to projector successfully, the message "Download Complete" will be displayed on the screen.
- 7 Reboot projector
Plug-out the power cord of projector and plug-in it. Please ensure that the logo has been upgraded correctly.
- 8 Operating system compatibility

| | |
|---------------------------|-------------|
| Operating system platform | compatible |
| Windows XP | Not support |
| Windows 7 (64 bit) | Support |
| Windows 10 (64 bit) | Support |
| Mac OS | Not support |
| Windows 11 | Support |

Replacing the Lamp (For service personnel only)

The projector will detect the lamp life. You will be shown a warning message "**Lamp is approaching the end of its useful life in full power operation. Replacement suggested!**" When you see this message, change the lamp as soon as possible. Make sure the projector has been cooling down for at least 45 minutes before changing the lamp.



Warning:  The lamp compartment is hot! Allow it to cool down before changing the lamp.


Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

Warning: Do not attempt to replace the lamp yourself. Contact the qualified service personnel for replacement.


Ceiling Mount Installation

If you wish to install the projector using a ceiling mount, please refer to the steps below:


- 1 Drill four holes into a solid, structural ceiling member, and secure the ceiling mount base to the ceiling.

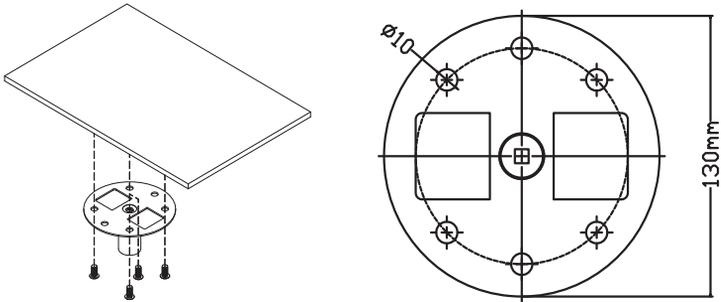

- 2 Choose the length combination based on actual environment. (CM-015 doesn't include Type 2 and Type 3.)

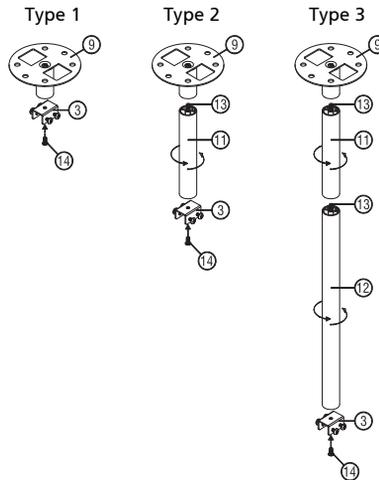

- 3 Type 1:
 For the standard size use three bracket screws to mount the projector to the ceiling mount bracket.
 Type 2 and Type 3:
 Alternatively, for the larger size, use the sliding extensions for more supports.

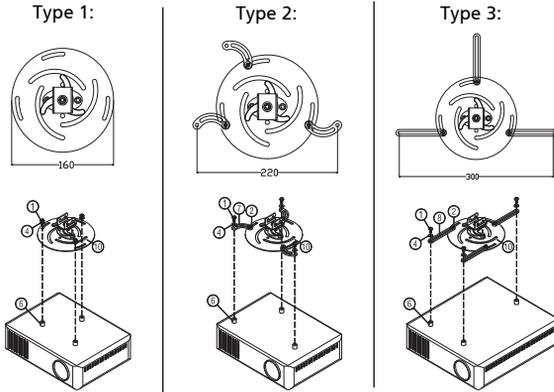

Note: It is recommended that you keep a reasonable space between the bracket and the projector to allow for proper heat distribution.

- 4 Connect the main body connector to the projector bracket (illustration 1), and then screw up four screws (illustration 2).

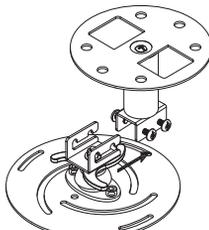


Illustration 1




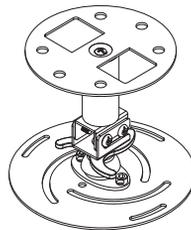


Illustration 2

- 5 Adjust the angle and positioning as necessary.

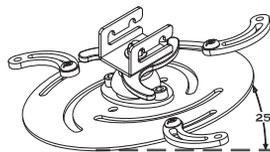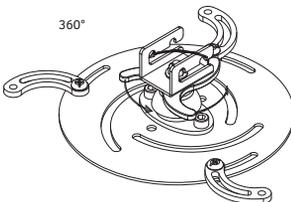

| Screw Type B | | Washer Type | |
|---------------|-------------|-------------|-------|
| Diameter (mm) | Length (mm) | Large | Small |
| 4 | 25 | V | V |

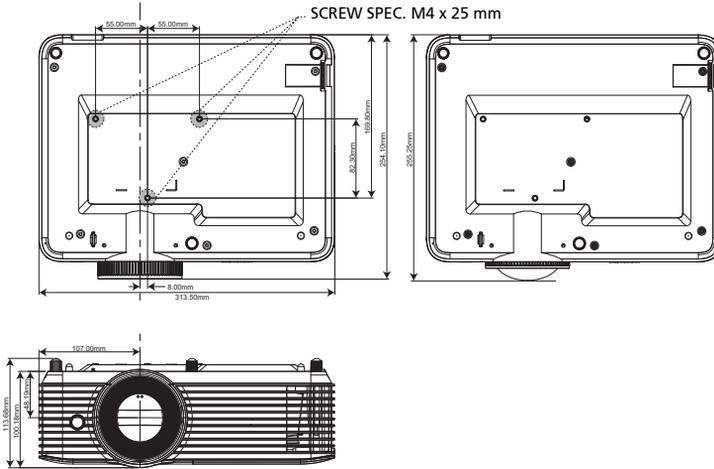

Specifications

The specifications listed below are subject to change without notice. For final specs, please refer to Acer's published marketing specifications.

| | |
|----------------------------|---|
| Projection system | DLP® |
| Computer compatibility | IBM PC and compatibles, Apple Macintosh, iMac and VESA standards: SXGA, XGA, VGA, SVGA, SXGA+, WXGA, WXGA+, WSXGA + |
| Video compatibility | NTSC (3.58/4.43), PAL (B/D/G/H/I/M/N), SECAM (B/D/G/K/K1/L), HDTV (720p, 1080i, 1080p), EDTV (480p, 576p), SDTV (480i, 576i) |
| Displayable colors | 1.07 billion colors |
| Horizontal scan rate | 15 - 100 kHz |
| Vertical refresh scan rate | 24 - 120 Hz |
| Digital zoom | 0.8x ~ 2.0x |
| Power supply | AC input 100 - 240 V auto-switching power supply |
| Operating temperature | 0°C to 40°C / 32°F to 104°F |
| Standard package contents | <ul style="list-style-type: none"> • AC power cord x1 • HDMI cable x1 (option) • VGA cable x1 (option) • Remote control x1 • AAA battery x2 (for remote control) (option) • Quick start guide (Projector) x1 • Quick start guide (Media/Wireless function) (option) x1 • Security card x1 (option) • Carrying case x1 (option) |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X1126AH/X1127i/D506AD/D606Di/D606D+/EV-S57AH/V60Si/V60S/V26AS/
AS610i/AS610/AS600A/EV-S57i/DX125A/BS-025i/BS-025A/DX125i/KS320A/
KS320i/X118HP/BS-012P/DSV1844/DSV1912/X1128H/DS608/V65S/AS620/
EV-S77H/BS-027/DX127/KS321/X119H/BS-014/X1128i/DS608i/V65Si/AS620i/
EV-S77i/BS-027i/DX127i/KS321i/X119i/BS-014i/X1128HKi/X1128HPi/X1131i/
X1131Ki/X1128HK/X1128HP/X1131/X1131K/X1126HK/X118HK/X1128Ki/
X1128Pi/X1131i/X1128PKi/X1131Ki/X1128PK/X1128ic/BS-021A/X1128/X1128p/
DS608pr/V66Sp/ AS620pr/X1128pic/DS608prc/ V66Spic/DSV2514/X1128Hr/
DS608r/V66S/AS620r/DSV2512/DS608p/V65Sp/AS620p/DX127p/KS321p/X119/
DS608p/V65Spi

| | |
|------------------------------------|---|
| Resolution | 800x600 SVGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.94 ~ 2.16 (51" @2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.01mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 23" ~ 300" (58cm ~ 762cm) |
| Projection distance | 1.0m ~ 11.8m (3.3' ~ 38.8') |
| Lamp type | 220W or 240W lamp |
| Audio | Internal speaker with 3W x 1 outputt |
| Weight | 2.8 Kg (6.17 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode: < 0.5W |

| | | | |
|----------------|--|--|--|
| I/O connectors | X1126AH/D506AD/D606D+/EV-S57AH/V60S/V26AS/AS610/AS600A/DX125A/BS-025A/KS320A/X118HP/BS-012P/DSV1844/X1128H/DS608/V65S/AS620/EV-S77H/BS-027/DX127/KS321/X119H/BS-014/X1128HK/X1128HP/X1131/X1131K/X1126HK/X118HK/X1128PK/BS-021A/X1128Hr/DS608r/V66S/AS620r/DSV2512 | X1127i/D606Di/V60Si/AS610i/EV-S57i/BS-025i/DX125i/KS320i/DSV1912/X1128i/DS608i/V65Si/AS620i/EV-S77i/BS-027i/DX127i/KS321i/X119i/BS-014i/X1128HKi/X1128HPi/X1131i/X1131Ki/X1128Ki/X1128Pi/X1131i/X1128PKi | X1128/X1128p/DS608pr/V66Sp/AS620pr/X1128pic/DS608prc/V66Spic/DSV2514/DS608p/V65Sp/AS620p/DX127p/KS321p/X119/X1128ic/DS608pic/V65Spic/BS-014P/DSV2409 |
| Power socket | V | V | V |
| VGA IN | V | V | V |
| HDMI 1 | V | V | V |
| HDMI 2 | X | X | V |

| | | | |
|--------------------------|---|---|---|
| Composite video | V | V | V |
| RS232 | V | V | V |
| 3.5 mm audio jack input | V | V | V |
| 3.5 mm audio jack output | V | V | V |
| 5V DC output | V | V | V |
| USB A1 (Wireless dongle) | X | V | X |
| VGA output | V | X | V |



.....
Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X118H/X118AH/X118/D606D/D606B/D606/EV-S65H/EV-S65A/EV-S65/V36S/
V36SB/V16S/AS319/AS319E/AS309/DX112/DX112C/DX112G/BS-012/BS-012K/
BS-012E/KS316/KS316A/KS316B/X1123HG/X1186G/X118HG/DSV1725/DSV1726/
DSV1727

| | |
|------------------------------------|--|
| Resolution | 800x600 SVGA resolution • Maximum: UXGA (1600 x 1200), WUXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.94 ~ 2.16 (51" @2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.01mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 23" ~ 300" (58cm ~ 762cm) |
| Projection distance | 1.0m ~ 11.8m (3.3' ~ 38.8') |
| Lamp type | 203 W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.7 Kg (5.95 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 240W ± 10% @ 110VAC ECO mode: 195W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | X118H/D606D/ EV-S65H/V36S/AS319/ DX112/BS-012/KS316/ X1123HG/X118HG/ DSV1725 | X118AH/D606B/ EV-S65A/V36SB/ AS319E/DX112C/ BS-012K/KS316A/ DSV1726 | X118/D606/EV-S65/ V16S/AS309/DX112G/ BS-012E/KS316B/ X1186G/DSV1727 |
|-------------------------|--|---|--|
| Power socket | V | V | V |
| VGA IN | V | X | V |
| HDMI | V | V | X |
| Composite video | V | X | X |
| 3.5 mm audio jack input | V | X | X |
| 5V DC output | V | V | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

S1286HN/S1286H/T411DT/T411D/XS-X31HG/XS-X31H/F1286HN/F1286H/SE210L/SE210/DS-110T/DS-110/S1286GH/DNX1712/DNX1713/S1287/S1287H/T415/V65XS/S1287ic/SE113/DS-113/SE113ic/DS-113ic/DNX2405/S1287n/T415n/V66XSn/XS-X35HG/ F1287N/S1287n+/ X12285Tn/SE211L/ DS-111T/DNX2517

| | |
|------------------------------------|---|
| Resolution | 1024x768 XGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), W5XGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.0X |
| Throw ratio | 0.617 (100" @ 1.25m) |
| Projection lens | F = 2.7, f = 7.15mm, Manual Focus |
| Projection screen size (diagonal) | 32" ~ 300" (81cm ~ 762cm) |
| Projection distance | 0.4m ~ 3.8m (1.3' ~ 12.3') |
| Lamp type | 220W or 240W lamp |
| Audio | <ul style="list-style-type: none"> S1286HN/S1286H/T411DT/T411D/XS-X31HG/XS-X31H/F1286HN/F1286H/SE210L/SE210/DS-110T/DS-110/DNX1712/DNX1713/S1287/S1287H/T415/V65XS/S1287ic/SE113/DS-113/SE113ic/DS-113ic/DNX2405/S1287n/T415n/ V66XSn/XS-X35HG/ F1287N/ S1287n+/ X12285Tn/SE211L/ DS-111T/DNX2517 series: Internal speaker with 16W x 1 output S1286GH series: Internal speaker with 10W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 255.3mm x 113.7mm (12.3" x 10.0" x 4.5") |
| Power consumption | Normal mode: 270W ± 10% or 285W ± 15% @ 110VAC ECO mode: 210W ± 15% @ 110VAC Standby mode < 0.5W |

| I/O connectors | S1286H/T411D/ XS-X31H/ F1286H/SE210/ DS-110/ S1286GH/ DNX1713 | S1286HN/ T411DT/XS- X31HG/F1286HN/ SE210L/DS-110T/ DNX1712 | S1287/S1287H/ T415/V65XS/ S1287ic/SE113/ DS-113/SE113ic/ DS-113ic/ DNX2405 | S1287n/T415n/ V66XSn/XS- X35HG/ F1287N/ S1287n+/ X12285Tn/SE211L/ DS-111T/DNX2517 |
|--------------------------|--|--|---|--|
| Power socket | V | V | V | V |
| VGA IN | V | X | V | V |
| HDMI | V | X | X | X |
| Composite video | V | V | V | V |
| RS232 | V | V | V | V |
| 3.5 mm audio jack input | V | V | V | V |
| 3.5 mm audio jack output | V | V | V | V |
| 5V DC output | V | X | V | V |
| HDMI 1 | X | V | V | V |
| HDMI 2 | X | V | V | V |
| VGA IN 1 | X | V | X | X |
| VGA IN 2 | X | V | X | X |
| RJ45 LAN input | X | V | X | V |
| VGA output | V | V | V | V |

| | | | | |
|--------------------------|---|---|---|---|
| USB A1 (Wireless dongle) | X | V | X | X |
| USB A2 (DC 5V output) | X | V | X | X |



.....
Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

S1288HN/S1288H/T413DT/T413D/XS-X33HG/XS-X33H/F1288HN/F1288H/SE212L/SE212/DS-112T/DS-112/DNX1810/DNX1811

| | |
|------------------------------------|--|
| Resolution | 1024x768 XGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.0X |
| Throw ratio | 0.617 (100"@1.25m) |
| Projection lens | F = 2.7, f = 7.15mm, Manual Focus |
| Projection screen size (diagonal) | 32" ~ 300" (81cm ~ 762cm) |
| Projection distance | 0.4m ~ 3.8m (1.3' ~ 12.3') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 16W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 255.3mm x 113.7mm (12.3" x 10.0" x 4.5") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | S1288H/T413D/XS-X33H/ F1288H/SE212/DS-112/ DNX1811 | S1288HN/T413DT/XS-X33HG/ F1288HN/SE212L/DS-112T/ DNX1810 |
|--------------------------|--|--|
| Power socket | V | V |
| VGA IN | V | X |
| HDMI | V | X |
| Composite video | V | V |
| RS232 | V | V |
| 3.5 mm audio jack input | V | V |
| 3.5 mm audio jack output | V | V |
| 5V DC output | V | X |
| HDMI 1 | X | V |
| HDMI 2 | X | V |
| VGA IN 1 | X | V |
| VGA IN 2 | X | V |
| RJ45 LAN input | X | V |
| VGA output | V | V |
| USB A1 (Wireless dongle) | X | V |
| USB A2 (DC 5V output) | X | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X1226AH/X1227i/D516AD/D616Di/D616D+/EV-X57AH/V60Xi/V60X/V26AX/
 AX610i/AX610/AX600A/EV-X57i/DX225A/BS-125i/BS-125A/DX225i/KX320A/
 KX320i/X128HP/BS-112P/DNX1843/DNX1911/X1228H/DX608/V65X/AX620/
 EV-X77H/BS-127/DX227/KX321i/X129H/BS-114/X1228i/DX608i/V65Xi/AX620i/
 EV-X77i/BS-127i/DX227i/KX321i/X129i/BS-114i/X1228HKi/X1228HPi/X1231i/
 X1231Ki/X1228HK/X1228HP/X1231/X1231K/X1226HK/X128HK/BS-112K/
 X1227AH/X1228Ki/X1228Pi/X1231i/X1228PKi/X1231Ki/X1128Ki/X1128Pi/
 X1131i/X1128PKi/X1131Ki/X1228Hn/DX608n/V65Xn/DNX2305/X1228c/X1228/
 X1228p/DX608pr/V66Xp/AX620pr/X1228pic/DX608prc/V66Xpic/DNX2515/
 X1228Hr/DX608r/V66X/AX620r/DNX2513/X1228Stn/DX608p/V65Xp/AX620p/
 DX227p/KX321p/X129/DX608pi/V65Xpi/BS-114P

| | |
|------------------------------------|---|
| Resolution | 1024x768 XGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.94 ~ 2.16 (51" @ 2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.01mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 23" ~ 300" (58cm ~ 762cm) |
| Projection distance | 1.0m ~ 11.8m (3.3' ~ 38.8') |
| Lamp type | 240 or 220W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.8 Kg (6.17 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | | | | |
|----------------|--|--|---|---|
| I/O connectors | X1226AH/D516AD/ D616D+/EV-X57AH/ V60X/V26AX/AX610/ AX600A/DX225A/ BS-125A/KX320A/ X128HP/BS-112P/ DNX1843/X1228H/ DX608/V65X/AX620/ EV-X77H/BS-127/ DX227/KX321/X129H/ BS-114/X1228HK/ X1228HP/X1231/ X1231K/X1226HK/ X128HK/BS-112K/ X1227AH/X1228Hr/ DX608r/V66X/ AX620r/DNX2513 | X1227i/D616Di/ V60Xi/AX610i/ EV-X57i/BS-125i/ DX225i/KX320i/ DNX1911/X1228i/ DX608i/V65Xi/ AX620i/EV-X77i/ BS-127i/DX227i/ KX321i/X129i/ BS-114i/X1228HKi/ X1228HPi/X1231i/ X1231Ki/X1228Ki/ X1228Pi/X1231i/ X1228PKi/X1231Ki/ X1128Ki/X1128Pi/ X1131i/X1128PKi/ X1131Ki | X1228Hn/ DX608n/ V65Xn/ DNX2305/ X1228Stn | X1228/ DX608p/ V65Xp/ AX620p/ DX227p/ KX321p/ X129/ X1228i/ X1228ic/ DX608pi/ V65Xpi/ BS-114P/ X1228p/ DX608pr/ V66Xp/ AX620pr/ X1228pic/ DX608prc/ V66Xpic/ DNX2515 |
| Power socket | V | V | V | V |
| VGA IN | V | V | V | V |
| HDMI 1 | V | V | V | V |

| | | | | |
|--------------------------|---|---|---|---|
| HDMI 2 | X | X | V | V |
| Composite video | V | V | V | V |
| RS232 | V | V | V | V |
| 3.5 mm audio jack input | V | V | V | V |
| 3.5 mm audio jack output | V | V | V | V |
| 5V DC output | V | V | V | V |
| USB A1 (Wireless dongle) | X | V | X | X |
| VGA output | V | X | V | V |
| LAN (RJ45) | X | X | V | X |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X128H/X128GH/X128/D616D/D616/EV-X65H/EV-X65/V36X/V36XC/AX319/
AX319D/DX212/DX212G/BS-112/BS-112E/KX316/KX316B/X1223HG/X1286G/
X128HG/DNX1723/DNX1851/DNX1724

| | |
|------------------------------------|---|
| Resolution | 1024x768 XGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.94 ~ 2.16 (51" @2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.01mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 23" ~ 300" (58cm ~ 762cm) |
| Projection distance | 1.0m ~ 11.8m (3.3' ~ 38.8') |
| Lamp type | 203 W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.7 Kg (5.95 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 240W ± 10% @ 110VAC ECO mode: 195W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | X128/D616/EV-X65/ V36XC/AX319D/ DX212G/BS-112E/ KX316B/X1286G/ DNX1724 | X128H/D616D/EV- X65H/V36X/AX319/ DX212/BS-112/KX316/ X1223HG/X128HG/ DNX1723 | X128GH/DNX1851 |
|--------------------------|--|--|----------------|
| Power socket | V | V | V |
| VGA IN | V | V | V |
| HDMI | X | V | X |
| HDMI 1 | X | X | V |
| HDMI 2 | X | X | V |
| Composite video | X | V | V |
| RS232 | X | X ^(*) | X |
| 3.5 mm audio jack input | X | V | V |
| 3.5 mm audio jack output | X | X | V |
| 5V DC output | V | V | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

S1386WHN/S1386WH/T421DT/T421D/XS-W31HG/XS-W31H/F1386WHN/
 F1386WH/SE410L/SE410/DS-310T/DS-310/DWX1711/DWX1734/S1387/S1387WH/
 /T425/V65WS/S1387ic/SE413 /DS-313/SE413ic/DS-313ic/DWX2406/S1387n/T425n/
 V66WSn/XS-W35HG/F1387N/ S1387n+ / X1328STn/ SE411L/ DS-311T/ DWX2518

| | |
|---------------------------------------|--|
| Resolution | 1280x800 WXGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.0X |
| Throw ratio | 0.521 (100" @ 1.12m) |
| Projection lens | F = 2.8, f = 7.51mm, Manual Focus |
| Projection screen size (diagonal) | 36" ~ 300" (91cm ~ 762cm) |
| Projection distance | 0.4m ~ 3.4m (1.3' ~ 11.0') |
| Lamp type | 220W or 240W lamp |
| Audio | Internal speaker with 16W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 255.3mm x 113.7mm (12.3" x 10.0" x 4.5") |
| Power consumption | Normal mode: 270W ± 10% or 285W ± 15% @ 110VAC ECO mode: 210W ± 15% @ 110VAC Standby mode < 0.5W |

| I/O connectors | S1386WH/ T421D/XS- W31H/ F1386WH/ SE410/DS-310/ DWX1734 | S1386WHN/ T421DT/XS- W31HG/ F1386WHN/ SE410L/DS- 310T/DWX1711 | S1387/ S1387WH/ / T425/V65WS/ S1387ic/SE413 / DS-313/SE413ic/ DS-313ic/ DWX2406 | S1387n/T425n/ V66WSn/ XSW35HG/ F1387N/ S1387n+/ X1328STn/ SE411L/ DS-311T/ DWX2518 |
|--------------------------|--|--|---|--|
| Power socket | V | V | V | V |
| VGA IN | V | X | V | V |
| HDMI | V | X | X | X |
| Composite video | V | V | V | V |
| RS232 | V | V | V | V |
| 3.5 mm audio jack input | V | V | V | V |
| 3.5 mm audio jack output | V | V | V | V |
| 5V DC output | V | X | V | V |
| HDMI 1 | X | V | V | V |
| HDMI 2 | X | V | V | V |
| VGA IN 1 | X | V | X | X |
| VGA IN 2 | X | V | X | X |
| RJ45 LAN input | X | V | X | V |
| VGA output | V | V | V | V |
| USB A1 (Wireless dongle) | X | V | X | X |

| | | | | |
|-----------------------|---|---|---|---|
| USB A2 (DC 5V output) | X | V | X | X |
|-----------------------|---|---|---|---|



.....
Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

S1388WHN/S1388WH/T423DT/T423D/XS-W33HG/XS-W33H/F1388WHN/
F1388WH/SE412L/SE412/DS-312T/DS-312/DWX1809/DWX1737

| | |
|---------------------------------------|---|
| Resolution | 1280x800 WXGA resolution • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.0X |
| Throw ratio | 0.521 (100" @1.12m) |
| Projection lens | F = 2.8, f = 7.51mm, Manual Focus |
| Projection screen size (diagonal) | 36" ~ 300" (91cm ~ 762cm) |
| Projection distance | 0.4m ~ 3.4m (1.3' ~ 11.0') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 16W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 255.3mm x 113.7mm (12.3" x 10.0" x 4.5") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | S1388WH/T423D/XS-W33H/ F1388WH/SE412/DS-312/ DWX1737 | S1388WHN/T423DT/XS-W33HG/ F1388WHN/SE412L/DS-312T/ DWX1809 |
|--------------------------|--|--|
| Power socket | ✓ | ✓ |
| VGA IN | ✓ | ✗ |
| HDMI | ✓ | ✗ |
| Composite video | ✓ | ✓ |
| RS232 | ✓ | ✓ |
| 3.5 mm audio jack input | ✓ | ✓ |
| 3.5 mm audio jack output | ✓ | ✓ |
| 5V DC output | ✓ | ✗ |
| HDMI 1 | ✗ | ✓ |
| HDMI 2 | ✗ | ✓ |
| VGA IN 1 | ✗ | ✓ |
| VGA IN 2 | ✗ | ✓ |
| RJ45 LAN input | ✗ | ✓ |
| VGA output | ✓ | ✓ |
| USB A1 (Wireless dongle) | ✗ | ✓ |
| USB A2 (DC 5V output) | ✗ | ✓ |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X1328AF/SW608F/V65WF/DWX2310/X1326AWH/X1327Wi/D526AD/D626Di/D626D+/EV-W57AH/V60Wi/V60W/V26AW/AW610i/AW610/AW600A/EV-W57i/DX425A/BS-325i/BS-325A/DX425i/KW320A/KW320i/X138WHP/H5386BDi+/BS-312P/DWX1842/DWX1910/X1328WH/DW608/V65W/AW620/EV-W77H/BS-327/DX427/KW321/X139WH/BS-314/X1328Wi/DW608i/V65Wi/AW620i/EV-W77i/BS-327i/DX427i/KW321i/X139Wi/BS-314i/X1328Wki/X1328Wpi/X1331Wi/X1328WHki/X1331Wki/X1328Wk/X1328WHP/X1331W/X1328WHk/X1331Wk/X1326VHK/X138WHK/BS-312K/BS-312PK/BS-112PK/X1328Wpi/X1328PKi/X1331Wki/X1328WPK/X1331Wk/X1326WHK/X138WHK/BS-312PK/X1328WHn/DW608n/V65Wn/DWX2306/X1328Wi/X1328Wic/X1328/X1328p/DW608pr/V66Wp/AW620pr/X1328pic/DW608prc/V66Wpic/DWX2516/X1328STn/X1328i/X1328ic/DX427p/KW321p/X139WHP/DW608p/V65Wp

| | |
|---------------------------------------|--|
| Resolution | 1280x800 WXGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.54 ~ 1.72 (60" @2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.00mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 27" ~ 300" (75cm ~ 762cm) |
| Projection distance | 1.0m ~ 10m (3.3' ~ 32.7') |
| Lamp type | 220W or 240W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.8 Kg (6.17 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | | | | |
|----------------|---|---|--|---|
| I/O connectors | X1326AWH/D526AD/D626D+/EV-W57AH/V60W/V26AW/AW610/AW600A/DX425A/BS-325A/KW320A/X138WHP/BS-312P/DWX1842/X1328WH/DW608/V65W/AW620/EV-W77H/BS-327/DX427/KW321/X139WH/BS-314/X1328Wk/X1328WHP/X1331W/X1328WHk/X1331Wk/X1326VHK/X138WHK/BS-312K/BS-312PK/BS-112PK/X1328WPK/X1328Wi/X1328Wic | X1327Wi/D626Di/V60Wi/AW610i/EV-W57i/BS-325i/DX425i/KW320i/H5386BDi+/DWX1910/X1328Wi/DW608i/V65Wi/AW620i/EV-W77i/BS-327i/DX427i/KW321i/X139Wi/BS-314i/X1328Wki/X1328Wpi/X1331Wi/X1328WHki/X1331Wki/X1328WHP/X1331Wk/X1328WHP/X1328PKi/X1331Wki | X1328WHn/DW608n/V65Wn/DWX2306/X1328STn | X1328AF/SW608F/V65WF/DWX2310/X1328p/DW608pr/V66Wp/AW620pr/X1328pic/DW608prc/V66Wpic/DWX2516/X1328i/X1328ic/DX427p/KW321p/X139WHP/DW608p/V65Wp/DWX2306 |
| Power socket | V | V | V | V |

| | | | | |
|--------------------------|---|---|---|---|
| VGA IN | V | V | V | V |
| HDMI 1 | V | V | V | V |
| HDMI 2 | X | X | V | V |
| Composite video | V | V | V | V |
| RS232 | V | V | V | V |
| 3.5 mm audio jack input | V | V | V | V |
| 3.5 mm audio jack output | V | V | V | V |
| 5V DC output | V | V | V | V |
| USB A1 (Wireless dongle) | X | V | X | X |
| VGA output | V | X | V | V |
| LAN (RJ45) | X | X | V | X |



.....

Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

X138WH/D626D/EV-W65HV/36W/AW319/DX412/BS-312/KW316/DWX1722

| | |
|------------------------------------|--|
| Resolution | 1280x800 WXGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), W SXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.54 ~ 1.72 (60" @2m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.00mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 27" ~ 300" (75cm ~ 762cm) |
| Projection distance | 1.0m ~ 10m (3.3' ~ 32.7') |
| Lamp type | 203 W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.7 Kg (5.95 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 240W ± 10% @ 110VAC ECO mode: 195W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|-------------------------|---|
| I/O connectors | |
| Power socket | V |
| VGA IN | V |
| HDMI | V |
| Composite video | V |
| 3.5 mm audio jack input | V |
| 5V DC output | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

H5385BDi/H5385BDi+/H5385ABDi/DWX1910/H5386BDi/H5386ABDi/
H5386BDKi/H5386ABDKi

| | |
|------------------------------------|---|
| Resolution | 1280 x 720 720p resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.54 ~ 1.72 (60"@2.1m) |
| Projection lens | F = 2.41 ~ 2.53, f = 21.85mm ~ 24.00mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 26" ~ 301" (67cm ~ 765cm) |
| Projection distance | 1.0m ~ 10.3m (3.3' ~ 33.6') |
| Lamp type | 220W or 240W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.8 Kg (6.17 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | |
|--------------------------|---|
| Power socket | ✓ |
| VGA IN | ✓ |
| HDMI | ✓ |
| Composite video | ✓ |
| RS232 | ✓ |
| 3.5 mm audio jack input | ✓ |
| 3.5 mm audio jack output | ✓ |
| 5V DC output | ✓ |
| USB A1 (Wireless dongle) | ✓ |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

V6520/G550/V151/HT-810/HV533/TH-432/V7500+/D1P1718/D1P1805

| | |
|------------------------------------|--|
| Resolution | 1920x1080 1080p resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.21 ~ 1.59 (75"@2m) |
| Projection lens | F = 1.94 ~ 2.23, f = 12.81mm ~ 16.74mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 28" ~ 300" (72cm ~ 762cm) |
| Projection distance | 1.0m ~ 8.0m (3.3' ~ 26.4') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 272.4mm x 110.7mm (12.3" x 10.7" x 4.4") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|-------------------------|---|
| I/O connectors | |
| Power socket | V |
| Composite video | V |
| RS232 | V |
| 3.5 mm audio jack input | V |
| 5V DC output | V |
| HDMI 1 | V |
| HDMI 2 | V |
| VGA IN 1 | V |
| VGA IN 2 | V |
| VGA output | V |
| AUDIO IN 1 | V |
| AUDIO IN 2 | V |
| 3D SYNC | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

H6545BD/E146F/HE-805L/H6512BD+/V62B/GM534/VH-434/D1P1839/P5550/
N500/PN-605/PR552/MF-452/P5535p/N358p/P5551/ P5550ic/P5551ic/D1P2416/
H6560/E660/GM560 /DH700/ P1560/GM516/VH-416/H6560BD/P1561/H6547/
H6561/H6560ic/H6561c

| | |
|---------------------------------------|---|
| Resolution | 1920x1080 1080p resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.21 ~ 1.59 (75" @2m) or 1.13 ~ 1.47 (60" @1.5m) |
| Projection lens | F = 1.94 ~ 2.23, f = 12.81mm ~ 16.74mm or F = 2.43 ~ 2.78, f = 16.90mm ~ 21.61mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 28" ~ 300" (72cm ~ 762cm) or 31" ~ 300" (78cm ~ 762cm) |
| Projection distance | 1.0m ~ 8.0m (3.3' ~ 26.4') or 1.0m ~ 7.5m (3.3' ~ 24.6') |
| Lamp type | 225 W or 240W lamp |
| Audio | Internal speaker with 3W x 1 output or 10W x1 output |
| Weight | 3.1 Kg (6.83 lbs) or 2.75Kg (6.06lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 272.4mm x 110.7mm (12.3" x 10.7" x 4.4") or 313 mm X 236 mm X 113.7mm (12.3" x 9.27" x 4.47") |
| Power consumption | Normal mode: 265W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | H6545BD/E146F/ HE-805L/ H6512BD+/V62B/ GM534/VH-434/ D1P1839 | P5550/N500/ PN-605/PR552/ MF-452/P5535p/ N358p/P5551/ P5550ic/P5551ic/ D1P2416 | H6560/E660/ GM560 /DH700/ P1560/GM516/ VH-416/H6560BD/ P1561/H6547/ H6561/H6560ic/ H6561ic/D1P2416 |
|--------------------------|--|---|--|
| Throw Ratio | 1.21 ~ 1.59 | 1.13 ~ 1.47 | |
| LAN | | ✓ | |
| Power socket | ✓ | ✓ | ✓ |
| VGA IN | ✓ | | |
| Composite video | ✓ | | |
| RS232 | ✓ | ✓ | ✓ |
| 3.5 mm audio jack input | ✓ | ✓ | ✓ |
| 3.5 mm audio jack output | ✓ | ✓ | ✓ |
| 5V DC output | ✓ | ✓ | ✓ |
| HDMI 1 | ✓ | ✓ | ✓ |
| HDMI 2 | ✓ | ✓ | ✓ |



.....

Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

E558/H6541/H6555A/X1527i/D656Di/V60Fi/AF610i/EV-F57i/BS-425i/DX525i/
 KW320i/H6541BDi/H6541BDi+/H6542ABDi/D1P1909/X1528H/DF608/V65F/
 AF620/EV-F58/BS-427/DX527/KF321/H6546BD/H6546BD+/H6546ABD/X159H/
 D1P1915/X1528i/DF608i/V65Fi/AF620i/EV-F58i/BS-427i/DX527i/KF321i/
 H6546BDi/H6546BDi+/H6546ABDi/H6542ABDi/M457i/X1528Ki/H6546BDKi/
 X1528HPi/X1531i/X1528HKi/X1531Ki/X1528K/H6546BDK/X1528HP/X1531/
 X1528HK/X1531K/X1528PK/X1528Sti/X1528ic/H6532BDi/H6531BDi/H6541Ki/
 H6555AKi/E558Ki/H6542BDi/H6546i/H6546ic/X1528Kic/GS511i/H6546/X1528/
 H6546i/H6546ic/X1527HK/H6541BDK/H6541ic/ H6541id/H6546Kit/ H6541Kit/
 X1528it/ H6546it/ H6541it

| | |
|---------------------------------------|--|
| Resolution | 1920x1080 1080p resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.50 ~ 1.66 or 1.48 ~ 1.62 (60" @ 2 m) |
| Projection lens | F = 1.98 ~ 2.02, f = 15.84mm ~ 17.44mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 27" ~ 301" (69cm ~ 765cm) |
| Projection distance | 1.0m ~ 10m (3.3' ~ 32.7') |
| Lamp type | 220W or 240W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.9Kg(6.4lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W or 290W ± 10% @ 110VAC ECO mode: 205W or 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | | | | | |
|--------------------------|--|--|--|--|--|
| I/O connectors | X1528H/DF608/ V65F/AF620/ EV-F58/BS-427/ DX527/KF321/ H6546BD/ H6546BD+/ H6546ABD/ X159H/D1P1915/ X1528K/ H6546BDK/ X1528HP/X1531/ X1528HK/ X1531K/X1528PK | X1527i/D656Di/ V60Fi/AF610i/EVF57i/ BS-425i/DX525i/ KW320i/H6541BDi/ H6541BDi+/ H6542ABDi/ D1P1909/X1528i/ DF608i/V65Fi/ AF620i/EV-F58i/ BS-427i/DX527i/ KF321i/H6546BDi/ H6546BDi+/ H6546ABDi/ D1P1909/M457i | X1528Ki/ H6546Ki/ H6541Ki/ H6555AKi/ E558Ki/ H6542BDi/ DX527i/ H6531BDi/ H6532BDi/ X1528St/ G5511/ H6546Ki/ H6546Kit/ H6541Kit/ X1528it/ H6546it/ H6541it/ H6556i/ H6531BDi/ H6532BDi/ H6533BDi/ H6542BDi | H6546/ X1528/ H6546ic/ X1528ic/ E558/ H6541/ H6555A/ X1528p/ DF608p/ V65Fp/ E558p/ X1528c/ X1528bt/ D1P2519 | X1527HK/ H6541BDK /H6541ic/ H6541id |
| Throw Ratio | 1.5~1.66 | | 1.48~1.62 | | 1.5~1.66 |
| Power socket | V | V | V | V | V |
| VGA IN | V | V | X | X | X |
| HDMI | V | X | X | X | X |
| HDMI 1 | X | V | V | V | V |
| HDMI 2 | X | V | V | V | V |
| Composite video | V | V | X | V | X |
| RS232 | V | V | V | V | V |
| 3.5 mm audio jack input | V | V | V | V | V |
| 3.5 mm audio jack output | V | V | V | V | V |
| 5V DC output | V | V | V | V | V |
| USB A1 (Wireless dongle) | V | V | V | X | X |
| VGA output | V | X | X | V | X |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

H6521BD/X168H/E155F/D666D/HE-802K/EV-WU65H/GM512/V36U/VH-412/AU319/H6521ABD/DX612/BS-512/KU316/D1P1720/DWU1721

| | |
|------------------------------------|--|
| Resolution | WUXGA resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.1X |
| Throw ratio | 1.47 ~ 1.62 (63" @2m) |
| Projection lens | F = 2.1~2.31, f = 15.59 ~ 17.14mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 29" ~ 300" (73cm ~ 762cm) |
| Projection distance | 1.0m ~ 9.5m (3.3' ~ 31.2') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.8 Kg (6.17 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 110.7mm (12.3" x 9.4" x 4.3") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|-------------------------|---|
| I/O connectors | |
| Power socket | ✓ |
| VGA IN | ✓ |
| HDMI | ✓ |
| Composite video | ✓ |
| 3.5 mm audio jack input | ✓ |
| 5V DC output | ✓ |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

**H6540BD/X1623H/E156D/D860D/HE-806J/EV-WU80H/GM532/V50U/VH-432/
AU540/DX620/BS-520/KU330/D1P1719/DWU1729**

| | |
|------------------------------------|--|
| Resolution | WUXGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.58 ~ 2.06 (59" @2m) |
| Projection lens | F = 2.37 ~ 2.78, f = 16.91mm ~ 21.60mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 27" ~ 300" (69cm ~ 762cm) |
| Projection distance | 1.0m ~ 10.2m (3.3' ~33.6') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 110.7mm (12.3" x 9.4" x 4.3") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|--------------------------|---|
| I/O connectors | |
| Power socket | V |
| VGA IN | V |
| HDMI 2 | V |
| HDMI 1 | V |
| Composite video | V |
| RS232 | V |
| 3.5 mm audio jack input | V |
| 3.5 mm audio jack output | V |
| 5V DC output | V |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

H6518STi/E146Si/HE-802STi/H6517STPi/S1586Hi/GM513S/VH-413S/D1P1914

| | |
|---------------------------------------|--|
| Resolution | 1920x1080 1080p resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WUXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.0X |
| Throw ratio | 0.5 (91" @1.0m) |
| Projection lens | F = 2.8, f = 7.51mm, Manual Focus |
| Projection screen size (diagonal) | 45" ~ 303" (115cm ~ 770cm) |
| Projection distance | 0.5m ~ 3.4m (1.6' ~ 11.0') |
| Lamp type | 240W lamp |
| Audio | Internal speaker with 3W x 1 output |
| Weight | 2.95kg (6.5lb) |
| Dimensions (W x D x H) (with feet) | 313mm x 240mm x 113.7mm (12.3" x 9.4" x 4.5") |
| Power consumption | Normal mode: 275W ± 10% @ 110VAC ECO mode: 205W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | |
|--------------------------|---|
| Power socket | ✓ |
| VGA IN | ✓ |
| HDMI 1 | ✓ |
| HDMI 2 | ✓ |
| Composite video | ✓ |
| RS232 | ✓ |
| 3.5 mm audio jack input | ✓ |
| 3.5 mm audio jack output | ✓ |
| 5V DC output | ✓ |
| USB A1 (Wireless dongle) | ✓ |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

HV532/D1P1718

| | |
|---------------------------------------|--|
| Resolution | WUXGA resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto,Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.21 ~ 1.59 (77" @2m) |
| Projection lens | F = 1.94 ~ 2.23, f = 12.81mm ~ 16.74mm, Manual Zoom & Focus |
| Projection screen size (diagonal) | 35" ~ 300" (89cm ~ 762cm) |
| Projection distance | 1.0m ~ 7.8m (3.3' ~ 25.6') |
| Lamp type | 250 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 3.1 Kg (6.83 lbs) |
| Dimensions (W x D x H) (with feet) | 313mm x 272.4mm x 110.7mm (12.3" x 10.7" x 4.4") |
| Power consumption | Normal mode: 300W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|--------------------------|---|
| I/O connectors | |
| Power socket | V |
| Composite video | V |
| RS232 | V |
| 3.5 mm audio jack output | V |
| 5V DC output | V |
| HDMI 1 | V |
| HDMI 2 | V |
| VGA IN 1 | V |
| VGA IN 2 | V |
| VGA output | V |
| AUDIO IN 1 | V |
| AUDIO IN 2 | V |
| 3D SYNC | V |



.....
Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

P1258i/ DX650/ V68Xi/ EV-X77Zi/ BS-127Zi/ DX227Zi/ KX321Zi/ X129Zi/ BS-114Zi/ P1258i+/ DNX2502

| | |
|------------------------------------|---|
| Resolution | 1024x768 XGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9 |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.48~1.93 (Wide 51" @1.5m; Tele 51" @2m) |
| Projection lens | f=16.90mm (Wide) ~ 21.61mm (Tele) @C19U F#=2.43 (Wide) ~ 2.78 (Tele) @C19U Manual Zoom & Focus |
| Projection screen size (diagonal) | 26" ~ 266" (66cm ~ 676cm) |
| Projection distance | 1.0m ~ 8.0m (3.3' ~ 26.2') |
| Lamp type | 240 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 2.9Kg (6.4lbs) |
| Dimensions (W x D x H) (with feet) | 313 mm X 236 mm X 113.7mm (12.3" x 9.27" x 4.47") |
| Power consumption | Normal mode: 290W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| I/O connectors | P1258i/ DX650/ V68Xi/ EV-X77Zi/ BS-127Zi/ DX227Zi/ KX321Zi/ X129Zi/ BS-114Zi/ P1258i+/ DNX2502 |
|---------------------------|--|
| Power socket | V |
| VGA IN | V |
| HDMI 1 | V |
| HDMI 2 | V |
| Composite video | V |
| RS232 | V |
| 3.5 mm audio jack input | V |
| 3.5 mm audio jack output | V |
| 5V DC output | V |
| USB A 1 (Wireless dongle) | V |
| VGA output | X |

**P1358i/ DW650/V68Wi/EV-W77Zi/BS-327Zi/DX427Zi/KW321Zi/X139Zi/BS-314Zi/
H5386Zi/P1328i+/H5360i/DWX2503**

| | |
|---------------------------------------|--|
| Resolution | 1280x800 WXGA resolution <ul style="list-style-type: none"> Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, Full, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.18 ~ 1.54 (Wide 60" @1.5m; Tele 60" @2m) |
| Projection lens | f=16.90mm (Wide) ~ 21.61mm (Tele) @C19U F#=2.43 (Wide) ~ 2.78 (Tele) @C19U Manual Zoom & Focus |
| Projection screen size (diagonal) | 30" ~ 315" (76cm ~ 800cm) |
| Projection distance | 1.0m ~ 8.0m (3.3' ~ 26.2') |
| Lamp type | 240 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 2.9Kg (6.4lbs) |
| Dimensions (W x D x H) (with feet) | 313 mm X 236 mm X 113.7mm (12.3" x 9.27" x 4.47") |
| Power consumption | Normal mode: 290W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|---------------------------|--|
| I/O connectors | P1358i/ DW650/V68Wi/EV-W77Zi/BS-327Zi/DX427Zi/ KW321Zi/X139Zi/BS-314Zi/H5386Zi/P1328i+/H5360i/ DWX2503 |
| Power socket | V |
| VGA IN | V |
| HDMI 1 | V |
| HDMI 2 | V |
| Composite video | V |
| RS232 | V |
| 3.5 mm audio jack input | V |
| 3.5 mm audio jack output | V |
| 5V DC output | V |
| USB A 1 (Wireless dongle) | V |
| VGA output | X |

**P1558i/HF200/E618/H6546Zi/H6541Zi/H6555Zi/H6542Zi/DX527Zi/H6547i/H6560i/
X1528Zi/GS512/H6547it/H6560it/P1558i+/D1P2504**

| | |
|---------------------------------------|--|
| Resolution | 1920x1080 1080p resolution <ul style="list-style-type: none"> • Maximum: UXGA (1600 x 1200), WSXGA+ (1680x1050), 1080p(1920x1080), WUXGA-RB (1920 x 1200) |
| Aspect ratio | Auto, 4:3, 16:9, L.Box |
| Optical zoom ratio | 1.3X |
| Throw ratio | 1.12~1.47 (Wide 61" @1.5m; Tele 61" @2m) |
| Projection lens | f=16.90mm (Wide) ~ 21.61mm (Tele) @C19U F#=2.43 (Wide) ~ 2.78 (Tele) @C19U Manual Zoom & Focus |
| Projection screen size (diagonal) | 31" ~ 322"(79cm ~ 818cm) |
| Projection distance | 1.0m ~ 8.0m (3.3' ~ 26.2') |
| Lamp type | 240 W lamp |
| Audio | Internal speaker with 10W x 1 output |
| Weight | 2.9Kg (6.4lbs) |
| Dimensions (W x D x H) (with feet) | 313 mm X 236 mm X 113.7mm (12.3" x 9.27" x 4.47") |
| Power consumption | Normal mode: 290W ± 10% @ 110VAC ECO mode: 210W ± 10% @ 110VAC Standby mode < 0.5W |

| | |
|---------------------------|---|
| I/O connectors | P1558i/HF200/E618/H6546Zi/H6541Zi/H6555Zi/H6542Zi/ DX527Zi/H6547i/H6560i/X1528Zi/GS512/H6547it/H6560it/ P1558i+/D1P2504 |
| Power socket | V |
| VGA IN | X |
| HDMI 1 | V |
| HDMI 2 | V |
| Composite video | X |
| RS232 | V |
| 3.5 mm audio jack input | V |
| 3.5 mm audio jack output | V |
| 5V DC output | V |
| USB A 1 (Wireless dongle) | V |
| VGA output | X |



Note 1: Design and specifications are subject to change without notice.

Note 2: * Functions vary depending on model definition.

Compatibility modes

A. VGA Analog

1 VGA Analog - PC Signal

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|---------------|------------|------------------|-------------------|
| VGA | 640x480 | 60 | 31.5 |
| | 640x480 | 72 | 37.9 |
| | 640x480 | 75 | 37.5 |
| | 640x480 | 85 | 43.3 |
| | 640x480 | 120 | 61.9 |
| SVGA | 800x600 | 56 | 35.1 |
| | 800x600 | 60 | 37.9 |
| | 800x600 | 72 | 48.1 |
| | 800x600 | 75 | 46.9 |
| | 800x600 | 85 | 53.7 |
| XGA | 800x600 | 120 | 77.4 |
| | 1024x768 | 60 | 48.4 |
| | 1024x768 | 70 | 56.5 |
| | 1024x768 | 75 | 60.0 |
| | 1024x768 | 85 | 68.7 |
| SXGA | 1024x768 | 120 | 99.0 |
| | 1152x864 | 70 | 63.8 |
| | 1152x864 | 75 | 67.5 |
| | 1152x864 | 85 | 77.1 |
| | 1280x1024 | 60 | 64.0 |
| QuadVGA | 1280x1024 | 72 | 77.0 |
| | 1280x1024 | 75 | 80.0 |
| | 1280x1024 | 85 | 91.1 |
| | 1280x960 | 60 | 60.0 |
| | 1280x960 | 75 | 75.2 |
| SXGA+ | 1400x1050 | 60 | 65.3 |
| UXGA | 1600x1200 | 60 | 75.0 |
| PowerBook G4 | 640x480 | 60 | 31.4 |
| PowerBook G4 | 640x480 | 66.6(67) | 34.9 |
| PowerBook G4 | 800x600 | 60 | 37.9 |
| PowerBook G4 | 1024x768 | 60 | 48.4 |
| PowerBook G4 | 1152x870 | 75 | 68.7 |
| PowerBook G4 | 1280x960 | 75 | 75.0 |
| i Mac DV (G3) | 1024x768 | 75 | 60.0 |

2 VGA Analog - Extended Wide timing

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|--------|----------------------|------------------|-------------------|
| WXGA | 1280x768 | 60 | 47.8 |
| | 1280x768 | 75 | 60.3 |
| | 1280x768 | 85 | 68.6 |
| | 1280x720 | 60 | 44.8 |
| | 1280x720 | 120 | 92.9 |
| | 1280x800 | 60 | 49.6 |
| | 1280x800 | 119.909 | 101.6 |
| | 1920x1200 | 60 | 74 |
| | 1440x900 | 60 | 59.9 |
| | 1680x1050 | 60 | 65.3 |
| WSXGA+ | 1920x1080 (1080P) | 60 | 67.5 |
| | 1366x768 | 60 | 47.7 |
| | 1920x1200-RB | 59.94 | 74.04 |

3 VGA Analog -Component Signal

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|-------|-------------------|------------------|-------------------|
| 480i | 720x480(1440x480) | 59.94 (29.97) | 15.7 |
| 576i | 720x576(1440x576) | 50(25) | 15.6 |
| 480p | 720x480 | 59.94 | 31.5 |
| 576p | 720x576 | 50 | 31.3 |
| 720p | 1280x720 | 60 | 45.0 |
| 720p | 1280x720 | 50 | 37.5 |
| 1080i | 1920x1080 | 60(30) | 33.8 |
| 1080i | 1920x1080 | 50(25) | 28.1 |
| 1080p | 1920x1080 | 23.97/24 | 27.0 |
| 1080p | 1920x1080 | 60 | 67.5 |
| 1080p | 1920x1080 | 50 | 56.3 |

B. HDMI Digital

1 HDMI - PC Signal

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|-------|------------|------------------|-------------------|
| VGA | 640x480 | 60 | 31.5 |
| | 640x480 | 72 | 37.9 |
| | 640x480 | 75 | 37.5 |
| | 640x480 | 85 | 43.3 |

| | | | |
|---------------|-----------|----------|------|
| | 640x480 | 120 | 61.9 |
| SVGA | 800x600 | 56 | 35.1 |
| | 800x600 | 60 | 37.9 |
| | 800x600 | 72 | 48.1 |
| | 800x600 | 75 | 46.9 |
| | 800x600 | 85 | 53.7 |
| | 800x600 | 120 | 77.4 |
| XGA | 1024x768 | 60 | 48.4 |
| | 1024x768 | 70 | 56.5 |
| | 1024x768 | 75 | 60.0 |
| | 1024x768 | 85 | 68.7 |
| | 1024x768 | 120 | 99.0 |
| SXGA | 1152x864 | 70 | 63.8 |
| | 1152x864 | 75 | 67.5 |
| | 1152x864 | 85 | 77.1 |
| | 1280x1024 | 60 | 64.0 |
| | 1280x1024 | 72 | 77.0 |
| | 1280x1024 | 75 | 80.0 |
| | 1280x1024 | 85 | 91.1 |
| QuadVGA | 1280x960 | 60 | 60.0 |
| | 1280x960 | 75 | 75.2 |
| SXGA+ | 1400x1050 | 60 | 65.3 |
| UXGA | 1600x1200 | 60 | 75.0 |
| PowerBook G4 | 640x480 | 60 | 31.4 |
| PowerBook G4 | 640x480 | 66.6(67) | 34.9 |
| PowerBook G4 | 800x600 | 60 | 37.9 |
| PowerBook G4 | 1024x768 | 60 | 48.4 |
| PowerBook G4 | 1152x870 | 75 | 68.7 |
| PowerBook G4 | 1280x960 | 75 | 75.0 |
| i Mac DV (G3) | 1024x768 | 75 | 60.0 |

2 HDMI - Extended Wide timing

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|-------|-------------|------------------|-------------------|
| WXGA | 1280x768 | 60 | 47.8 |
| | 1280x768 | 75 | 60.3 |
| | 1280x768 | 85 | 68.6 |
| | 1280x720 | 60 | 44.8 |
| | 1280x720 | 120 | 92.9 |
| | 1280x800 | 60 | 49.6 |
| | 1280x800-RB | 119.909 | 101.6 |
| | 1440x900 | 60 | 59.9 |

| | | | |
|--------|----------------------|-------|-------|
| | 1920x1200 | 60 | 74 |
| WSXGA+ | 1680x1050 | 60 | 65.3 |
| | 1920x1080 (1080P) | 60 | 67.5 |
| | 1920x1080 (1080P) | 50 | 56.3 |
| | 1366x768 | 60 | 47.7 |
| WUXGA | 1920x1200-RB | 59.94 | 74.04 |

3 HDMI - Video Signal

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|-------|-------------------|------------------|-------------------|
| 480i | 720x480(1440x480) | 59.94 (29.97) | 15.7 |
| 576i | 720x576(1440x576) | 50(25) | 15.6 |
| 480p | 720x480 | 59.94 | 31.5 |
| 576p | 720x576 | 50 | 31.3 |
| 720p | 1280x720 | 60 | 45.0 |
| 720p | 1280x720 | 50 | 37.5 |
| 1080i | 1920x1080 | 60(30) | 33.8 |
| 1080i | 1920x1080 | 50(25) | 28.1 |
| 1080p | 1920x1080 | 23.97/24 | 27.0 |
| 1080p | 1920x1080 | 25 | 28.1 |
| 1080p | 1920x1080 | 29.97/30 | 33.8 |
| 1080p | 1920x1080 | 60 | 67.5 |
| 1080p | 1920x1080 | 50 | 56.3 |
| 1080p | 1920x1200-RB | 59.94 | 74.04 |
| 4K | 3840x2160 | 60 | 135 |
| | 3840x2160 | 24 | 54 |
| | 3840x2160 | 25 | 56.25 |
| | 3840x2160 | 30 | 67.5 |
| | 3840x2160 | 50 | 112.5 |
| | 4096x2160 | 60 | 140 |
| | 4096x2160 | 24 | 60 |
| | 4096x2160 | 25 | 61.5 |
| | 4096x2160 | 30 | 75.5 |
| | 4096x2160 | 50 | 119 |

4 HDMI - 1.4a 3D Timing

| Modes | Resolution | V.Frequency [Hz] | H.Frequency [KHz] |
|----------------------|------------|------------------|-------------------|
| 720p (Frame Packing) | 1280 x 720 | 50 | 37.5 |

| | | | |
|--|-----------------------|---------|---------------------------------|
| 720p (Frame Packing) | 1280 x 720 | 60 | 45.0 |
| 1080p (Frame Packing) | 1920 x1080 | 24 | 27.0 |
| 720p (Frame Packing) | 1280 x 720 | 50 | 37.5 |
| 720p (Frame Packing) | 1280 x 720 | 60 | 45.0 |
| 1080i (Top and Bottom) | 1920 x1080 | 50 (25) | 28.1 |
| 1080i (Top and Bottom) | 1920 x1080 | 60 (30) | 33.8 |
| 1080p (Top and Bottom) | 1920 x1080 | 24 | 27.0 |
| 1080p (Top and Bottom) | 1920 x1080 | 50 | 56.3 |
| 1080p (Top and Bottom) | 1920 x1080 | 60 | 67.5 |
| 720p (Side by Side (Half)) | 1280 x 720 | 60 | 45.0 |
| 1080i (Side by Side (Half)) | 1920 x1080 | 50 (25) | 28.1 |
| 1080i (Side by Side (Half)) | 1920 x1080 | 60 (30) | 33.8 |
| 1080p (Side by Side (Half)) | 1920 x1080 | 50 | 56.3 |
| 1080p (Side by Side (Half)) | 1920 x1080 | 60 | 67.5 |
| Graphic source monitor range limits | Horizontal scan rate: | | 15k-100kHz |
| | Vertical scan rate: | | 24-120 Hz |
| | Max. pixel rate: | | Analog:165MHz Digital:165MHz |



.....
Note: Functions vary depending on model definition.

Regulations and safety notices

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this device.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Compliant with Russian/ Ukraine regulatory certification



Radio device regulatory notice



Note: The regulatory information below is for models with wireless LAN and/or Bluetooth only.

General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules).

Canada — Low-power license-exempt radio communication devices (RSS-247)

- a Common information
 - Operation is subject to the following two conditions:
 1. This device may not cause interference, and
 2. This device must accept any interference, including interference that may cause undesired operation of the device.
- b Operation in 2.4 GHz band
 - To prevent radio interference to the licensed service, this device is intended to be operated indoors and installation outdoors is subject to licensing.

List of applicable countries

This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact the local office in the country of use. Please see <http://ec.europa.eu/enterprise/rtte/implem.htm> for the latest country list.

Recycling Information for the United States of America

Acer encourages information technology (IT) equipment owners to responsibly recycle their equipment when it is no longer needed. Acer offers programs and services to assist equipment owners with this process.

For more information on recycling IT equipment, please go to:
<https://www.acer.com/ac/en/US/content/recycling>