

SENCOR®

SOC 5010BL
SOC 5011GD



TOOTHBRUSH WITH DISPLAY

Translation of the original manual




SENCOR®


SOC 5010BL
SOC 5011GD



A

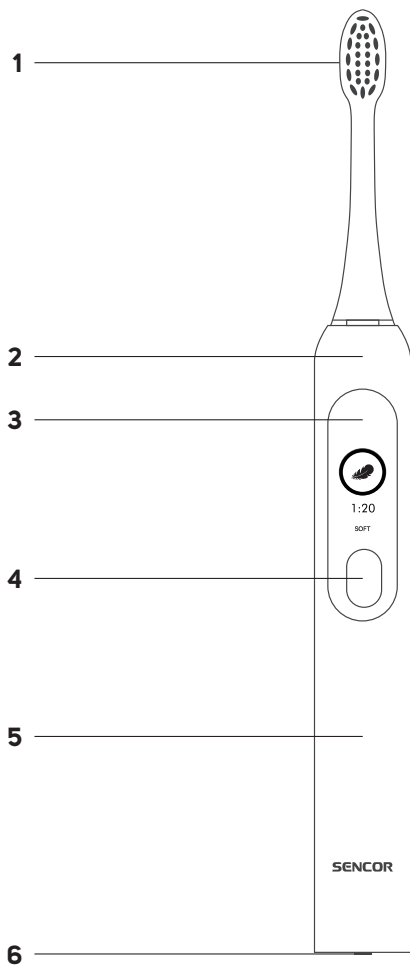

B

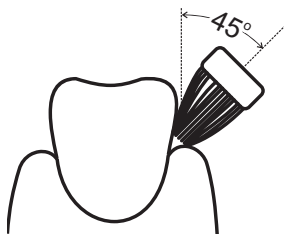

EN Toothbrush with Display

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- Toothbrushes may be used children and by persons with reduced physical or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by unsupervised children.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the charging cable damaged.
- Parts of the appliance that need to be fixed or erected must be fixed or erected in such a way that they cannot fall into the water.

- To charge your toothbrush, use only the charging cable and AC adapter that come with it. Before connecting the adapter to a power socket, make sure the voltage stated on the product's rating label corresponds to the voltage in the power socket.

- Connect the appliance only to a properly earthed socket. Do not use an extension cord.
- Do not connect or disconnect the adapter from the power socket with wet hands.
- Make sure that the adapter does not come into contact with moisture, water or other liquids. If this still happens, carefully dry it before further use.
- Do not disconnect the adapter from the power socket by pulling the cord. Damage to the cable or power socket could occur. Disconnect the cord from the power socket by pulling the adapter.
- Do not place heavy objects on the charging cable. Make sure that the charging cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Keep the charging cable dry.
- The appliance is equipped with a built-in battery with a long service life, which can only be removed by a professional service. Never attempt to remove it from the appliance by yourself.
- Never disassemble the appliance in order to remove the battery. Do not short-circuit the appliance or throw it into a fire. There is a risk of leakage of toxic substances, fire or explosion if improperly handled.
- Do not repair or modify the appliance yourself. Have all repairs or adjustments of the appliance performed at an authorised service centre.
- Tampering with the appliance during the warranty period may void the warranty.
- To avoid the risk of electric shock, never immerse the appliance, charging cable and adapter in water or other liquids or wash these parts under running water.
- If any part falls into the water, do not use it under any circumstances and hand it over to an authorised service centre for inspection.
- This toothbrush is used for cleaning teeth and gums at home. Do not use it for commercial purposes or for purposes other than those for which it is intended.
- Do not expose the toothbrush or its accessories to the outdoor environment, extreme temperatures, direct sunlight, or place it near open flames, heaters, or other equipment or appliances that may be potential heat sources.
- Charge, use and store the toothbrush at room temperature.
- For hygiene reasons, the toothbrush head should only be used by one user. Replace the toothbrush head regularly every 3 months or sooner if it shows signs of wear. Use only original replacement heads.
- If children use a toothbrush, supervise them while brushing until they have mastered the correct brushing technique.
- If you have had dental surgery in the past two months, consult your dentist when using the toothbrush.
- If you experience bleeding gums after using the toothbrush and if the bleeding persists after a week of use, contact your dentist.
- If your toothpaste contains peroxide, baking soda or other bicarbonate (often used in whitening toothpastes), clean the toothbrush and handle thoroughly after use.
- If using the toothbrush causes you discomfort or pain, stop using the toothbrush and consult your dentist.
- If you have a pacemaker or other implanted device, consult your doctor or implant manufacturer when using the toothbrush.
- Perform the cleaning and maintenance following the instructions in the Cleaning and Maintenance section. Do not wash the toothbrush or its accessories in the dishwasher.
- Do not perform any repairs on the toothbrush and its accessories. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.

Toothbrush with Display

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE APPLIANCE

A1	Toothbrush head	A6	Socket for connecting the charging cable
A2	Toothbrush body		
A3	Display		
A4	On/Off/Mode button		Without illustration: charging cable, adapter, replacement brush head
A5	Handle		

BEFORE FIRST USE

- Before first use, rinse the toothbrush heads and the storage jar with clean warm water.
- Wipe the toothbrush body with a dry or very lightly dampened cloth. Never immerse the toothbrush in water, clean it under running water or wash it in the dishwasher.

CHARGING

- Charge the toothbrush before first use.
- Plug the end of the charging cable into the socket at the bottom of the brush and plug the other end into the adapter. Insert the adapter into a properly grounded power outlet.
- The charging of the toothbrush will start. During the charging process, the display shows the charging status, and shows the power level in yellow with "%". The power level data is displayed in 20%, 40%, 60%, 80% in yellow. When charging is completed, the display shows 100% power in blue. Charging time is usually 5 hours.
- Remove the power adapter from the power socket and disconnect the end of the charging cable from the socket at the bottom of the brush.
- When the battery level is lower than about 20%, the display prompts 20% remaining battery level. At this time the toothbrush can still continue to work, but every 10 seconds jumps 5-second icon reminder of low battery until turn directly off.

Warning:

Do not charge the toothbrush near water, in a wet or dusty environment.

Note:

The toothbrush may heat up during charging. This is normal and is not a fault.

If you will not use the toothbrush for a long time (6 months or more), we recommend charging it regularly.

OPERATION

Slide the toothbrush head onto the connecting pin of the toothbrush body. To remove the toothbrush, reverse the procedure.

Wet the toothbrush and apply a small amount of toothpaste.

Turn the brush on by briefly pressing the **on/off** button. The display will show "SENCOR" for a moment and the charge status of the toothbrush.

Then "CLEAN" will be shown on the display.

The toothbrush will work in "CLEAN" mode by default. Press the **on/off** button briefly to switch the working mode within 10 seconds after the power on. After switching the mode, the toothbrush will work on the mode you select directly until the end of the 2-minute timer.

CLEAN – mode for standard cleaning of healthy teeth;

SOFT – gentle mode for sensitive teeth or parts of the mouth; it is recommended to use with increased sensitivity of teeth, exposed necks,

periodontitis, implants and other dental replacements;

WHITE – mode suitable for teeth whitening;

MESSAGE – pulsating mode for gentle gum massage.

The LED indicator of the selected mode will light up.



Note:

The brush remembers the last mode used, so it is not necessary to reactivate it.

- Place the bristles of the toothbrush against the teeth at a 45° angle in a line around the gums, see Figure B. Use short, slow movements to move the toothbrush to the next tooth.
- The toothbrush is equipped with a smart timer that interrupts the operation of the toothbrush for a short moment every 30 seconds, which means that you have to change the area to brush your teeth.
- The toothbrush automatically switches off after 2 minutes of operation.
- Adjust the inclination of the toothbrush to the arrangement of the teeth. When cleaning the inside of the front teeth, hold the brush handle vertically so that the tip of the brush head points upwards. Finally, clean the upper surfaces of the teeth.
- When you have finished using the toothbrush, turn it off with the main switch and clean it according to the instructions in the Cleaning and Maintenance chapter. To avoid splashing toothpaste, turn the toothbrush off before removing it from your mouth.

Display icons and their meaning

Icon	Meaning
	Start-up display when turned on
	CLEAN mode
	WHITE mode

Icon	Meaning
	SOFT mode
	MASSAGE mode
	Brushing mode started.
	Brushing mode completed.
	More pressure than usual was applied to the head. The toothbrush starts vibrating.
	A reminder to replace the toothbrush head.
	A reminder when the toothbrush head needs to be replaced (after holding the on/off button for 3 seconds).
	The toothbrush is out of power.
	Charging the toothbrush.
	The toothbrush is fully charged.

CLEANING AND MAINTENANCE

- Before cleaning, turn off the toothbrush.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance is dishwasher safe.



Warning:

To avoid the risk of electric shock, do not immerse the appliance, charging cable or adapter in water or other liquids.

- For hygienic reasons, clean the toothbrush regularly after every use.
- Rinse the toothbrush head thoroughly under lukewarm running water to remove any residual paste and other dirt. If you use whitening toothpastes to brush your teeth, we recommend applying a drop of soap to the head and then washing it thoroughly under lukewarm running water. At least once a week, remove the head from the handle and wash it under running water where it attaches to the handle.
- Rinse the toothbrush handle under lukewarm running water and then dry.
- Clean the charging cable and adapter only with a dry cloth, never wash them with water or other liquid.
- Never dry toothbrush parts over a heat source such as a stove, electric or gas stove, etc.

TOOTHBRUSH HEAD REPLACEMENT

- When the brush head has been used for 3 months, the display will show the icon of brush head replacement until the brush head is replaced.
- After replacing, reset the replacement reminder by holding the on/off button for 3 seconds.
- If you need to display the replacement reminder, press and hold the on/off button for 3 seconds when the toothbrush is turned off. The display will show the remaining days.
- Use only original replacement heads. Replacement heads are available from your dealer in online or brick-and-mortar stores.

STORAGE

- If you will not be using the toothbrush for an extended period of time, turn it off and clean it as instructed above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The vibrations of the toothbrush have decreased.	You are putting too much pressure on the toothbrush.	Release the pressure on the toothbrush.
	The toothbrush head is attached too much to the body of the toothbrush.	Remove the head and reattach it.
The toothbrush didn't turn on.	The toothbrush is out of power.	Charge the toothbrush.
The toothbrush does not charge.	The socket for connecting the charging cable is wet.	Allow the socket to dry.
	Malfunction on the adapter.	Replace the adapter.
The toothbrush only charges briefly.	Insufficient charging time.	Wait until the toothbrush is fully charged.
	Fault in the brush battery.	Contact an authorised service centre for replacement.



Note:

If the problem persists or is not listed in the table above, turn off the toothbrush, stop using it and contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Toothbrush

Input voltage.....	5 V $\overline{\text{---}}$ 1 A (max)
Rated operating voltage/power.....	3.7 V $\overline{\text{---}}$ 3.5 W (max)
Battery.....	Li-Ion, 5 V, 1100 mAh
Charging time.....	Approximately 5 hours
Noise level.....	<65 dB
Protection level.....	IPX7

We reserve the right to change the text and technical specifications.



Safety Class for Electric Shock Protection:
Class II – Electric shock protection is provided by double or heavy-duty insulation.

Protection level:

IPX7 – The device is protected against harmful ingress of water when submerged to a depth of 1 meter for a period of 30 minutes.

BATTERY DISPOSAL



Prior to disposal of the product or handing it over at a specialised collection facility, it is necessary to ensure that the battery is removed. The battery contains environmentally damaging compounds and therefore does not belong in standard household waste. Its proper disposal shall be ensured by the relevant collection point.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.

