

SENCOR®

SSI 8400BZ



STEAM IRON

Translation of the original manual





SENCOR®

SSI 8400BZ



A

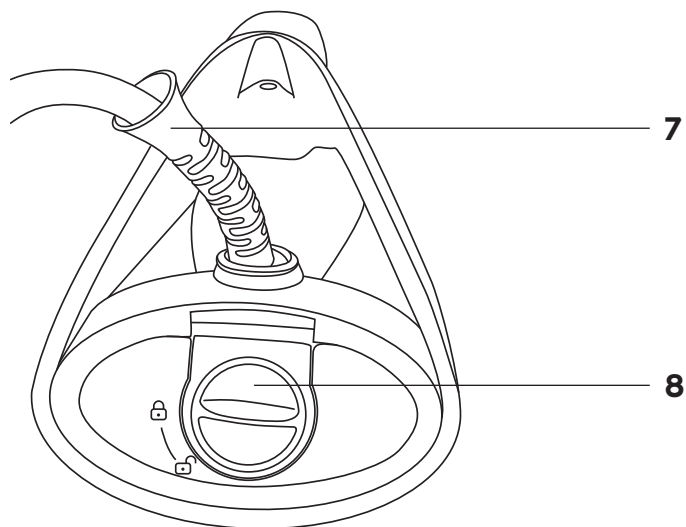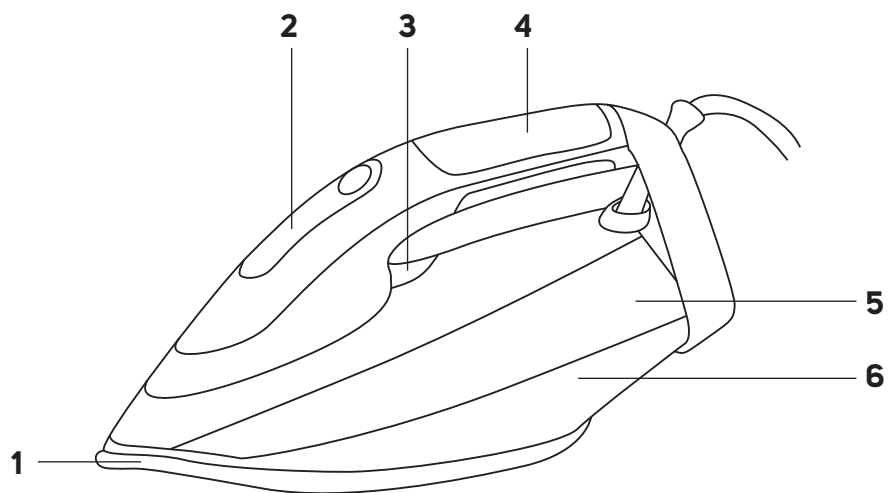

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.
- The iron must not be left unattended when connected to a power socket.
- The plug must be pulled out of the socket before filling the water tank.
- The filling hole must not be opened during use.
- The iron must be used and used and placed on a flat and stable surface.
- When placing the iron on the stand, ensure that the surface on which the stand is located is stable.

- The iron must not be used if it has fallen, if there are visible signs of damage, or if it leaks.
- Do not leave the iron and its power supply within reach of children under 8 years of age when it is powered or cooling.



CAUTION: Hot surface

Surfaces may become hot during use.

- Before connecting the base to the power socket, ensure that the voltage indicated on its rating plate matches the voltage in the socket.
- Connect the base only to a properly grounded socket. Do not use an extension cord.
- Do not touch the iron with wet or moist hands when connected to the power socket.
- To prevent the risk of electric shock, do not wash the iron or base under running water, spray it with water, or immerse it in water or any other liquid.
- Ensure that the power cable does not come into contact with water, moisture or a heated surface.
- Do not place heavy objects on the power cable. Make sure that the power cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the base from the power socket by pulling the plug of the power cable, not the cable itself. Otherwise, damage to the power cable or the socket may occur.
- Do not pull or carry the base by the power cable. Do not pull the iron by the iron cable.
- To avoid the risk of electric shock, do not repair the iron or base yourself or modify them in any way. All repairs should be carried out by an authorised service centre. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.
- If the iron cable is damaged, have it replaced at a specialised service centre. It is forbidden to use the iron with a damaged cable.
- The iron is intended for household use. Do not use it in an industrial environment or outdoors.
- Do not place the iron on or near an electric or gas stove or other sources of heat.
- Never iron clothes while wearing them.
- Do not touch the hot soleplate. Otherwise, burns may occur.
- Ironed clothes may be hot immediately after removing the iron. Take extra care to avoid burns.
- Never fill the water tank directly under the tap. Always use a suitable container for filling the tank. Do not add vinegar, descalers, or other additives to the tank.
- Before cleaning or any other handling of the iron and the base that you have disconnected from the power socket, allow the soleplate to cool down.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE IRON

A1 Soleplate	A5 Water tank
A2 Control panel	A6 Iron body
A3 Steam boost button	A7 Power cord
A4 Handle	A8 Water tank lid

PURPOSE OF USE

The iron is intended for ironing clothes, fabrics, or materials specifically designed for ironing. Refer to the information label on the clothes, fabric or material.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.

PREPARATION FOR USE

Filling the Water Tank



Warning:

Always ensure that the iron is switched off and the power cable is disconnected from the power socket before filling the tank. We recommend using only distilled or demineralised water.

1. Open the water tank lid and tilt the iron slightly.
2. Pour clean cold water through the hole in the tank. Wipe any spilled water with a dry cloth.
3. Close the lid. Press gently until you hear a click.

Use a filling measuring cup when filling the tank. Do not fill the water tank directly from the tap.

Do not overfill the tank. Always fill to the MAX mark indicated on the tank during filling.



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.

First Use of the Iron

- Before the first use of the iron, we recommend ironing a small damp cloth or towel with the iron at a high temperature to remove any possible residues on the soleplate.

- You may notice a strange smell during the first use. This is a normal occurrence. It disappears with use.
- During the first use of the iron, small particles or impurities may come out of the holes on the soleplate. Do not be surprised or disturbed by this. This does not affect the proper functioning of the steam generator.



Note:

During the heating process of the soleplate, a small amount of water may flow from the soleplate. This is a normal occurrence.

USING THE IRON

Connecting to a Power Source

Place the iron upright on the ironing board or surface where you will be ironing.

Unwind the power cord completely and plug the power cord plug into a properly grounded power socket.

Switching on the Iron

The iron automatically switches on when the plug is connected to the power socket. The power-on light will flash to indicate that the iron is heating up. When the light comes on, the iron is ready to use at the selected temperature.

Steam Control Modes

Thanks to Smart manager technology, you will be able to iron in two different ways in terms of steam control: the AUTO mode and the PRO mode.

Press and hold both buttons at the same time until the light for AUTO mode or PRO mode comes on.

1. Pro Mode

In this mode, the iron does not release steam continuously. It only releases steam when the steam button under the handle is pressed continuously. When you release the button, the steam release stops.

Fabric Type	Ironing Surface Temperature	Steam Boost	Continuous Steam Release
Linen	230°C	5	0
Cotton	220°C	4	0
Jeans	210°C	3	0
Children's laundry	200°C	1	0
Wool	170°C	3	0
Antistatic fabrics (polyester)	150°C	2	0
Silk and fine fabrics	140°C	2	0
Synthetics	130°C	1	0
Other fabrics	130°C	3	0

2. AUTO Mode

In this mode, the iron produces steam continuously. Press the steam button once briefly to start production, press it again briefly to stop. Continuous steam is only produced when you move the iron.

Fabric Type	Ironing Surface Temperature	Steam Boost	Continuous Steam Release
Linen	230°C	0	2
Cotton	220°C	0	1
Jeans	210°C	0	1
Children's laundry	200°C	0	1
Wool	170°C	0	2

Fabric Type	Ironing Surface Temperature	Steam Boost	Continuous Steam Release
Antistatic fabrics (polyester)	150°C	0	1
Silk and fine fabrics	140°C	0	1
Synthetics	130°C	0	1
Other fabrics	130°C	0	2



Warning:
HOT SURFACE AND HOT STEAM!
 Be especially careful when ironing and handling the iron. The soleplate and the steam temperature are very hot. Serious injury and burns can occur with improper handling.
Never touch the soleplate with your hands! Do not steam clothes directly on yourself or on others!



Warning:
 Never leave the iron on unattended. Pay extra attention if children are near the iron, even when it is switched off.

Temperature and Steam Settings

When setting the temperature, pay attention to the fabric’s composition. We recommend that you sort your laundry according to the international symbols on the textile, the type of fabric or the manufacturer’s recommendations on the tag. The number of dots inside the international symbol corresponds to the number of dots on the rotary temperature controller.

The iron will switch on at a low temperature when the power cord is plugged in. The indicator will flash red. Press the temperature setting button repeatedly to set the temperature:

Symbol	Temperature Setting	Fabric Type
●	Low temperature	Synthetic fabric (acrylic, acetate, polyester, viscose, etc.)
●●	Medium temperature	Cotton with an admixture of other types of fibres, silk, wool, wool with an admixture of other types of fibres, etc.
●●●	High temperature	Corduroy, cotton, denim and linen

Ironing without Steam

If you iron using the dry ironing method, do not fill the water tank. Leave it empty.

Plug the power cord into the power socket and place the iron in a vertical position on the ironing board or on the surface where you will be ironing. Set the desired temperature. The temperature indicator will flash red. This indicates that the iron is heating up.

When the indicator stops flashing and lights up, the iron is warm and ready to use.

The indicator may start to flash during ironing. This indicates that the iron is heating up to the set temperature. Wait until it stops flashing and lights up.

When you have finished ironing, remove the power cord plug from the power socket and allow the iron to cool in a safe place.

Ironing with Steam

Before ironing with steam, it is necessary to refill the water tank. Follow the instructions in the “**Filling the Tank**” section.

Plug the power cord into the power socket and place the iron in a vertical position on the ironing board or on the surface where you will be ironing. Set the desired temperature. The temperature indicator will flash red. This indicates that the iron is heating up.

When the indicator stops flashing and lights up, the iron is warm and ready to use.

Use the steam release control to set the desired steam release mode.

The indicator may start to flash during ironing. This indicates that the iron is heating up to the set temperature. Wait until it stops flashing and lights up.

When you have finished ironing, remove the power cord plug from the power socket and allow the iron to cool in a safe place.

Steam Boost

The steam boost releases a larger amount of steam at the maximum temperature. Use this function for heavily wrinkled fabrics or garments where you need to loosen fibres for easier ironing. Press the steam boost button to activate it.

Vertical Ironing

The iron can also be used for vertical ironing of curtains, net curtains and clothes that are hung on a hanger.



Warning:
 Never use an iron to iron clothes that people have on.

Select the temperature according to the type of fabric you will be ironing. Grasp the iron by the handle and hold it against the garment or curtain. Iron it by moving the iron from top to bottom.

Putting the iron down during Ironing

Place the iron in a vertical position on the heat-insulated surface of the ironing board during ironing, or in a safe place on the ironing surface.

Switching off the Iron

When you have finished ironing, place the iron in a vertical position and unplug the power cord from the power socket. Allow the iron to cool before cleaning.

Automatic Switch-off

The automatic switch-off function switches off the heating element of the iron if it remains motionless for a few moments.

The indicator will flash and several beeps will sound, indicating that the iron has been automatically switched off, and in the following situations:

- The iron is in a horizontal position without moving for more than 30 seconds.
- The iron is turned on its side without moving for more than 30 seconds.
- The iron is in the vertical position for more than 8 minutes.

To cancel the automatic switch-off function and allow the iron to heat up again, lift or move the iron slightly. The temperature indicator will flash red. When the indicator stops flashing and lights up, the iron is warm and ready to use.

ANTI-CALC SYSTEM

The iron is equipped with a permanent Anti-Calc filter that reduces the formation of calcium deposits inside the iron. This filter cannot be removed. The effectiveness of the filter depends on the hardness of the water you use.

IRONING TIPS AND TRICKS

- Follow the care instructions for each garment. Iron only solid-coloured and heat-resistant fabrics. We recommend ironing the printed clothes inside out.
- Sort the clothes by temperature from low to high. Start ironing items at a low temperature and gradually increase it, as the iron heats up faster than it cools down.
- Never iron over areas with sweat stains or other stains. High heat will set the stain making it difficult to remove.
- To prevent silk, wool, and synthetic fabrics from becoming shiny after ironing, iron them inside out.
- Some materials are easier to iron when lightly damp.
- For fine fabrics, sprinkle water or iron over a slightly damp cloth. You can also hold the iron about 2 cm above the fabric.
- Iron heavily wrinkled garments at a high temperature with steam and use the steam boost function to loosen and straighten the fabric fibres.
- Avoid ironing zips, studs or other decorative parts of clothing. This could damage the soleplate.

- To prevent wrinkling, select an appropriate spin speed when washing and hang the laundry correctly on the clothesline or rack. Hang some items of clothing, such as shirts, on hangers. Dry sweaters, cardigans and other items spread out on a flat surface.

.....

CLEANING AND MAINTENANCE

Before cleaning the iron, unplug the power cord from the power socket and allow the appliance to cool completely. Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance.



Warning:
To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Cleaning the Iron

Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.

Removing Mineral Deposits

The self-cleaning function is used to remove mineral deposits. Use this function regularly according to water hardness and frequency of use. If the water in your area is very hard (i.e. flakes come off the ironing surface during ironing), you should use the self-cleaning function more often.

1. Fill the water tank to the MAX level.
2. Insert the plug to the socket.
3. Set the temperature control button to the self-cleaning function.
4. Gently shake the iron until all water in the tank is used up.
5. If the water coming out of the iron still contains limescale particles, repeat the self-cleaning process.

Storage

- If you are not going to use the iron, switch it off, unplug it from the power socket and leave it to cool down completely.
 - Empty the water tank. Wind the iron cord in front of the side surface so that the cord does not touch the heated ironing surface.
 - Store the iron in a dry, clean and well-ventilated place where it will not be exposed to extreme temperatures and where it will be out of reach of children or pets.
-

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50–60 Hz
Rated power input.....	2400–2800 W
Water tank capacity.....	330 ml
Continuous steam output.....	55 g/min
Steam boost.....	195 g/min

We reserve the right to change the text and technical specifications.

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.

