

SENCOR®

SHP 8500BK



MULTIGROOMER SET FOR MEN 14 IN 1

Translation of the original manual

 


SENCOR®

SHP 8500BK




A

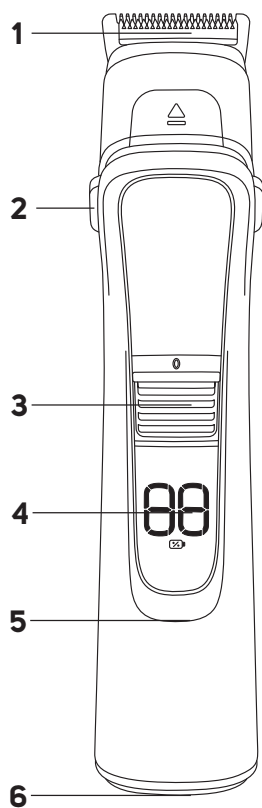


7



 8

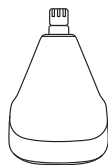

9

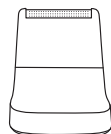 

10



11



12



 
13




14




15

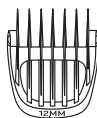

16

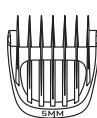 

17

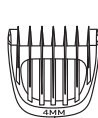 

18



19



20



 
21







22



23

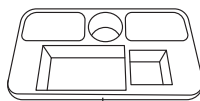

25

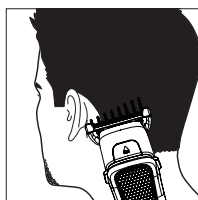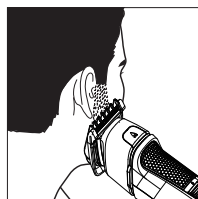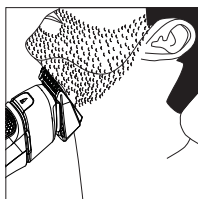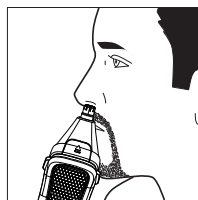    

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the cable damaged.



WARNING: Keep the appliance dry.

- The parts that must be attached must be installed in such a way that they cannot fall into the water.
- Only use the appliance with the charging cable supplied with the appliance. Do not use another charging cable or use the appliance charging cable to charge other appliances.

- Before connecting the appliance to the power adapter, make sure that the voltage indicated on the type plate of the appliance matches the voltage on the type plate of the adapter. The power adapter is not supplied. Follow the instructions in the user manual for the power adapter.
- Do not place the charging cord over sharp objects; make sure it does not hang over the edge of a table or touch a heated surface.
- Do not connect or disconnect the charging cable with wet hands.
- Store, charge and use the appliance at an ambient temperature of 15°C to 35°C. Do not charge the appliance for longer than necessary to fully charge it. After charging, disconnect it from the power source.
- Do not expose the appliance to temperatures above 50°C. Otherwise damage to the built-in battery may occur.
- The appliance is equipped with a built-in battery with a long service life. Never disassemble the appliance in order to remove the battery. Do not short-circuit the appliance or throw it into a fire. There is a risk of leakage of toxic substances, fire or explosion if improperly handled.
- Do not recharge, use, store or leave the appliance in a bathroom or any place where it could fall into a bathtub, wash basin or any other container filled with water; in a room where volatile, flammable or explosive substances are stored or used.
- If the appliance falls into water, under no circumstances should you touch it, but immediately disconnect the power adapter from the socket. Never use an appliance or charging cable that has been submerged in water. Take it to an authorised service centre for inspection.
- Do not use the appliance in the bath or shower. Do not clean it under the tap, spray it with water or other liquid, or immerse it in water or other liquid.
- This trimmer is designed for domestic indoor use only and is used for trimming human hair, beards and hair. The trimmer is not intended for commercial purposes or for trimming animal fur. Do not use it outdoors.
- Use the trimmer only on dry and clean hair, beard or facial hair. Do not use it on wet or freshly washed hair.
- Use the trimmer and its accessories in accordance with the instructions in this manual.
- Use only the original accessories supplied with this trimmer.
- Do not expose the trimmer and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessive dust.
- Do not place the trimmer or its accessories near heaters, open fires or other sources of heat.
- Before each use, check that the selected comb attachment is not damaged. Never use the trimmer with a damaged comb attachment.
- The trimmer may heat up when used or recharged. This is a normal occurrence.
- Keep the trimmer at a safe distance from your eyes.
- Always switch off and unplug the trimmer when not in use, when left unattended and before attaching, removing or replacing the attachment, cleaning, maintenance or storage. Store the trimmer and its power adapter in a dry environment.
- Keep the trimmer clean. Perform the cleaning and maintenance following the instructions in the Cleaning and Maintenance section.
- Do not perform any maintenance on the trimmer other than cleaning its individual components as described in the Cleaning and Maintenance chapter.
- To avoid a hazardous situation arising, do not repair or modify the trimmer or its accessories yourself. Contact an authorised service centre for all repairs. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



This symbol means that the used battery does not belong in normal municipal waste. For proper disposal, take the used battery to the designated collection points. Proper disposal of the battery will help prevent negative impacts on the environment and human health.

Multigroomer Set for Men 14 in 1

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.



Note:

Charge, use and store the trimmer at an ambient temperature of 15–35°C in a dry environment. Lower or higher temperatures adversely affect the life of the battery. We recommend charging the trimmer before it is fully discharged. If you do not use the trimmer for a long time, charge it at least once every 6 months.

DESCRIPTION OF THE TRIMMER AND ACCESSORIES

A1 Trimmer	A14 Attachment for trimming around the ears – left side
A2 Unlock/lock buttons	A15 Comb attachment, trimming length 16 mm
A3 On/off button	A16 Comb attachment, trimming length 12 mm
A4 Display	A17 Comb attachment, trimming length 9 mm
A5 Ergonomically shaped handle	A18 Comb attachment, trimming length 4 mm
A6 Socket to connect the charging cable end (located at the rear)	A19 Attachment for trimming around the ears – right side
A7 Extra wide comb attachment	A20 Lubricating oil
A8 Detail shaping attachment	A21 Cleaning brush
A9 Nose hair removal attachment	A22 USB charging cable
A10 Razor blade attachment	A23 Comb
A11 Beard trimmer attachment, trimming length 3 to 7 mm	A24 Charging adapter
A12 Beard trimmer attachment, trimming length 2 mm	A25 Stand with accessory storage
A13 Beard trimmer attachment, trimming length 1 mm	

PURPOSE OF USE

- The trimmer is suitable for trimming dry or slightly damp hair or beard. The trimmer is not intended for cutting freshly washed hair, cutting artificial hair or animal hair. The trimmer is intended for household use and is not designed for commercial or other professional applications.

CHARGING THE TRIMMER

- The trimmer is equipped with a built-in Lithium-ion battery that serves as an internal power source and allows cordless operation of the trimmer. Allow the trimmers to fully charge for at least 3 hours before first use or after a long period of non-use. To charge, use only the supplied charging cable.
- Check that the trimmer is turned off and plug the connector of the charging cable into the socket at the rear of the trimmer. Plug the other end of the charging cable into the power adapter and plug its fork into a properly grounded power socket.
- Charging will start automatically and the charge status icon will be lit in red.
- Once the trimmer is fully charged, the charge status icon lights up green. Disconnect the charging cable from the trimmer and pull the power adapter out of the power socket.
- When the charge status icon flashes during use or after switching on, it is necessary to charge the trimmer.
- The charge status icon lights up white during use.



Warning:

Do not attach or replace the attachment while the trimmer is on. There is a serious risk of injury.

USING THE ATTACHMENTS

- The different techniques for using the attachments can be found in Figure B.

Extra Wide Attachment

- Use the extra wide attachment to trim the hair on the head or around the ears, for contouring, etc.
- When trimming the hair around the ears, first comb the hair over the ears and then trim it. Tilt the trimmer so that the trimmer is touching the ends of the hair.
- When contouring the nape of the neck or cheeks, turn the trimmer and trim with a downward stroke.

Comb Attachments

- Comb attachments are used to trim hair to a specific length of cut. The trimmer comes with four comb attachments with cutting lengths of 4 mm, 9 mm, 12 mm and 16 mm and two attachments for trimming around the ears. The length of the cut is marked directly on the attachment. The length of the cut corresponds to the resulting length of the hair after trimming.

- Put the desired comb attachment on the extra wide attachment and evenly cut your hair.

Detail Shaping Attachment

- The detail shaping attachment is used to create fine lines and contours around your face. Hold the trimmer perpendicular to the skin and gently move the trimmer head up or down.

Beard Trimmer Attachments

- Beard trimmer attachments are used to trim the beard to a specific length. The trimmer comes with three beard trimmer attachments with a cutting length of 1 mm, 2 mm and 3–7 mm. The length of the cut is marked directly on the attachment. The length of the cut corresponds to the resulting length of the hair after trimming.
- Put the desired attachment on the detail shaping attachment and trim your beard with even strokes.
- We recommend combing your beard before trimming.
- Start with the edge of the sideburn by gently resting the attachment against your skin. Trim the desired areas of your face with movements toward the edge of the sideburn line.
- When trimming the nape of the neck, we recommend using a smaller mirror if necessary. Place the index finger of one hand on the nape of your neck where you want to trim the hair. Carefully trim the hair at the nape of the neck, working from the bottom up to the index finger.
- When trimming ear hair, avoid inserting the attachment into the inner ear canal. Apply the trimmer and trim the hairs with gentle movements.

Nose Hair Removal Attachment

- Insert the attachment only at the edge of the nostril. After turning it on, gently move it in and out to trim the hair.

Shaving Attachment

- With direct movements, move the attachment over the skin. We recommend using it on beards shorter than 1 mm. Always move the attachment in a straight and even motion. Do not move in circular motion.
- When shaving wet, proceed as follows:
- Apply a shaving cream or shaving gel to dampened skin.
- Moisten the shaving attachment so that the attachment glides smoothly over the skin.
- Move the sleeve in a circular motion.
- After shaving, dry your face and clean the trimmer.

ADVICE AND TIPS

- Start cutting when setting the highest cutting height on the cutting unit and gradually reduce the hair length setting.
- Make a note of the length setting used for a particular style of hairstyle so that you don't have to search for it the next time you cut.
- The most effective is cutting against the direction of hair growth.
- As the hair grows in different directions, it is also necessary to move the trimmer in different directions (up, down or across).
- Repeat each stroke of the trimmer to cut even those hairs that you did not catch in the previous strokes.
- Make sure that the flat part of the comb attachment is completely in contact with the scalp. This ensures an even cutting result.
- For good results on curly, thinner or long hair, you can try guiding your hair through the comb towards the trimmer.
- Trim the beard in slow movements in the opposite direction to the growth of the beard from the bottom upwards. When trimming the beard with the help of a comb attachment, remember that the selected comb attachment must always be in contact with the skin to ensure an even cut. After attaching the attachment back to the cutting unit, be sure to adjust the cutting length again.
- Regularly clean the trimmer unit of hair and beard clippings. If a large amount of hair or beard hair accumulates in the trimmer, remove it from the trimmer and blow or shake out the hair and beard hair.

CLEANING AND MAINTENANCE

- Always switch off the trimmer before cleaning. We recommend cleaning the trimmer after each use.



Warning:

To avoid the risk of electric shock, do not immerse the trimmer, power cord or plug in water or other liquids.



Warning:

Do not use hard-bristled brushes, abrasive cleaners, thinners, etc. Otherwise the surface to be cleaned may be damaged

CLEANING THE TRIMMER

- Remove the attachment from the trimmer, if it is attached to it.
- Brush off any remaining hair, beard or hair from the attachment and trimmer.
- Press the unlock/lock buttons on both sides and remove the trimmer unit from the trimmer. Use the brush to remove any hair or beard debris from the trimmer unit and also from the inside of the trimmer under the trimmer unit.
- After cleaning, attach the trimmer unit back to the trimmer. Push slightly until you hear an audible click.
- The trimmer handle can be cleaned using a clean dry wiping cloth. In the event of heavy soiling, you can use a slightly damp cloth. Clean the surface then properly wipe dry.



Warning:

The blades of the trimmer are sharp, pay extra attention when handling them.

CLEANING OF ATTACHMENTS

- The attachments can be washed under lukewarm running water. After washing the attachment, carefully wipe it with a soft dry cloth and then allow it to dry freely.

LUBRICATION OF THE TRIMMER UNIT BLADE

- To ensure complete mobility of the trimmer blades, we recommend that you regularly lubricate it always after several uses.
- If any comb attachment is attached to the cutting unit, remove it.
- Apply 1 to 2 drops of oil to the trimmer blades and spread the oil evenly with a clean cloth. Dry off excess oil. Make sure the trimmer is clean before using it again.



Note:

Use only light oils because they do not evaporate or slow down the speed of the cutting blades. Do not use hair oil, grease or other oil mixed with kerosene or solvent.

STORAGE

- Store the trimmer in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Power supply	5 V, 1 A
Built-in battery	Li-ion 3,7 V 1,200 mAh
Charging time	approximately 3 hours
Operating time	approximately 90 minutes
Dimensions	71 × 40 × 37 mm
Weight	144 g
Noise level	70 dB(A)
Water resistance	IPX5

The declared noise emission level of the appliance is 70 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

BATTERY DISPOSAL

Before disposing of the product or returning it to a designated collection point, ensure that the battery is removed. The battery contains environmentally harmful substances and should not be disposed of in regular household waste. Proper disposal shall be ensured by the relevant collection point.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

This product meets all the basic requirements of the applicable EU directives.

Changes to text and technical parameters are reserved.

