

# SENCOR®

## SHD 900RS



### HIGH SPEED HAIR DRYER

Translation of the original manual




**SENCOR®**

**SHD 900RS**



**A**

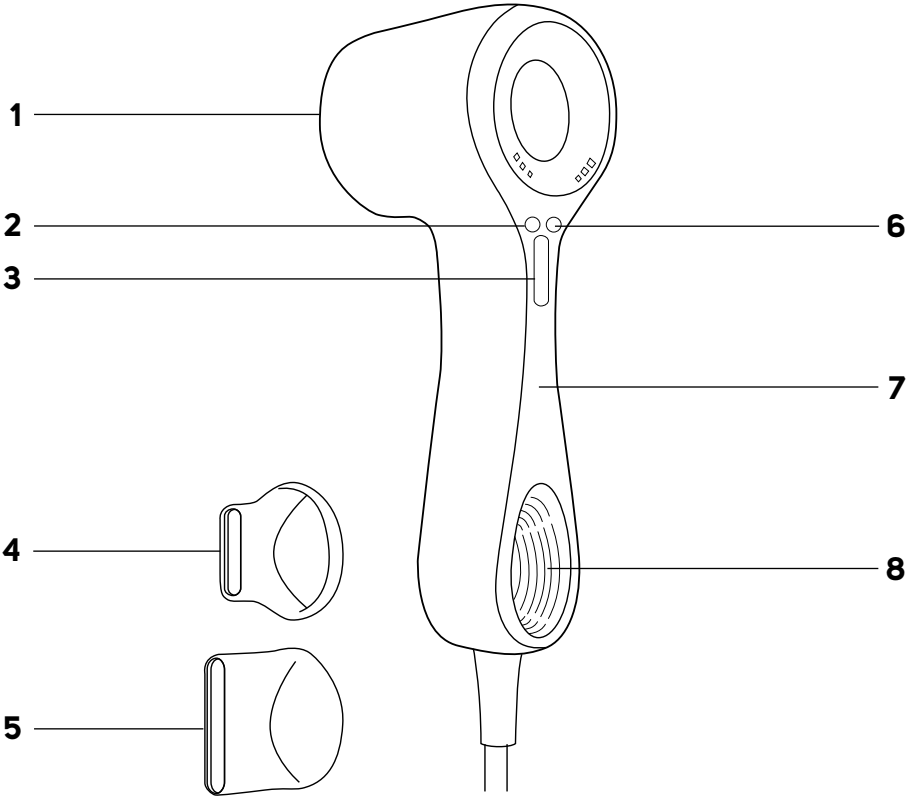

# EN High speed hair dryer

## Important Safety Instructions

**READ CAREFULLY AND STORE FOR FUTURE USE.**

### General Warnings

- This appliance may be only used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the device.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.



#### **Warning:**

Do not use this appliance near water.

#### **Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the presence of water poses danger, even when the appliance is turned off.
- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30mA. Ask the electrician for advice.

**Other important safety instructions for use of the appliance**

- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
- Sure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
- This product is designed for household use. Do not use it in industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
- Make sure the appliance is fully cold before storing.
- Do not expose sensitive people or animals to hot air.
- Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
- Do not use attachments other than those supplied or specified by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself; do not make any modifications to it - danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot places or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord - it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the hair dryer.
- The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

# EN High speed hair dryer

## User's Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- It is recommended to keep the original shipping carton, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE HAIR DRYER (Fig. A)

- |                                      |                               |
|--------------------------------------|-------------------------------|
| <b>A1</b> Air outflow (front)        | <b>A5</b> Narrow nozzle       |
| <b>A2</b> Temperature setting button | <b>A6</b> Air velocity button |
| <b>A3</b> On/off button              | <b>A7</b> Dryer handle        |
| <b>A4</b> Hair styling nozzle        | <b>A8</b> Air inlet grill     |

### BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.

### USING THE HAIR DRYER

- Insert the plug into the power socket.
- Press the on/off button to switch the hair dryer on.
- Press the temperature setting button to select the temperature: cold - low - medium - high. The corresponding number of red icons will light up.
- Use the speed button to select the airflow speed: low - medium - high. The corresponding number of blue icons will light up.
- If you need to select cold air, long press the temperature setting button (approximately 1 second). To switch back to warm air, long press the temperature setting button.
- When you have finished using the hair dryer, press the on/off button to switch the hair dryer off. To switch the hair dryer completely off, unplug the power cord from the socket.



#### Note:

The hair dryer will switch on at the set speed and temperature the next time it is switched on.



#### Note:

When the hair dryer is switched on, the negative ion function is also automatically switched on.



#### Recommendation:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies the combing and then drying your hair.

### CLEANING AND MAINTENANCE

- Before cleaning, unplug the power cord from the mains socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.



#### Warning:

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

- To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water.
- We recommend to regularly clean the entrance part of the dryer, where very often hair is sucked in.
  1. Pull the protective grill out of the dryer.
  2. Use a soft cloth or a soft brush to remove dirt from the air inlet and from the protective grill.
  3. Slide the grill back into place.



#### Warning:

Never use water or a damp cloth for cleaning. Make sure the protective grill is completely dry before reinstalling.

### Storage

- If you will not be using the appliance for an extended period of time, unplug the plug from the mains socket, allow the appliance to cool down and clean it according to the instructions in the chapter "Cleaning and Maintenance".
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.



#### Warning:

Never wrap the power cord around the body of the dryer.

### TROUBLESHOOTING

Before contacting an authorised service centre, check this equipment by following these instructions:

Problem	Cause	Solution
Red and blue icons flash.	Internal component failure.	Contact an authorised service centre.
The red and blue icons are lit and the engine is not working.	The air supply is blocked.	Clean the protective grill and the air supply.
The dryer is not emitting hot air.	Internal component failure.	Contact an authorised service centre.
The hair dryer will not start.	The power plug is not plugged into the mains socket.	Plug the power plug into the mains socket.
	The contact is damaged.	Contact an authorised service centre.

There is a faint smell during operation.	Internal component failure.	Contact an authorised service centre.
The dryer turned itself off during operation.	Overheating protection has been activated.	Switch off the dryer and let it cool down.
	Engine malfunction.	Contact an authorised service centre.
	Temperature sensor malfunction.	Contact an authorised service centre.

**TECHNICAL SPECIFICATIONS**

Rated voltage range.....220–240V~  
 Rated frequency.....50/60Hz  
 Rated power input.....900W  
 Noise level.....75dB(A)

The declared noise emission level of the appliance is 75dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1pW.

**Safety Class for Electric Shock Protection:**



Class II – Electric shock protection is provided by double or heavy-duty insulation.

We reserve the right to change the text and technical specifications.

**INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material in the designated waste disposal area determined by the municipality

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product.

By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point.

Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

**For Business Entities in European Union States**

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

**Disposal in Other Countries Outside the European Union**

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.

