

# SENCOR®

SHD 9050GD



HAIR DRYER




Translation of the original manual



**SENCOR**<sup>®</sup>

**SHD 9050GD**

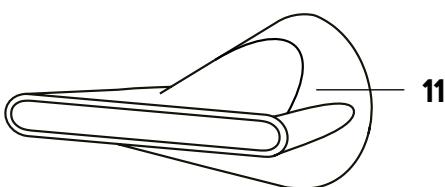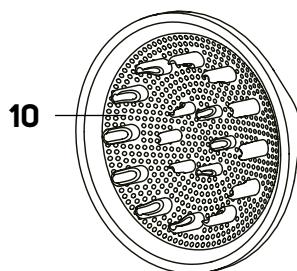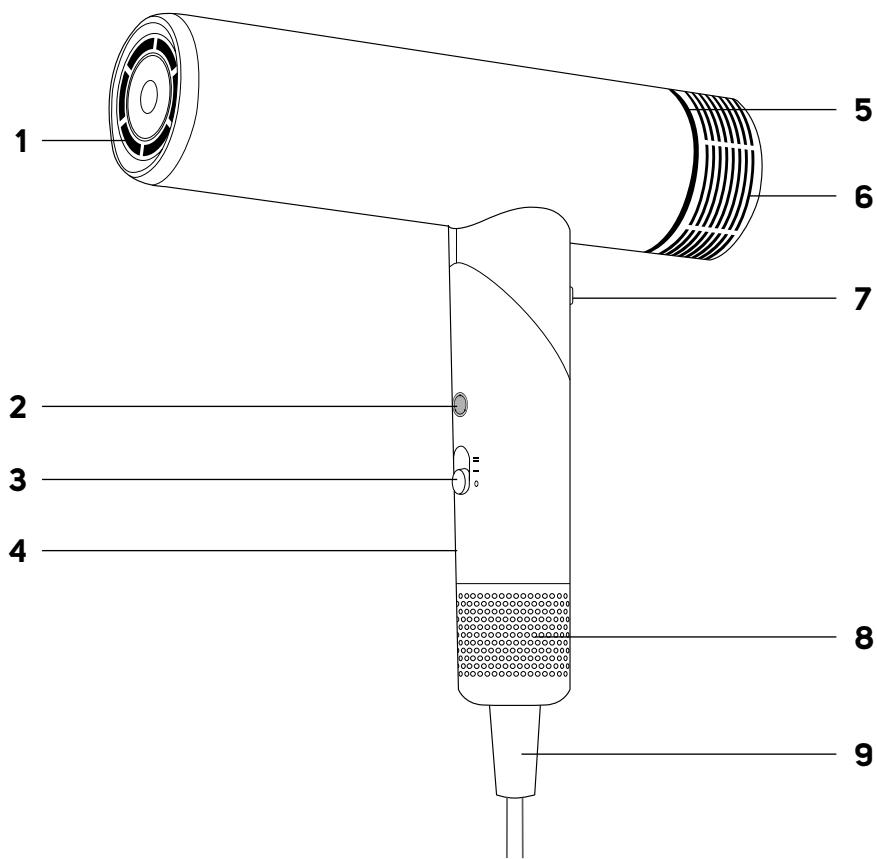

**A**

## Important Safety Instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.



#### **Warning:**

Do not use this appliance near water.



#### **Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the presence of water poses danger, even when the appliance is turned off.

- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.

---

#### **Additional Important Safety Instructions for Use of the Appliance**

- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
- Make sure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
- This product is designed for household use. Do not use it in industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
- Make sure the appliance is fully cold before storing.
- Do not expose sensitive people or animals to hot air.
- Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
- Do not use attachments other than those supplied or specified by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself; do not make any modifications to it – danger of electric shock! Entrust all repairs and adjustments of this device to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot places or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the hair dryer.
- The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

---

#### **EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION**



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



Safety Class for Electric Shock Protection:  
Class II – Electric shock protection is provided by double or heavy-duty insulation.

---

# EN Hair Dryer User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

## DESCRIPTION OF THE HAIR DRYER

A1	Air outflow	A7	Cold air button
A2	Temperature setting button	A8	Air inlet grill
A3	On/off switch	A9	Power cord end
A4	Dryer handle	A10	Diffuser
A5	Indicator light	A11	Concentrator
A6	Rear cover		

## BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.

## USING THE HAIR DRYER

- Insert the plug into the power socket.
- Move the switch to position 1 to switch the hair dryer on.
- Use the temperature setting button to select the temperature:
  - low: the indicator light turns blue;
  - medium: the indicator light turns yellow;
  - high: the indicator light turns red;
  - alternation of cold and warm air: the colours of the indicator light will change gradually.
- If you need to select cold air, press the cold air button.
- When you have finished using it, slide the switch to position 0 to switch the dryer off. To switch the hair dryer completely off, unplug the power cord from the socket.

### Operation of the Concentrator and Diffuser

- The concentrator/diffuser is connected to the air outlet. Attach the lower part first, then fold the upper part over.
- The concentrator is suitable for drying and styling individual strands of hair using a round brush.
- The diffuser is suitable for drying and styling curly and wavy hair.

#### Warning:

Connect or remove the concentrator and diffuser only when the dryer is turned off and disconnected from the power source.

#### Tip:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies the combing and then drying your hair.

## CLEANING AND MAINTENANCE

- Before cleaning, disconnect the power plug from the mains socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.

#### Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

- To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. We recommend regular cleaning of the inlet part of the dryer, where hair is often sucked in, the back cover and the air inlet grille. Use a soft cloth or cotton bud to remove dirt.

#### Warning:

Never use water or a damp cloth for cleaning. Make sure the protective grill is completely dry before reinstalling.

#### Storage

- If you are not going to use the appliance for an extended period of time, disconnect the plug from the mains socket, allow the appliance to cool down, and clean it according to the instructions in the "Cleaning and Maintenance" section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

#### Warning:

Never wrap the power cord around the body of the dryer.

## TECHNICAL SPECIFICATIONS

Rated voltage range .....	220–240 V~
Rated frequency .....	50–60 Hz
Rated input power .....	1300 W
Power consumption in off mode .....	0.0 W
Time needed for the equipment to reach the applicable low power mode or condition .....	1 second
Noise level .....	75 dB(A)

The declared noise emission level of the appliance is 75 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

## **INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at the location designated by the municipality for waste disposal.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for improper disposal of this type of waste as per national regulations.

### **For Business Entities in European Union States**

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

### **Disposal in Other Countries Outside the European Union**

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

.....  
Changes to text and technical parameters are reserved.