

ENGLISH

ELECTRONIC KITCHEN SCALE

This unit is intended for household usage only.

DESCRIPTION

- 1 – Glass platform
- 2 – Display
- 3 – “ON/TARE” touch-sensitive button
- 4 – “UNIT” touch-sensitive button
- 5 – Battery compartment

RECOMMENDATIONS

Electromagnetic compatibility

These scales can be sensitive to electromagnetic emission of other electronic devices, situated closely to the scales (for instance, cell phones, portable radio stations, radio control boxes and microwave ovens). If there are signs of this influence on the display (mistaken or conflicting data), replace the scales or disconnect a source of disturbance for a while.

This model is easy-to-use, nevertheless, read the instruction carefully.

ATTENTION!

- These scales do not need maintenance.
- Use the scales carefully as any other measuring device. Do not subject the scales to extreme temperatures, moisture, and direct sunlight. Do not drop the unit and do not knock on it.
- Provide that liquid does not get into the unit. The device is not water- proof. Do not leave or use the scales in places with high moisture (more than 80%), protect the unit from contact with water or other liquids in order to avoid distortion of measurements or breakage of the unit.
- Do not place heavy objects, which weight is higher than permissible measuring limit, on the glass platform.
- Do not repair the scales yourself.
- For maintenance apply to the authorized service centers.
- The unit is intended for household usage only.

Operating instructions

- Unpack the unit.
- Open the battery compartment lid (5) and insert battery CR 2032, following the polarity. Close the battery compartment lid.
- Place the scales on the flat stable horizontal surface.
- To switch on the unit touch the “ON/TARE” (3) button, the “0 g” symbols will appear on the display (Pic. 2).
- Touch the “UNIT” button (4), select the measuring units: g/oz (Pic. 3).
- Put the ingredient(s) on the scales. The weight of the ingredient will appear on the display (Pic. 4).

Note: If no operation is performed during some time, the scales will switch off automatically.

Weighing with tare (“TARE” function)

- Switch on the unit by touching the “ON/ TARE” button (3).
- Touch the “UNIT” button (4), select the measuring units: g/oz.
- Place a tare on the scales. The tare weight will appear on the display (2).
- Touch the “ON/ TARE” button (3), in two seconds “0” and “Tare” will be displayed. (Pic. 5)
- Put the ingredient(s) into the tare. Weight of the ingredient will appear on the display (2) (Pic 6).
- If you want to learn weight of the ingredient together with a tare:
 - switch on the scales
 - place the tare on the scales
 - touch the “ON/ TARE” button (3), indications will return to zero
 - add the ingredient into the tare, the weight of the ingredient will appear on the display
 - touch the “ON/ TARE” button (3) once again, indications will return to zero
 - take off the tare with the ingredient, weight of the tare together with the ingredient will be displayed (Pic. 7)

Note: To quickly switch off the unit, touch the “ON/ TARE” button for 3 seconds (3).

Battery replacement

Replace the battery when “Lo” appears on the display. Open the battery compartment lid (5), insert a new battery, following the polarity, and close the battery compartment lid. If you are not using the scales for a long time, remove battery from the battery compartment (5).

Note:

- For EEEEEE symbol on the LCD display indicates overweight, which is put on the scale. Immediately remove the product from the scale, in order to avoid damage of the scale.
- If the operation of the scales is incorrect, try to power off the unit, by removing the battery. After a while place the battery into the battery compartment and switch on the scales.
- Apply to the authorized service center for maintenance.

CARE

Wipe the scales with a damp cloth. Do not use abrasives and solvents. Keep the scales in a dry cool place, out of the reach of children.

SPECIFICATIONS


Max. weight: 5 kg
Operating temperatures range: +5/+30°C
Batteries: 1 lithium battery CR-2032 (battery supplied should be replaced while first indications of discharging)

The manufacturer reserves the right to change the device's characteristics without prior notice.


Service life of the unit - 5 years

GUARANTEE
Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.


CE This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

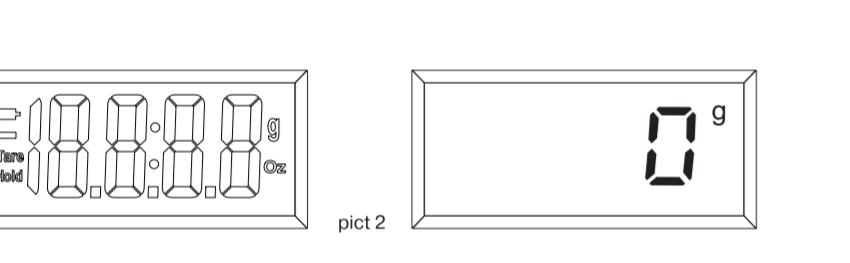


pict 2

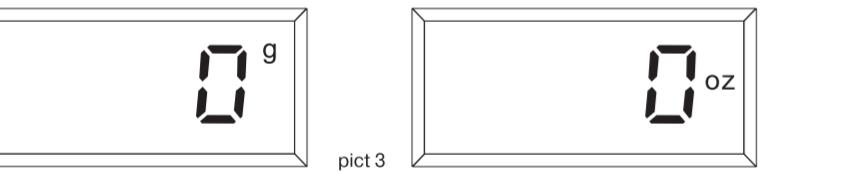

pict 3

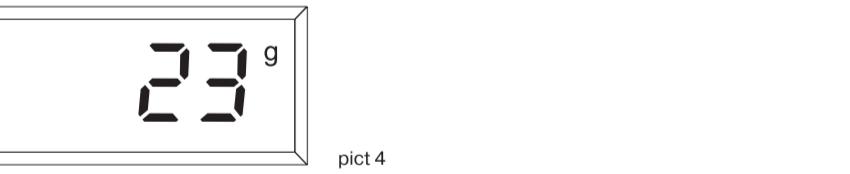


pict 4

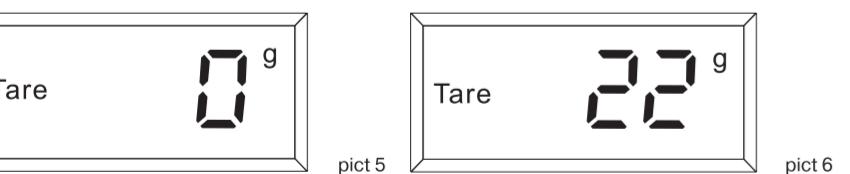

pict 5



pict 7

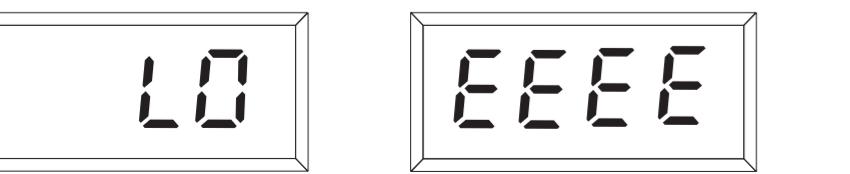

pict 8

DEUTSCH

ELEKTRONISCHE KÜCHENWAAGE

Dieses Gerät ist nur für den Gebrauch im Haushalt geeignet.

BESCHREIBUNG

- 1 – Glasplattform
- 2 – Display
- 3 – „ON/TARE“ touch-sensitive button
- 4 – „UNIT“ touch-sensitive button
- 5 – Batteriefach

REMPFEHLUNGEN

Elektronische Verträglichkeit

These scales can be sensitive to electromagnetic emission of other electronic devices, situated closely to the scales (for instance, cell phones, portable radio stations, radio control boxes and microwave ovens). If there are signs of this influence on the display (mistaken or conflicting data), replace the scales or disconnect a source of disturbance for a while.

This model is easy-to-use, nevertheless, read the instruction carefully.

ATTENTION!

- These scales do not need maintenance.
- Use the scales carefully as any other measuring device. Do not subject the scales to extreme temperatures, moisture, and direct sunlight. Do not drop the unit and do not knock on it.
- Provide that liquid does not get into the unit. The device is not water- proof. Do not leave or use the scales in places with high moisture (more than 80%), protect the unit from contact with water or other liquids in order to avoid distortion of measurements or breakage of the unit.
- Do not place heavy objects, which weight is higher than permissible measuring limit, on the glass platform.
- Do not repair the scales yourself.
- For maintenance apply to the authorized service centers.
- The unit is intended for household usage only.

Operating instructions

- Unpack the unit.
- Open the battery compartment lid (5) and insert battery CR 2032, following the polarity. Close the battery compartment lid.
- Place the scales on the flat stable horizontal surface.
- To switch on the unit touch the “ON/TARE” (3) button, the “0 g” symbols will appear on the display (Pic. 2).
- Touch the “UNIT” button (4), select the measuring units: g/oz (Pic. 3).
- Put the ingredient(s) on the scales. The weight of the ingredient will appear on the display (Pic. 4).

Note:

If no operation is performed during some time, the scales will switch off automatically.

Weighing with tare (“TARE” function)

- Switch on the unit by touching the “ON/ TARE” button (3).
- Touch the “UNIT” button (4), select the measuring units: g/oz.
- Place a tare on the scales. The tare weight will appear on the display (2).
- Touch the “ON/ TARE” button (3), in two seconds “0” and “Tare” will be displayed. (Pic. 5)
- Put the ingredient(s) into the tare. Weight of the ingredient will appear on the display (2) (Pic 6).
- If you want to learn weight of the ingredient together with a tare:
 - switch on the scales
 - place the tare on the scales
 - touch the “ON/ TARE” button (3), indications will return to zero
 - add the ingredient into the tare, the weight of the ingredient will appear on the display
 - touch the “ON/ TARE” button (3) once again, indications will return to zero
 - take off the tare with the ingredient, weight of the tare together with the ingredient will be displayed (Pic. 7)

Note:

- Quickly switch off the unit, touch the “ON/ TARE” button for 3 seconds (3).

Battery replacement

Replace the battery when “Lo” appears on the display. Open the battery compartment lid (5), insert a new battery, following the polarity, and close the battery compartment lid. If you are not using the scales for a long time, remove battery from the battery compartment (5).

Note:

- For EEEEEE symbol on the LCD display indicates overweight, which is put on the scale. Immediately remove the product from the scale, in order to avoid damage of the scale.
- If the operation of the scales is incorrect, try to power off the unit, by removing the battery. After a while place the battery into the battery compartment and switch on the scales.
- Apply to the authorized service center for maintenance.

CARE

Wipe the scales with a damp cloth. Do not use abrasives and solvents. Keep the scales in a dry cool place, out of the reach of children.

SPECIFICATIONS

Max. weight: 5 kg
Operating temperatures range: +5/+30°C
Batteries: 1 lithium battery CR-2032 (battery supplied should be replaced while first indications of discharging)

The manufacturer reserves the right to change the device's characteristics without prior notice.

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Benutzungsdauer der Teile - 5 Jahre

Ausführliche Bedingungen der Gewährleistung kann man beim Dealer, der diese Geräte verkauft hat, bekommen. Bei beliebiger Anspruchserhöhung soll man während der Laufzeit der vorliegenden Gewährleistung den Check oder die Quittung über den Ankauf vorzeigen.

TECHNISCHE EIGENSCHAFTEN

Maximale Tragkraft 5 kg
Temperaturbereich: +5/+30°C

Versorgungsquelle: 1 Lithiumbatterie CR-2032 (Batterie, die zum Lieferumfang gehören, sollen bei ersten Kennzeichen der Entladung sofort ausgewechselt werden).

Dieses Erzeugnis entspricht allen erforderlichen europäischen und russischen Vorschriften- und hygienischen Vorschriften.

Wartung

Wischen Sie die Waage mit einem feuchten Tuch ab. Es ist verboten, Abrasiv- und Lösungsmittel zu nutzen.

The manufacturer reserves the right to change the device's characteristics without prior notice.

Service life of the unit - 5 years

Ausführliche Bedingungen der Gewährleistung kann man beim Dealer, der diese Geräte verkauft hat, bekommen. Bei beliebiger Anspruchserhöhung soll man während der Laufzeit der vorliegenden Gewährleistung den Check oder die Quittung über den Ankauf vorzeigen.

Garantie

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

РУССКИЙ

ЭЛЕКТРОННЫЕ КУХОННЫЕ ВЕСЫ

Данный прибор предназначен для домашнего использования.

ОПИСАНИЕ

- 1 – Стеклянная платформа
- 2 – Дисплей
- 3 – Сенсорная кнопка включения/выключения/режима тары «ON/TARE»
- 4 – Сенсорная кнопка выбора единиц взвешивания «UNIT»
- 5 – Батарейный отсек

РЕКОМЕНДАЦИИ

Электромагнитная совместимость

Эти электронные весы могут быть чувствительны к электромагнитному излучению других устройств, расположенных в непосредственной близости (например, мобильных телефонов, портативных радиостанций, радио, бытовых погодных станций и т.д.).

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

Если на дисплее появляются ошибки или противоречивые данные, замените место установки весов.

