

Saturn[®]

ST-CM0175

COFFEE GRINDER



GB
COFFEE GRINDER

Dear Buyer!
We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become faithful and reliable assistance in your housekeeping.
Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on.
If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

IMPORTANT SAFEGUARDS
When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
 2. To protect against risk of electrical shock, do not immerse the cord, plug, or the appliance in water or other liquid.
 3. Close supervision is necessary when any appliance is used near children.
 4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
 5. Avoid contacting moving parts.
 6. Do not operate any appliance with a damaged cord or plug, if it has been dropped in water or on the solid surface. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
 7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injuries.
 8. Do not use outdoors. This appliance is intended for household use only.
 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
 10. Do not place on or near a hot gas or electric burner.
 11. Check bean hopper for presence of foreign objects before using.
 12. Do not use appliance for other than intended use.
 13. Service life – 2 years
- Save these instructions

INSTRUCTION FOR USE

Before using your coffee Mill for the first time, wipe the stainless steel bowl, blade, hopper and cover with a damp soft cloth, allow to dry completely before using.

1. Remove cover and fill coffee beans into the stainless steel bowl. Do not exceed 60 grams (2 oz.) of beans weighed at a time, approximately at the brim of hopper.
2. Place the cover on the appliance.
3. Plug the cord into the outlet.
4. Hold the unit with one hand and make sure the cover is securely in place, press the button on the cover to switch –on with the other hand. To stop it, simply release the button. Do not remove the cover before the blades have stopped rotating.
5. This appliance is intended for an operation maximum of 60 seconds on.
6. Experimenting with the length of grind will enable you to get exactly the grind you prefer for the coffee.
7. When the blades have stopped unplug the unit remove the cover and the ground coffee.

USE MAINTENANCE INSTRUCTIONS

DO NOT IMMERSE THE MOTOR BASE IN WATER DO NOT PLACE THE APPLIANCE IN THE DISHWASHER.

1. Before cleaning, unplug the appliance from electrical outlet.
2. Wash the cover in warm, soapy water. Rinse and dry completely.
3. Wipe the blades, stainless steel bowl, exterior and motor base with a damp cloth or paper towel to remove any excess ground coffee.
4. Any other servicing should be performed by an authorized service representative.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

Technical Data:
Power: 200 W
Rated Voltage: 220-230 V
Rated Frequency: 50 Hz
Rated Current: 0,9

Set	
COFFEE GRINDER	1
INSTRUCTION MANUAL with	
WARRANTY BOOK	1
SCOOP	1
PACKAGE	1



ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working

electrical equipments to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

RU

"Saturn".

1,5

1,5

1.

2.

3.

4.

5.

6.

7.

8.

9.

10.

11.

12.

13.

1.

2.

3.

4.

5.

6.



7.

1.

2.

3.

4.

5.

200

220-230

50

0,9 A

1

1

1

1

U

1,5

1,5

1.

2.

3.

4.

5.

6.

7.

8.

Saturn®

INTERNATIONAL MANUFACTURER'S WARRANTY

MEZINÁRODNÍ ZÁRUKA

INTERNATIONAL MANUFACTURER'S WARRANTY

The Warranty is provided for the period of 2 years or more if the Law on User Right of the country where the appliance was bought provides for a greater minimum warranty period.

All terms of warranty comply with to the Law on Protection of the Consumer Rights and are governed by the legislation of the country where the product was bought. The warranty and free of charge repair are provided in any country where the product is delivered to by Saturn Home Appliances or authorized representative thereof, and where no restriction of import or other legal provisions interfere with rendering of warranty services and free of charge repair.

Cases uncovered by the warranty and free of charge repair:

1. Guarantee coupon is filled in improperly.
2. The product has become inoperable because of the Buyer's nonobservance of the service regulations indicated in the instruction.
3. The product was used for professional, commercial or industrial purposes (except for the models, specially intended for this purpose that is indicated in the instruction).
4. The product has external mechanical damage or damage caused by penetration of the liquid inside, dust, insects and other foreign objects.
5. The product has damages caused by non-observance of the rules of power supply from batteries, mains or accumulators.
6. The product was exposed to opening, repair or modification of design by the persons, unauthorized to repair; independent cleaning of internal mechanisms etc. was made.
7. The product has natural wear of parts with limited service life, expendables etc.
8. The product has deposits of scale inside or outside of fire-bar elements, irrespective of used water quality.
9. The product has damages caused by effect of high (low) temperatures or fire on non-heat resistant parts of the product.
10. The product has damages of accessories and nozzles which are included into the complete set of product shipment (filters, grids, bags, flasks, cups, covers, knives, sealing rings, graters, disks, plates, tubes, hoses, brushes, and also power cords, headphone cords etc.).

On the warranty service and repair, please contact the authorized service centers of "Saturn Home Appliances".

MEZINÁRODNÍ ZÁRUKA

Záruka se poskytuje na dobu 2 roky. V případě že Zákon na ochranu spotřebitele dané země nařizuje delší dobu, prodlužuje se záruka na tuto dobu.

Veškeré záruční podmínky odpovídají Zákonu o ochraně práv uživatelů a jsou řízené zákonodárstvím státu, kde byl výrobek koupen. Záruka a bezplatná oprava se poskytují v každém státě, kam jsou výrobky dodané společností „Saturn Home Appliances“ nebo jejím zplnomocněným zástupcem a kde nejsou žádná omezení na dovoz nebo jiné právní předpisy omezující poskytnutí záručního servisu a bezplatné opravy.

Případy, na které se záruka a bezplatná oprava nevztahují

1. Záruční list je vyplněn nesprávně.
2. Výrobek byl poškozen kvůli tomu, že zákazník nesplnil pravidla použití, která jsou uvedena v návodu.
3. Výrobek byl používán k profesionálním, komerčním nebo průmyslovým účelům (kromě modelů speciálně určených pro tyto účely, což je uvedeno v návodu).
4. Výrobek má větší mechanická poškození nebo poškození, vyvolaná tím, že se dovnitř dostala tekutina, prach, hmyz a jiné cizí předměty.
5. Výrobek má poškození, která jsou vyvolaná nesplněním pravidel napájení od baterií, sítí nebo akumulátorů.
6. Výrobek rozebírali, opravovali nebo měnili jeho konstrukci lidé, kteří nebyli zplnomocněni k opravě, bylo provedeno samostatné ústřední vnitřní mechanismy a pod.
7. Výrobek má přirozené opotřebování dílů s omezenou dobou použití, spotřebních materiálů atd.
8. Výrobek má vrstvu usazeniny uvnitř nebo zvenku termoelektrických ohřevů, bez ohledu na kvalitu používané vody.
9. Výrobek má poškození, která jsou vyvolaná působením vysokých (nízkých) teplot nebo ohněm na termonestabilní části výrobku.
10. Výrobek má poškození působení úsluženství a nástavce, které jsou dodané spolu s výrobkem (filtry, síky, sáčky, bačky, mísy, víka, nože, šlehače, struhadla, kotouče, talíře, trubky, hadice, kartáče a také síťové šňůry, sluchátkové šňůry atd.).

V otázkách záručního servisu a oprav se obraťte na autorizovanou servisní střediska společnosti „Saturn Home Appliances“.

2

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.

«Saturn Home Appliances».

					LCD		
.4	" "	8-988-993-37-78	+		+	+	+
18		8(8553) 32-22-11 8-960-047-22-11	+	+	+	+	+
98	« - »	8(86133) 6-09-84, 8-918-215-57-75	+	+	+	+	+
.108	" "	8(3955) 67-00-44, 8(3955) 56-61-77	+	+	+		+
.109	-	8(86152)2-81-99	+	+	+	+	+
.1, .1, 12	« -29»	8(8182) 44-15-55	+				
.47	« »	8(8512)25-19-39 8(8512) 25-12-00	+	+	+		
16,2 .7	« - »	8(8512) 54-67-67, 8(8512) 54-91-91			+	+	+
.15	« - »	8(85141) 3-61-25	+	+	+	+	+
32		8-927-552-47-21, 8-937-122-13-99				+	+
.113	« »	8(3852) 63-94-02	+		+	+	+
.25		8-905-425-60-4-73	+	+	+		

№ 37	-	8(8635) 47-47-72, 8(8635) 47-47-72	+	+	+	+	+
№ 63	« - »	8(86155)3-11-00, 8-918-980-64-75	+	+	+	+	+
№ 84	..	8(86559) 2-08-02, 8(86559)5-29-71	+	+	+	+	+
№ 58	« »	8(8442) 23-41-36, 8(937) 717-93-34	+		+		
№ 173	« - »	8(8442) 97-50-10, 8-960-883-59-00		+			
№ 4	..	8(8442) 98-16-47, 8(8442) 53-06-04	+	+	+	+	+
№ -	« - »	8-961-688-53-48		+			
№ -		8-927-521-52-00		+		+	+
№ 9		8-937-722-68-12				+	+
№ 32		8-937-730-66-03		+		+	+
№ 158		8-904-404-14-55				+	+
№ C -	«Master»	8-928-126-63-66	+		+		
№ 12/15		8(937) 717-93-36	+		+		

№ 65							
№ 65	« »	8(8172) 70-03-45, 8(8172) 54-21-54	+		+	+	+
№ 1	« »	8(8172) 52-72-51	+		+		
№ 46	" "	8(473) 260-09-08, 8(473) 240-57-73	+		+	+	
№ 140/1	- ..	8(87951) 6-47-93, 8-928-654-28-01		+			
№ 48	« »	8-962-655-20-00	+	+	+	+	+
№ 68	« »	8(8313) 21-14-14	+		+		
№ 54	« »	8(8313) 20-93-00, 8(8313) 20-92-94		+			
№ 63	" - "	8(84235) 2-86-59, 8(84235) 9-14-64	+		+	+	+
№ 84	« - »	8(86132) 2-11-71, 8(86132) 3-66-02	+	+	+	+	+
№ 64	" - "	8(343)240-26-60	+		+		
№ 16	/ " - "	8(343) 201-51-41, 8(343)347-76-83	+	+	+	+	+
№ 47	« »	8(47467) 4-12-08, 8(47467) 4-33-17	+		+		

.45/6	« - »	8(4932) 335185, 8(4932) 335236	+	+	+	+	+
.4	« - »	8(3412) 30 79-79, 8(3412)30-83-07	+		+	+	+
.76	« - »	8(3412) 78-76-85, 8(3412) 78-06-64	+		+	+	+
7/1, 301, 307	« - »	8(3412) 44-60-40, 8(3412) 44-60-67		+			
7 (« »)	« - 26»	8(86545) 2-74-74		+			
.24	« - »	8(8362) 24-11-24, 8(8362) 25-55-40	+	+	+	+	
.20	« »	8(39520) 65-04-95, 8(39520) 93-16-56	+		+	+	
.24	" "	8(3952) 42-55-76, 8(3952) 78-15-83	+		+		
.38	« »	8(843) 248-71-17, 8(843) 258-85-65	+		+		
.25, .47	« - »	8 (4842) 54-82-22, 8 (4842) 54-83-33	+	+	+	+	+
33	-	8(3439) 39-95-20, 8(34399)34-74-40	+	+	+	+	+
53/2	-	8(3842) 35-39-67	+			+	
	« - »	8(8332) 56-25-95,	+		+	+	

.42	»	8(8332) 54-70-77					
.9	-	8-988-548-24-36	+	+	+		
5	« - »	8(4942) 300107, 8(4942) 300107	+		+	+	+
.2,	-	8(86142)4-43-59	+	+	+	+	+
.3	-	8(861) 267-50-88	+	+	+	+	+
103, .55	« - »	8(861) 222-64-13, 8(861) 222-85-55, 8-905-408-08-38	+	+	+	+	+
.42/2	-	8-918-041-31-04, 8(86131) 71-2-72		+			+
.116	-	8(86164) 7-01-22		+			
.57	" "	8(86145) 3-78-74	+	+	+	+	+
.25	« - »	8(86164) 65-4-95, 8-918-355-81-70	+	+		+	+
.1	-	8(86153) 4-16-70		+			
168	" "	8(86151) 4-33-54, 8-918-464-00-86	+	+		+	+

1	« - »	8(3912) 93-54-33, 8(3912) 94-52-82	+	+	+	+	+
36-	« +»	8 (4712) 50-85-90, 8 (4712) 35-04-91	+	+	+	+	
	« - »	8 (86169) 7-39-99, 8(86169) 7-24-96	+	+	+	+	+
.66	" "	8(4742) 33-45-65, 8(4742) 33-45-95	+	+	+	+	+
.29	« - »	8 (8772) 52-36-90	+	+	+	+	
25	« - »	8 (8772) 55-62-38		+			+
.20	« - »	8(8722) 93-30-73	+	+	+	+	+
11	« »	8(86385) 2-33-26 8-960-458-07-11	+	+		+	+
.16, .9	« - »	8 (499) 340-29-89, 8 (499) 733-25-00		+			
1534	« - »	8(499) 717-82-07, 8(499) 717-82-12	+		+	+	+
.3 ()	« »	8(495) 721-30-70, 8(499) 168-05-19, 8(499) 168-47-15	+		+	+	+
.20 (30/05)	« »	8(8552) 359002, 8(8522) 359042	+	+	+		
.24	" - "	8(8662) 42-04-30	+		+	+	

		8(8662) 42-12-21					
55	« - »	8(86554) 5-59-77, 8(86554) 3-67-57	+	+	+	+	+
.9 (« »)	« »	8(8555) 48-08-80, 8-917-906-60-06	+		+	+	+
.21	« - »	8(831) 229-63-66, 8(831) 229-60-87	+		+	+	
.18	« - »	8(831) 46-18-848		+			+
.6	« - »	8(831) 46-18-848		+			+
.18	« - »	8 (3843) 20-31-33	+		+	+	+
.14	« - »	8(8617) 63-11-15, 8(8617) 63-03-95	+	+	+	+	+
17	" - "	8(383)274-99-33, 8(383) 274-99-45	+		+		
.24		8(86369) 3-74-75, 8-928-609-35-85	+	+	+		
4		8 (3532) 36-87-94	+			+	+
.16	« - »	8(3532) 77-67-64, 8(3532) 78-15-82	+	+	+	+	+
.130	" - "	8(3812)36-42-02	+		+	+	+
.2	« - +»	(3537) 33-84-43, 8(3537) 35-13-18	+	+	+	+	+

« 2	« »	8(8412) 26-09-60, 8(8412) 26-12-29	+		+	+	+
« 3	« - »	8 (342) 221-40-99	+	+	+	+	+
« 11	« - »	8(8142) 78-06-93, 8(8142) 70-65-48	+		+		
« 11	« - »	8 (8112)-53-86-30, 8 (8112)-53-86-50	+		+		
« 12		8(793) 31-84-16	+	+	+	+	+
5-13	" "	8(8793) 98-70-11	+	+	+	+	+
« 148	-	8(47396) 48-911	+	+	+	+	+
« 37	« - »	8(863) 250-47-77	+		+		
« 50-1/52, 55	« »	8 (863) 21-92-112, 8-800-100-51-52	+	+	+	+	+
« 11 /17		8-906-453-35-81	+		+		
« 12	« - »	8(4855) 22-04-77, 8(4855) 25-38-60	+	+	+	+	+
« 14	" "	8(86370) 2-19-50	+	+	+	+	+
		8(4855) 22-04-77,	+	+	+	+	+

« 12	" - "	8(4855) 25-38-60					
« 21	« - »	8(4855) 24-31-21	+	+	+	+	+
« 14, 1	« - »	8(4912) 76-88-01, 8(4912) 40-30-30	+	+	+	+	+
« 42" "	« - »	8(4912) 41-33-02,	+	+	+	+	+
52, « 8, 9		8(846) 931-85-46	+	+	+	+	+
63	" - "	8(846) 379-54-54	+	+	+	+	+
« 197	« - XXI»	8(812) 600-11-97	+	+	+	+	+
« 41,	« - »	8(812) 325-36-56, 8(812) 325-36-57	+		+	+	
« 11, 36	« -95»	8(812) 822-18-00, 8(812) 320-06-61	+				
« 1	« - »	8(8342) 23-05-91, 8(8342) 47-48-59	+	+	+		
3-« 11, 36	« - - »	8(8452) 35-11-80, 8(8452) 55-43-63	+	+	+	+	+
« 167/1		8-951-522-38-11	+	+	+	+	+
« 253	« - »	8(496) 547-04-95, 8(496) 549-32-79	+	+		+	+

№ 90	« »	8 (8622)55-51-19, 8 (8622) 55-01-08	+			+	+
№ 50 № 8/1	« »	8(8652) 74-01-91	+	+	+		
№ 63	« »	8(8652) 24-30-14, 8(8652) 23-31-81	+	+	+	+	+
№ 15 № 21	« - »	8(8652)95-53-68, (8652)95-61-90				+	
№ 1	« - »	8 (4725) 24-62-27, 8 (4725) 24-73-49	+	+	+		
№ 158	« - »	8(3473) 20-12-13, 8(3473) 20-27-70	+		+	+	+
№ 25	« »	8(8212) 22-95-29, 8(8212) 29-12-20	+	+	+	+	+
№ 137	« -2000»	8(4752) 56-19-42, 8(4752) 56-19-44	+	+	+	+	+
№ 88/15	-	8-910-834-80-35, 8-952-065-89-10	+		+		
№ 24/2	-	8(86130) 4-86-59, 8-918-147-02-03	+	+		+	+
№ 2/2	" - "	8(86196) 7-20-53	+	+	+	+	+
№ 48	« +»	8(8482) 22-72-41, 8(8482) 22-71-85, 8(8482) 61-65-64	+	+	+	+	+

№ 58	« -2»	8(3822) 56-23-35, 8(3822) 48-08-80	+			+	
№ 137	« - »	8(4872) 31-12-57	+	+	+	+	+
№ 55	" "	8(3452) 47-35-69	+			+	+
№ 28	« »	8(3012) 21-89-63	+			+	+
№ 18, 18, 2	« »	8(8422) 31-00-00	+	+		+	+
№ 16/7	« - »	8(8422)73-44-22, 8(8422) 73-29-19	+	+			+
№ 378	« - »	8(87875) 7-44-82	+	+	+		
№ 148	« » -	8(3472) 77-12-62	+			+	
№ 153, 42, 7	« »	8(347) 279-90-70, 8(347) 241-62-02					+
№ 15	" - "	8(86391) 2-18-06	+			+	
№ 36	« » -	8(8352) 62-30-97, 8(4942) 63-20-98	+			+	
№ 102 ()	-	8(351) 772-72-05, 8(351) 772-73-66, 8(351) 772-69-01	+	+	+	+	+
№ 8 ()	-	8(351) 239-39-34, 8(351) 239-39-35	+	+	+	+	+

8	,3, .8	-	(044) 332-01-67	+	+	+
9	- ,42	-	(0432) 46-50-01	+	+	-
10	,61		(0432) 61-95-73	+	+	+
11	- ,16	-	(0432) 464393; (0432) 468213	+	+	+
12	,3		(0432) 64-24-57, (0432) 64-26-22	+	+	+
13	,1		(0432) 509-191, 579-191	+	+	+
14	,68, 1 , .420		(0562) 337-574	+	+	+
15	17 .130	-	(056) 778-63-25 (28)	+	+	+
16	,59		(0562) 35-04-09	+	+	+
17	,118		(0562) 67-60-44	+	+	+
18	,41		(056) 790-04-60	+	+	+
19	,9		(068) 851-33-33	+	+	+
20	188		(062) 3450607 0953204451	+	+	+
21	,129	-	(062) 349-26-81	+	+	+
22	,1	-	(062) 3027569 (066)5082652	+	+	+
23	,8	" "	(0412) 471-568	+	+	-
24	,4 .222		(067) 410 2198	+	+	+
25	24	C	(0412) 47-07-42, 42-11-53	+	+	-

26	,50	-	(061) 220-97-65 (64)	+	+	+
27	,175		(061) 701-65-96	+	+	+
28	,83	-	(061)212-03-03	+	+	+
29	,75		066-085-75-39	+	+	+
30	19		(0342)559-525, 750-777	+	+	+
31	,14		(0342) 754737	+	+	-
32	,9	-	096-729- 4038,067-484- 9888	+	+	+
33	,76		(04597) 57393	+	+	-
34	,161	-	(04736) 629-49	+	+	+
35	1	-	(044) 591-11-90	+	+	+
36	,1	" "	(044) 4269198	+	+	-
37	,9 .57	-	(044) 369-5001 (063) 486-6999	+	+	+
38	,10		(06272) 2-62-23, (050) 279-68-16	+	+	+
39	,1	" "	(0522) 301-456	+	+	+
40	,2		(0522) 35-79-23	+	+	+
41	,98	-	(0522) 270-345, 349-585	+	+	+
42	,13	-	(097) 264-21-67, 776-67-70	+	+	+
43	,3, .5	" "	(04142) 5-05-04	+	+	+

44	,15-106		(06264) 5-93-89	+	+	+
45	,7		(050) 526-06-68	+	+	+
46	,44, .1		(05366) 39-192	+	+	-
47	,42		(056) 401-33-56, 404-00-80, 474-61-03	+	+	+
48	,9		(056) 4092302 03	+	+	+
49	,64/7		(0564) 40-07-79	+	+	+
50	,73	" "	(056) 440-07-64	+	+	+
51	,81		(050) 214-91-73; (066) 017-02-03	+	+	+
52	,49		(0642) 505-783	+	+	+
53	,50		(0642)50-57-83	+	+	+
54	,96		(0642) 494-217, 33-11-86	+	+	+
55	,1		(0332)290752	+	+	+
56	,15		(032) 244-53-44	+	+	+
57	,35	" "	(032) 2973631	+	+	+
58	,2		(032) 247-14-99	+	+	+
59	,116	" "	(032) 245-80-52	+	+	-
60	,28		(032) 239-51-52 (032) 239-55-77,295-50-28, 295-50-29	+	+	+
61	,9	" "	032-267-63-26	+	+	-

62	242		(062)322-55-50	+	+	+
63	,2		04337-64847;0432-468213	+	+	+
64	,24/1		(099) 262-11-18	+	+	+
65	,46		(03131)37-337, 37-336	+	+	-
66	,50, 32/18		(0629) 41-06-50	+	+	+
67	,227	" "	(0629) 473-000	+	+	+
68	,33,	" "	(0512) 580-555	+	+	+
69	,49	" "	0512-58-21-80	+	+	+
70	,2		(0512) 58-06-47	+	+	+
71	,62		(05662) 22-488, (097) 402-71-95	+	+	-
72	,97, .2	" "	(05662) 4-15-03	+	+	-
73	,38		(055) 497-26-17	+	+	-
74	,38	" "	(041)4152010	+	+	-
75	,66 (. 2)		048-7317704; 7317703;	+	+	+
76	,90		(048) 700 17 37	+	+	+
77	,55	" "	(048) 715-10-25, (0482) 39-06-18	+	+	+

78	' ,67	" "	8(05632) 6-15-54, (05632) 6-23-42	+	+	-
79	' ,26		050-013-72-17, 0532-509889	+	+	+
80	' ,14		(0532) 69-42-62	+	+	+
81	' ,21	-	(0532) 69-09-46 (093)562-81-25	+	+	+
82	' ,66	-	(0532)615-621	+	+	+
83	' ,371	-	(04637)53-982 (093)753-38-28	+	+	+
84	' ,101/1		(046) 3738595	+	+	+
85	' , ,12	-	(0362) 26-67-53,26-65-85	+	+	-
86	' , ,26		(0692) 55-56-43, 45-36-99	+	+	+
87	' ,72	-	(0652)-69-07-78	+	+	+
88	' ,17/1	" - "	(0652) 522-771	+	+	+
89	' ,32	-	(04733)-46-182	+	+	-
90	15 (' ,)		(06444)40289	+	+	+
91	' ,171 /10	-	(245) 53-136	+	+	+
92	' ,19		(0542) 705-296	+	+	-
93	' ,17	SLT- Service	(0542) 78-10-13	+	+	+
94	' ,2	" "	(0352) 26-30-13, 23-17-97	+	+	-
95	' ,1/24	" "	(047) 44-46-614,(047) 44-46-134	+	+	+

96	' ,101		(0312) 661-297	+	+	+
97	' ,12		(057) 717-13-39, 702-16-20	+	+	+
98	' ,3		(057) 734-97-24, 712-51-81	+	+	-
99	18 (' , 42)	" "	(096) 595-37-46	+	+	+
100	' ,1		(03142) 42-258	+	+	+
101	' ,5	-	(0552) 29-60-42	+	+	+
102	' ,28		(0552) 43-40-33	+	+	+
103	' ,35		(0552) 420-235	-	-	+
104	' ,18		(0382)78-37-55, 78-37-73	+	+	+
105	' ,10/1	-	(0382) 723-241, 723-240	+	+	+
106	' ,63		097-549-20-36	+	+	+
107	' ,7, .301		0472-633-728	+	+	+
108	' ,71		(0472) 435-389	+	+	+
109	' ,146, .102	" - "	(0472) 563-478, 500-354, (096) 505-63-63	+	+	+
110	' ,.77- ,1		(0462) 601585	+	+	+
111	' ,6		(0462) 724872,724949	+	+	+
112	' ,105 ()		(0372) 55-48-69,90-13-11	+	+	+

113	,265		(0372) 58-43-01	+	+	+
114	,3	" - "	(050) 373-73-71	+	+	+
115	,5	(-)	(050) 324-43-01	+	+	-

RU

GB

WARRANTY COUPON

**When purchasing the product,
please require its checking before you;**

BE SURE

**that the goods sold to you, are functional and complete
and that the warranty coupon is filled in correctly.**

This warranty coupon confirms the absence of any defects in the product you purchased and provides for free of charge repair of the product failed through the fault of the manufacturer throughout the period of warranty service and free of charge repair.

Failing the presentation of this coupon, in case of its improper filling in, infringement of factory seals (if any), and also in cases indicated in the warranty obligations, the claims are not accepted, and no warranty service and free of charge repair is made!

The warranty coupon is valid only in the original copy with the stamp of trading organization, signature of the seller, date of sale and signature of the buyer.

UA

CZ

ZÁRU NÍ LIST

**P i koupi výrobku
žádejte o jeho vyzkoušení ve Vaší přítomnosti,**

P E S V D T E S E,

**že Vám prodaný výrobek je dobře fungující a kompletní
a že záru ní list je vyplněn správně.**

Tento záru ní list potvrzuje, že na Vámi koupeném výrobku nejsou žádné vady a zajišťuje bezplatnou opravu nefungujícího přístroje z viny výrobce, během celé záru ní doby.

Bez předložení tohoto listu, při jeho nesprávném vyplnění, porušení plomb výrobce (jsou-li na výrobku) a také v případech, které jsou uvedené v záručním listě, nároky se nepřijímají a záruční oprava se neprovádí!

Záru ní list je platný jenom jako originál s razítkem obchodní organizace, podpisem prodávajícího, termínem prodeje a podpisem zákazníka.

Saturn®

WARRANTY COUPON

ZÁRU NÍ LIST

SATURN HOME APPLIANCES S.R.O. KON VOVA 141,
13083 PRAHA 3 – ŽIŽKOV, ES KÁ REPUBLIKA, TEL: + 4202/ 67 108 392

Model /

Production number/Výrobní íslo/
/

Date of sell/Termín prodeje/ / ,

Shop stamp/Razítko obchodu/ /

Seller's signature/Podpis prodava e/ /

Buyer's Signature confirming the acquaintance and consent with conditions of free of charge maintenance service of the product, and absence of the complaints on appearance and color of the product.

Podpis zákazníka, potvrzující seznámení a souhlas s podmínkami bezplatného záru ního servisu výrobku, a také neexistence nárok na vn íšek a barvu výrobku.

Saturn®	Saturn®	Saturn®	Saturn®
Model / /	Model / /	Model / /	Model / /
Production number / /	Production number / /	Production number / /	Production number / /
Name of the Trade Company / /	Name of the Trade Company / /	Name of the Trade Company / /	Name of the Trade Company / /
Stamp of the Trade Company/ /	Stamp of the Trade Company/ /	Stamp of the Trade Company/ /	Stamp of the Trade Company/ /
Client Address/Phone # / /	Client Address/Phone # / /	Client Address/Phone # / /	Client Address/Phone # / /
Date of Receiving/ /	Date of Receiving/ /	Date of Receiving/ /	Date of Receiving/ /
Defect / /	Defect / /	Defect / /	Defect / /
Signature, Stamp / /	Signature, Stamp / /	Signature, Stamp / /	Signature, Stamp / /
COUPON 1	COUPON 2	COUPON 3	COUPON 3