



ENGLISH

HAIR TRIMMER VT-2550 B

The trimmer is intended for cutting, trimming and adjusting hair. Attachments of different size are supplied with the unit for easy hair and body care. The unit is both cord-operated and battery-powered.

DESCRIPTION

1. Attachment lock button
2. Body
3. Charging indicator
4. Power switch
5. AC adapter slot
6. Storage base
7. Cleaning brush
8. Comb
9. Lubricating oil
10. AC adapter
11. Wide trimmer 40 mm
12. Telescopic attachment for trimmer 40 mm
13. Wide trimmer 30 mm
14. Telescopic attachment for trimmer 30 mm
15. Detail trimmer

SAFETY MEASURES

Before using the electric unit, read this instruction carefully and keep it for further reference. Use the unit according to its intended purpose only, as it is stated in this user manual.

Mishandling of the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Before the first connecting the unit to the mains for battery charging, make sure that your home mains voltage corresponds to not adapter operating voltage.

• Use only the attachments and the adapter supplied.

• Do not use the hair clipper if the attachment comb or the blades are damaged.

• Do not use the unit in places with high temperature and relative humidity more than 80%.

• Charge the battery at the temperature from +5°C to +35°C.

• Use only the attachment comb supplied.

• Do not immerse the unit, the adapter and adapter cord into water or other liquids; do not use the hair clipper while taking a bath or a shower.

• Do not keep the unit near a bath, filled with water, or a sink. Do not immerse the unit into water or other liquids; do not wash the hair clipper under running water.

• Always keep the trimmer blades clean and lubricated.

• After each using clean the attachments with the brush supplied to remove the cut-off hair.

• Never leave the operating unit unattended.

• Switch the hair clipper off during intervals in operation or when you are not using it.

• The power cord should not:

- touch hot objects and surfaces,

- be immersed into water,

- run over sharp edges,

- be used as a handle for carrying the unit.

• Do not allow children to use the unit as a toy.

• This unit is not intended for usage by children or disabled persons unless they are given all the necessary and understandable instructions by a person who is responsible for their safety on security measures and information about danger that can be caused by improper usage of the unit.

• For liability reasons do not leave polyethylene bags, used as a packing, unattended.

• **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.

• To avoid damages, transport the unit in the original package only.

• Keep the unit in a dry cool place out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

USING THE HAIR CLIPPER

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

Battery charging

Full charging of the battery is enough for about 35 minutes of continuous unit operation.

• Insert the connector of adapter (10) into the slot (5) on the hair clipper body (2), insert the AC adapter plug into the mains socket, the charging indicator (3) will light up blue.

• The first charging cycle takes 10-12 hours, recharging of the battery takes about 8 hours.

• The indicator (3) will go out when the battery charging is finished. Unplug the adapter (10) and remove the adapter cord from the slot (5).

Notes:

• Recharge the battery only after its complete discharge.

• Charge the battery at the temperature from +5°C to +35°C.

• Never leave the unit connected to the mains, unattended.

• After a long period of non-use (more than 3 months) charge the battery completely (10-12 hours) before the hair clipper use.

• The unit can be powered by the mains.

Attachments

• Keep the attachments on the base (6).

• Before installing and changing the attachment switch the unit off by pressing the button (4), if the unit is powered by the adapter, unplug it.

• Move the lock button (1) from the attachment and, holding the button (1), remove the attachment from the unit body (2).

• To install the attachment, hold the lock button (1) and clamp the bottom part of the attachment into the groove on the rear side of the unit body (2) and then move the button (1) from the attachment and insert the attachment till bumping, release the lock button (1).

Installing the telescopic attachments

Telescopic attachment for trimmer 40 mm

Install the telescopic attachment (12) on the trimmer (11), the lower clamp of the attachment (12) should be fixed on the trimmer (11). You can adjust the haircut length by moving the comb relative to the trimmer (11) within 3, 5, 7, 9, 11 mm.

Telescopic attachment for trimmer 30 mm

Install the attachment (14) on the trimmer (13) on the blades side and push it downwards till bumping. You can adjust the haircut length by moving the attachment relative to the trimmer (13) within 3, 5, 7, 9, 11 mm. Remove the attachment (14) by moving it upwards relative to the trimmer (13).

Lubricating oil

• To maintain the hair clipper in a good condition, you should lubricate the trimmer blades (11, 13, 15) after every use of the hair clipper.

• For lubricating the blades use only the lubricating oil (9), supplied with the unit.

Operating the hair clipper

• Before the cordless operation of the unit, charge it completely.

• Install the required attachment:

Note: For the corded unit operation, insert the AC adapter (10) into the slot (5) on the unit body (2) and connect the AC adapter (10) to the mains.

Switch the unit on by pressing the button (4).

After finishing the unit operation switch it off by pressing the button (4).

Notes:

• Always switch the hair clipper off during the intervals in operation.

• While corded unit operation always switch the hair clipper off and unplug the AC adapter before changing the attachments.

Haircutting

Use the trimmers (11, 13) with corresponding telescopic attachments (12, 14) for hair cutting.

You can use the detail trimmer (15) for creative haircuts.

• Hair should be clean and dry while cutting.

• Install the required trimmer (11, 13 or 15).

• Before cutting hair switch the hair clipper on, pressing the button (4), and make sure that hair or comb (8) and blades move smoothly. If there is some resistance in the blades, remove it with a dry cloth.

• Switch the unit off by setting the switch (4) to the position «», then install the corresponding telescopic attachment (12 or 14) on the trimmer (11 or 13).

• Seat the person so that his/her head is approximately at your eye level, cover the person's shoulders with a towel and set hair with the comb (8).

• Switch the unit on by pressing the button (4).

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 3 years

Guarantees

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

ENGLISH

Reminder

- Always cut off a little amount of hair at a time - if necessary you can always return to the cut area again for additional cutting.
- The best haircut results are reached on dry hair, not wet.
- Set hair with the comb (8) to reveal uneven locks.
- It's better to leave longer hair after cutting for the first time.
- After learning the unit better, you will be able to arrange your hair in any style you need.

Step one

Install the telescopic attachment (12 or 14) to the position 3 or 6. Switch the hair clipper on using the button (4). Hold the unit with the blades pointed upwards. Start the haircutting from the beginning of the hair growth. Slowly move the clipper upwards. This way cut the head back area at neck bottom and near the ears.

Step two

Switch the hair clipper off pressing the button (4), then, depending on the used telescopic attachment (12 or 14), set the attachment to the position 9 or 11, switch the hair clipper on and continue cutting hair near the top of the head.

Step 3 – cutting temples

Switch the hair clipper off, then, depending on the used telescopic attachment (12 or 14), set the attachment to the position 3 or 6 and cut hair on the temples. Then, depending on the used telescopic attachment (12 or 14), set the attachment to the position 9 or 11, switch the hair clipper on and continue cutting hair towards the top of the head.

Step 4 – cutting the top of the head

Using the telescopic attachment (14) in the position 9 or 11, cut the hair from the top of the head towards the crown against the hair growth direction.

• You can cut hair both against and along the hair growth direction, but keep in mind that hair cutting against the growth direction will be shorter than the one along it.

• Set the telescopic attachment (12 or 14) to the position 3 and 6 for very short haircut. To leave longer hair, use the positions 7, 9 or 11 of the telescopic attachments (12 or 14).

• To leave longer hair, take hair locks between your fingers and cut them using the hair clipper.

• You can use the comb (8): lift the hair locks and cut them with the hair clipper above the comb.

• Do not start cutting from the head back.

• Set the hair with the comb (8) to reveal uneven locks.

Step 5 – the final part

In the final stage of hair cutting remove the telescopic attachment from the unit, turn the blades of the hair clipper towards the hair and trim hair on the temples and neck carefully. Do not press the hair clipper strongly, there is danger of injuries or cuts when open blades come in contact with skin.

Cone – shaped haircut

Set the telescopic attachment and start cutting from the head back towards the crown. Cut hair against hair growth from the head front to the crown and on the head sides. To get a flat top haircut, use the comb (8), lift the locks and cut them along the comb.

Step 6 – cleaning the attachments

Use the trimmers (11, 13) with telescopic attachments (12, 14) for beard trimming, you can also use the detail trimmer (15).

• Install the trimmer (11 or 13) on the hair clipper and install the corresponding telescopic attachment (12 or 14) on the trimmer.

• Until you learn your hair clipper better, set the attachment combs to the position 9 or «+1». This will help you to reduce the haircut length by slightly adjusting the telescopic attachments.

• To cut the beard symmetrically start cutting from the ear to the chin on the one side of the face, and then repeat the beard cutting on the other side.

• When cutting mustaches, first comb them and then start cutting from the middle of the tips of the lips.

Note: Always cut off a little amount of hair at a time; if necessary you can always return to the cut area again for additional cutting.

• In the final stage of beard cutting remove the telescopic attachment from the unit, turn the blades of the unit towards yourself, and pressing the hair clipper slightly define the desired shape of the beard.

• Do not press the hair clipper strongly, there is danger of injuries or cuts when open blades come in contact with skin.

• When cutting hair on the cheeks, move the trimmer downwards and upwards on the neck.

• After cutting of beard and mustaches, maintain their shape.

CLEANING AND CARE

• Switch the hair clipper off after use.

• Remove all the used attachments from the hair clipper and clean them inside and outside from hair, using the cleaning brush (7).

• You can wash the attachments under a water jet, then wipe them and dry thoroughly.

• Never use solvents or abrasives to clean the unit body and attachments.

• Never immerse the hair clipper, the adapter and the adapter cord into water or other liquids.

Lubricating the trimmer blades (11, 13, 15)

Regularly lubricate the blades using the oil (9) supplied with the unit.

• Apply one or two drops of lubricating oil (9) on the teeth of the trimmer blades and the supporting part of the upper blade.

• Install the trimmer on the hair clipper body and switch the hair clipper on, make sure that the blades are moving smoothly.

• Switch the unit off, clean the excess of oil with a dry cloth.

Attention!

Use only the oil supplied with the unit.

DO NOT use vegetable oil, fat and mixture of oil and solvents for lubrication.

Solvents will evaporate, leaving thick grease that may slow down the blades motion.

Storage

• Clean the hair clipper and lubricate the blades of the trimmers (11, 13, 15) with lubricating oil (9) before taking the unit away for storage.

