



PMC 5001 Wi-Fi IQ Home

Manual Instruction / Guarantee

Шановний покупцю!

Дякуємо Вам за вибір продукції торгової марки **POLARIS**.

Наші вироби розроблено відповідно до високих вимог якості, функціональності та дизайну. Ми впевнені, що, придбавши новий виріб нашої фірми, Ви будете задоволені.

Увага! Перед початком експлуатації приладу уважно прочитайте цю інструкцію, в якій міститься важлива інформація, що стосується Вашої безпеки, а також рекомендації з правильного використання приладу й догляду за ним.

Зберігайте інструкцію разом із гарантійним талоном, касовим чеком, а також, якщо це можливо, з картонною коробкою і пакувальним матеріалом.

Зверніть увагу! Внаслідок постійного процесу внесення змін та вдосконалень між інструкцією і виробом можуть спостерігатися певні розбіжності. Виробник сподівається, що користувач зверне на це увагу.

ЗМІСТ

1. Загальна інформація	4
2. Сфера застосування	4
3. Опис приладу	4
3.1. Будова приладу	5
3.2. Панель керування	6
4. Підготовка до роботи	8
4.1. Дистанційне керування приладом через WIFI	8
5. Експлуатація приладу	19
5.1. Порядок роботи	20
5.2. Функція «Відстрочений старт»	24
5.3. Переривання програми	25
5.4. Увімкнення / вимкнення автоматичного переходу в режим	26
ПІДІГРІВ	
5.5. Програми приготування	27
5.6. Стисла таблиця програм приготування	38
6. Чищення та догляд за приладом	40
7. Транспортування та зберігання	41
8. Реалізація	41
9. Вимоги щодо утилізації	41
10. Загальні вказівки з безпеки під час роботи з електричною побутовою технікою	42
11. Заходи безпеки під час користування мультиваркою	43
12. Якщо у вас виникла проблема	44
13. Комплектація	46
14. Технічні характеристики	46
15. Інформація про сертифікацію	47
16. Гарантійні зобов'язання	48

1. ЗАГАЛЬНА ІНФОРМАЦІЯ

Ця інструкція з експлуатації призначена для ознайомлення з технічними даними, будовою, правилами експлуатації та зберігання мультиварки побутової електричної, модель **POLARIS PMC 5001 IQ Home** (далі за текстом – мультиварка, прилад).

2. СФЕРА ЗАСТОСУВАННЯ

1. Прилад призначений для побутового та аналогічного використання за температури та вологості житлового приміщення відповідно до цієї інструкції:
 - у пунктах харчування співробітників магазинів, офісів, фермерських господарств та інших підрозділів;
 - у місцях, призначених для постійного проживання, а також у готелях;
 - у місцях, призначених для ночівлі та сніданку.
2. Прилад не призначений для промислового та комерційного використання, а також для обробки нехарчових продуктів.
3. Виробник не несе відповідальності за збитки, що виникли в результаті неправильного або не передбаченого цією інструкцією використання.

3. ОПИС ПРИЛАДУ

Мультиварка **PMC 5001 IQ Home** - це сучасний багатофункціональний прилад нового покоління для приготування їжі. Поєднуючи в собі функції плити, духової шафи, пароварки, мультиварка допоможе Вам заощадити місце на кухні. З мультиваркою ви зможете легко і швидко приготувати свої улюблені страви. Мультиварка має 14 автоматичних програм та трьохетапний режим «Мій рецепт PLUS», який можна налаштовувати самостійно.

Функція «Мій рецепт Plus» створена спеціально для творчих людей. Завдяки можливості самостійно задавати температуру і час приготування, ця функція надасть Вам справді необмежені можливості для приготування різноманітних страв – від найпростіших до кулінарних шедеврів.

Ви швидко оціните перевагу функцій дистанційного керування, відстроченого старту і автоматичного підігріву страв, які дозволять Вам приготувати страву до визначеного часу і зберегти її теплою після приготування.

У мультиварці PMC 5001 IQ Home реалізована унікальна можливість дистанційного керування приладом, що піднімає домашню кулінарію на новий рівень.

Для роботи з WIFI Вам необхідно встановити мобільний додаток «POLARIS: IQ home».

3.1. БУДОВА ПРИЛАДУ



АКСЕСУАРИ



3.2. ПАНЕЛЬ КЕРУВАННЯ ТА ДИСПЛЕЙ



Кнопка	Значення
Дисплей 	Відображає час та температуру приготування, якщо програма допускає зміну температури.
	- Ця кнопка служить для запуску заздалегідь обраної програми приготування. - Натиснення кнопки "СТАРТ" під час приготування страви вимикає та вмикає автоматичний перехід у режим ПІДІГРІВ.
	- За допомогою цієї кнопки можна перервати будь-яку програму до її завершення. Після цього прилад перейде в режим очікування. - Якщо прилад знаходиться в режимі очікування (програми не запуснені), натиснення кнопки "ПІДІГРІВ/СКАСУВАННЯ" запускає режим ПІДІГРІВ з прямим відліком часу. - У режимі вибору програм приготування натиснення цієї кнопки скидає налаштування і переводить прилад в режим очікування. - Індикатор кнопки «Підігрів/Скасування», що світиться, сигналізує про увімкнений режим підігріву або про перехід виконуваної програми після її завершення у режим підігрівання.


Кнопка	Значення
	Кнопка переходу в універсальний 3-ступінчатий режим «Мій рецепт Plus» з ручним налаштуванням часу та температури приготування на кожному етапі. Після переходу у режим налаштування «Мій рецепт Plus» повторним натисненням цієї кнопки можна циклічно переходити на різні етапи.
	Активація функції «Відстрочений старт» дозволяє приготувати страву до зазначеного часу (див. п. 5.2.).
	Ця кнопка служить для вибору однієї з 14 програм приготування. Кожне натиснення кнопки “МЕНЮ” переміщує курсор списку програм згори донизу на одне положення у лівому стовпчику, потім у правому, при цьому на панелі керування спалахує світловий індикатор з назвою програми та лунає однократний звуковий сигнал.
	З допомогою цих кнопок можна налаштувати час приготування відповідно до рецепту страви. При зміні часу приготування кнопка “ГОДИНИ” змінює час у годинах, а кнопка “ХВИЛИНИ” змінює час у хвилинах.
	З допомогою цієї кнопки у режимі вибору та налаштування програми можна перейти від задавання часу приготування до задавання температури (якщо задавання температури передбачене обраною програмою). Кожне натиснення цієї кнопки збільшує значення температури на один крок налаштування, якщо зміна температури можлива.
	Індикація режиму керування через WIFI

4. ПІДГОТОВКА ДО РОБОТИ

- Відкрийте упаковку, акуратно витягніть прилад, видаліть усі пакувальні та рекламні матеріали.
- Витягніть усі аксесуари та інструкцію з експлуатації.
- Перевірте комплект поставки (див. розділ Комплектація)
- Зніміть усі рекламні наклейки. Протріть корпус приладу вологою губкою.
- Промийте чашу у теплій мильній воді без використання агресивних та абразивних миючих засобів.
- Ретельно просушіть.



Зніміть з корпусу усі наклейки та протріть вологою тканиною

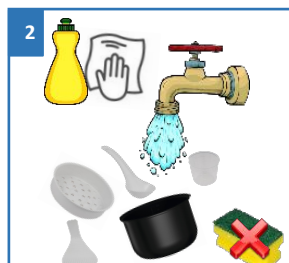

Промийте чашу та аксесуари теплою мильною водою



Ретельно просушіть

4.1. ДИСТАНЦІЙНЕ КЕРУВАННЯ ПРИЛАДОМ ЧЕРЕЗ WIFI

- Встановіть безкоштовний мобільний додаток «POLARIS: IQ home» на Ваш телефон

За допомогою додатка Ви можете керувати мультиваркою з будь-якої точки світу через інтернет: запускати будь-які режими, встановлювати таймер відстроченого старту, створювати та зберігати власні рецепти в режимі додатка «Мій рецепт Plus» довжиною до 9 кроків або скористатися будь-яким з майже 1000 рецептів з бази додатка: просто обирайте рецепти, які вам сподобалися, на Вашому смартфоні, відправляйте їх в мультиварку, кладіть продукти в чашу, і прилад під керівництвом додатка приготує страву за програмою, заданою рецептом.








Важливо!

Завжди завантажуйте оновлення прошивки мультиварки, якщо додаток пропонує вам це зробити.

Налаштування підключення мультиварки до мережі WIFI

- Увімкніть мультиварку у мережу
- Підключіть телефон до Вашої домашньої мережі WIFI
- Відкрийте додаток Polaris IQ Home

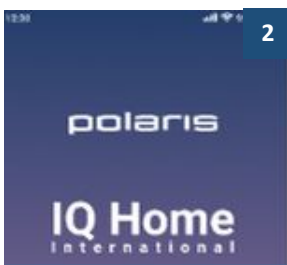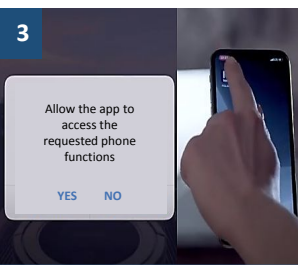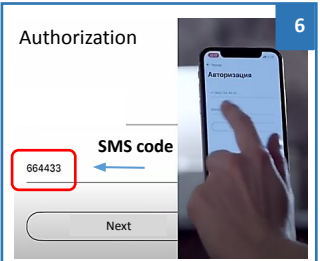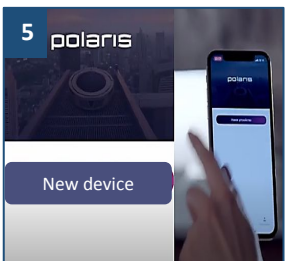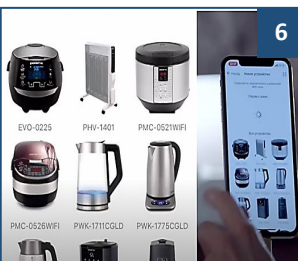 1 Увімкніть прилад	 2 Завантажте та встановіть мобільний додаток «Polaris IQ Home Intl»	 3 Дозвольте додатку доступ до запитуваних функцій телефона
 4 Для авторизації необхідно ввести номер моб. тел., на який буде надіслане смс сповіщення	 5 На екрані «Головна» натисніть кнопку «Новий пристрій»	 6 Відобразяться усі пристрої лінійки IQHome




На замітку!

Внаслідок постійного процесу внесення змін та покращень, між керівництвом, виробом та програмою можуть спостерігатися деякі відмінності. Виробник сподівається, що користувач зверне на це увагу. **У зв'язку з цим те, що Ви бачите на екрані, може відрізнятися від того, що написано в цьому Посібнику.**


Для телефонів з операційною системою Android

Конфігурація нового пристрою


- Екран «Дім»: натисніть кнопку «Додати пристрій».
- У списку «Усі пристрої» оберіть мультиварку РМС 5001.
- Натисніть кнопку «Відкрити налаштування», щоб відкрити налаштування WIFI на телефоні.
- Підключіть телефон до мережі WIFI, запропонований додатком (РМС 5001)
- Поверніться у додаток.
- На наступному екрані проведіть з'єднання з пристроєм:
 1. Натисніть та утримуйте на корпусі приладу кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу.
 2. Потім у додатку натисніть кнопку «Продовжити».
 - Оберіть зі списку або наберіть назву та вкажіть пароль WIFI мережі, на яку ви хочете налаштувати пристрій, та натисніть «Підключити».
 - Зачекайте, поки процедура конфігурації завершиться.
- У додатку натисніть кнопку «Продовжити».

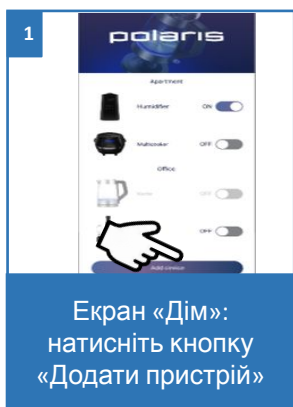

Екран «Дім»:
натисніть кнопку
«Додати пристрій»

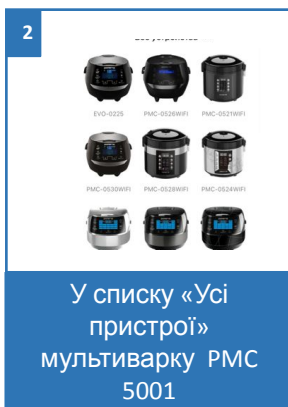

У списку «Усі
пристрої»
мультиварку РМС
5001

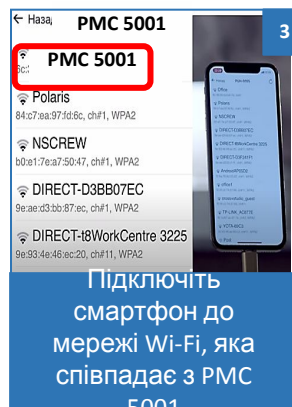


Підключіть
смартфон до
мережі Wi-Fi, яка
співпадає з РМС
5001




Натисніть та
утримуйте кнопки
«ГОДИНИ» та
«ХВИЛИНИ» до
звукового сигналу



Потім у додатку
натисніть кнопку
«Продовжити»

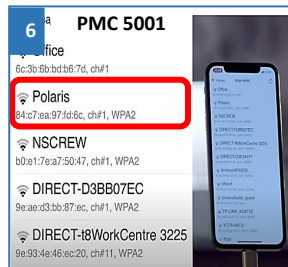




Вкажіть назву та
пароль Wi-Fi мережі,
на яку ви хочете
налаштувати
пристрій, та
натисніть
«Підключити»

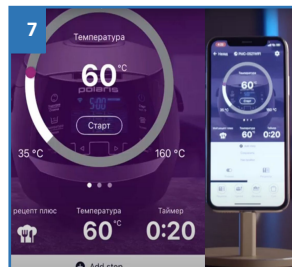

Вітаємо!
Пристрій
успішно
підключений!






Приєднання раніше сконфігурованого пристрою

- Екран «Дім»: натисніть кнопку «Додати пристрій».
- У списку «Поряд з вами» оберіть мультиварку (РМС 5001) (Якщо пристрою немає в мережі – переконайтеся, що у вас підключена Wi-Fi мережа, на котру сконфігуровано пристрій)
- На наступному екрані вас попросять провести з'єднання з пристроєм:
- Затисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу.
- Потім у додатку натисніть кнопку «Продовжити»

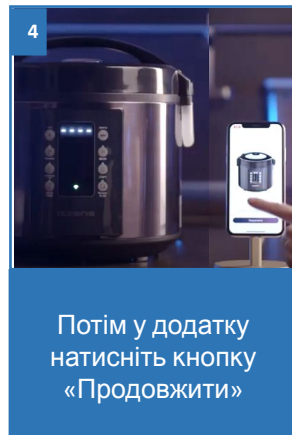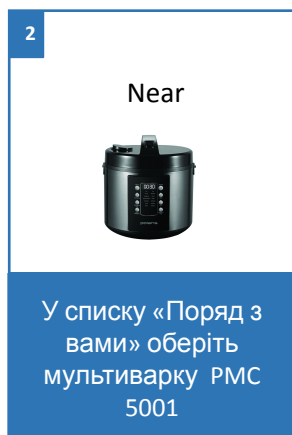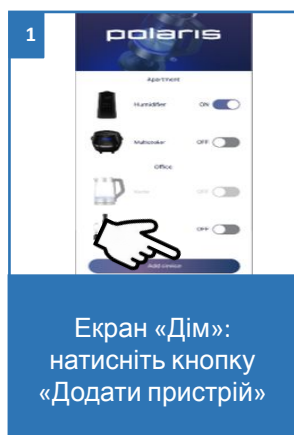

Переконфігурація пристрою на іншу WIFI мережу (режим діагностики)







- Натисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до двох коротких звукових сигналів.
- Екран «Дім»: натисніть кнопку «Додати пристрій».
- У списку «Всі пристрої» оберіть мультиварку PMC 5001.
- Натисніть кнопку «Відкрити налаштування», щоб відкрити налаштування WIFI на телефоні.
- Підключіть телефон до мережі PMC 5001.
- Поверніться у додаток
- На наступному екрані проведіть з'єднання з пристроєм:
 1. Натисніть та утримуйте на корпусі приладу кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу.
 2. Потім у додатку натисніть кнопку «Продовжити».
- На екрані, що відкрився, оберіть бажану дію: «Залишити конфігурацію та продовжити» - у такому випадку чайник залишиться сконфігурованим на поточну мережу Wi-Fi, але Ваш телефон зможе керувати ним через мережу інтернет, або «Переконфігурувати пристрій» - в такому випадку Вам буде запропоновано переконфігурувати пристрій на нову мережу Wi-Fi.
 - Якщо Ви обрали «Переконфігурувати пристрій»: вкажіть назву та пароль WIFI мережі, на яку ви хочете налаштувати пристрій, і натисніть «Підключити».
- Зачекайте, поки процедура конфігурації завершиться.

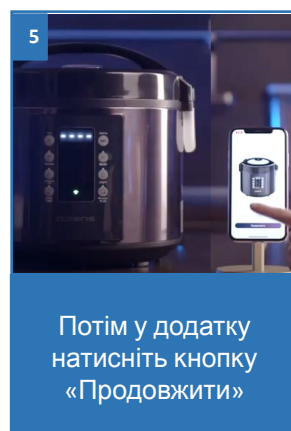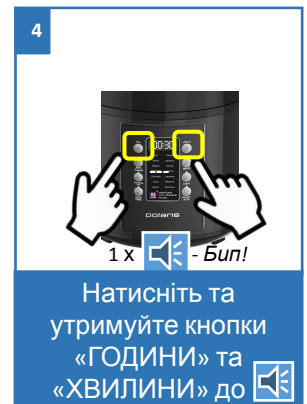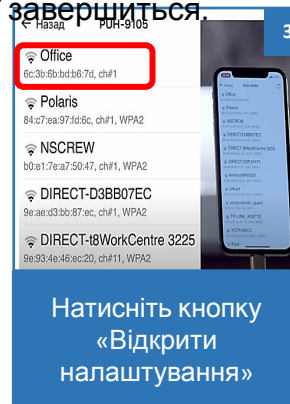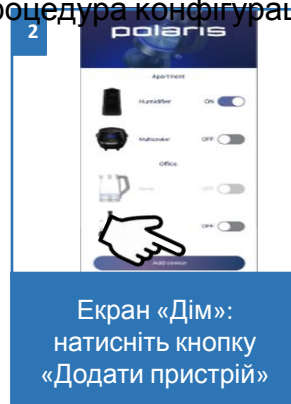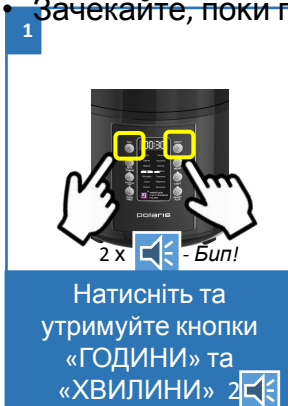

Для телефонів з операційною системою IOS





Конфігурація нового пристрою

- Екран «Дім»: натисніть кнопку «Додати пристрій».
- У списку «Усі пристрої» оберіть мультиварку РМС 5001
- Натисніть «Продовжити»
- У додатку з'явиться запит на підключення до мережі WIFI «РМС 5001», натисніть «Підключити»
- На наступному екрані Вас попросять провести з'єднання з пристроєм:
 1. Затисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу.
 2. Потім у додатку натисніть кнопку «Продовжити».
 - З'явиться екран з доступними мережами WIFI. Оберіть потрібну мережу та вкажіть пароль WIFI мережі, на яку ви хочете налаштувати пристрій, натисніть «Далі».
 - Зачекайте, поки процедура конфігурації завершиться.
 - Натисніть «Продовжити».

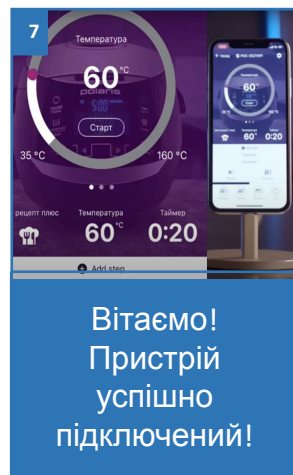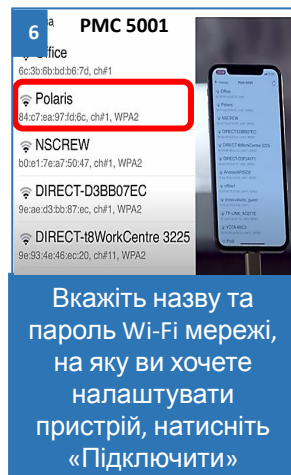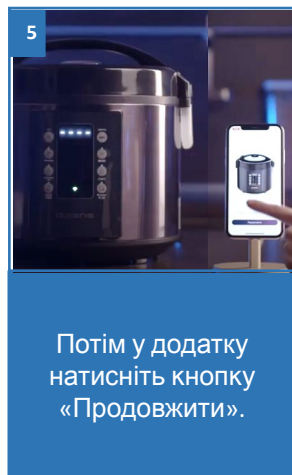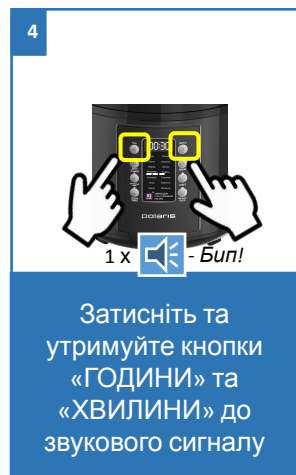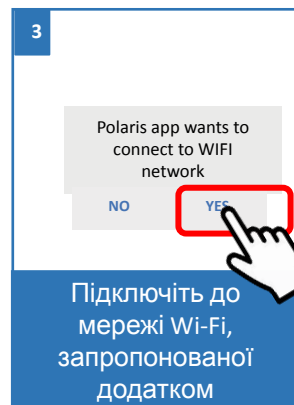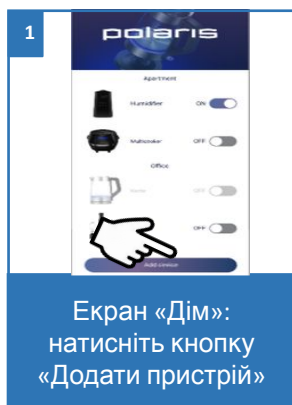





Приєднання раніше сконфігурованого пристрою

- Екран «Дім»: натисніть кнопку «Додати пристрій».
- В списку «Поряд з Вами» оберіть мультиварку (РМС 5001) (Якщо пристрою немає в мережі – переконайтеся, що у вас підключена Wi-Fi мережа, на котру сконфігуровано пристрій).
- На наступному екрані вас попросять провести з'єднання з пристроєм:
- Затисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу.
- Потім у додатку натисніть кнопку «Продовжити».

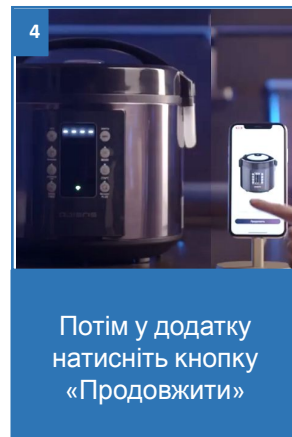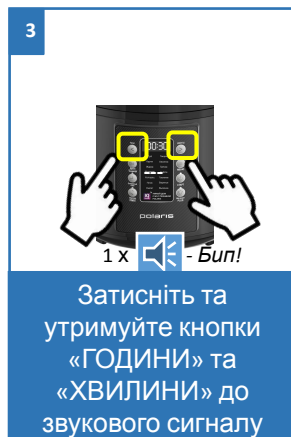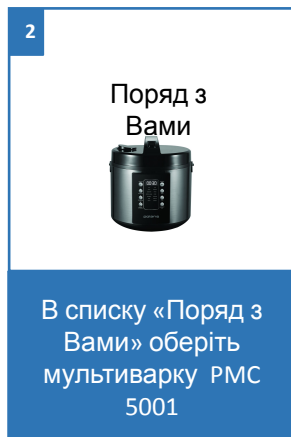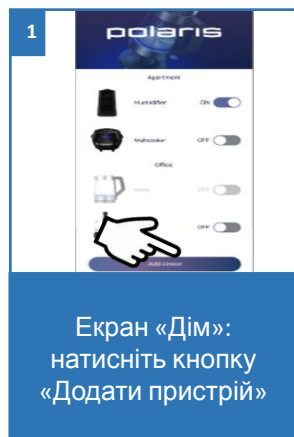

Переконфігурація пристрою на іншу WIFI мережу (режим діагностики)

- Натисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до двох коротких звукових сигналів.
- Екран «Дім»: натисніть кнопку «Новий пристрій».
- У списку «Всі пристрої» оберіть мультиварку РМС 5001.
- Натисніть «Продовжити».
- У додатку з'явиться запит на підключення до мережі WIFI «РМС 5001», натисніть «Підключити»
- На наступному екрані вас попросять провести з'єднання з пристроєм:
 1. Натисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до звукового сигналу, індикатор Wi-Fi почне швидко блимати.
 2. Потім у додатку натисніть кнопку «Продовжити»
 - На екрані, що відкрився, оберіть бажану дію: «Завершити налаштування» - у такому випадку чайник залишиться сконфігурованим на поточну мережу Wi-Fi, але Ваш телефон зможе керувати ним через мережу інтернет, або «Переналаштувати» - в такому випадку Вам буде запропоновано переконфігурувати пристрій на нову мережу Wi-Fi.
 - Якщо Ви обрали «Переналаштувати»: вкажіть назву та пароль WIFI мережі, на яку ви хочете налаштувати пристрій, і натисніть «Підключити».
 - Зачекайте, поки процедура конфігурації завершиться.

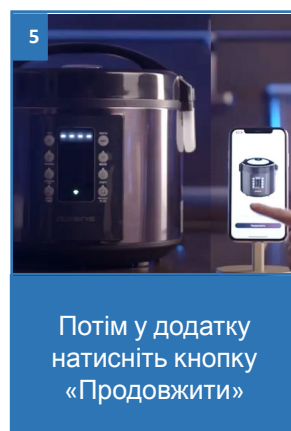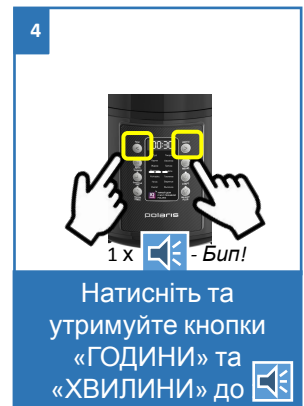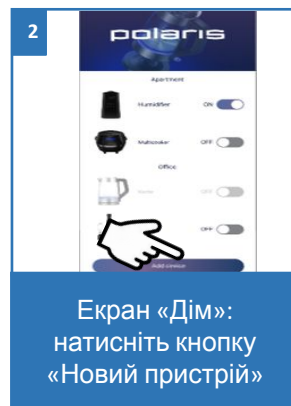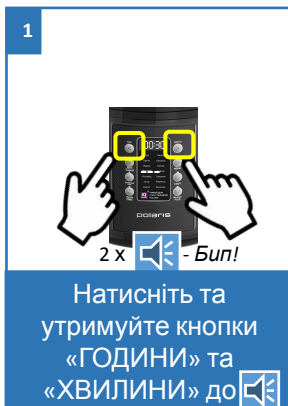

ПОВЕРНЕННЯ ПРИСТРОЮ ДО ЗАВОДСЬКИХ НАЛАШТУВАНЬ WIFI



3 x  - Бип!

Натисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до трьох звукових сигналів – пристрій повернуто до заводських налаштувань WIFI

Натисніть та утримуйте кнопки «ГОДИНИ» та «ХВИЛИНИ» до трьох звукових сигналів 

ДЕЯКІ ФУНКЦІЇ, ДОСТУПНІ У ДОДАТКУ Polaris IQ Home

1) Опис функції контролю прав над приладом та передачі керування приладом іншим особам. Ці функції однакові для абсолютно усіх приладів лінійки IQ Home.

- Передача керування. Необхідно пройти в меню «Контроль прав», натиснути на символ «Поділитися» у правому верхньому кутку (після цього на екрані з'явиться QR код Вашого пристрою) та обрати один з двох варіантів:
 1. надіслати посилання на пристрій через месенджер або пошту – для цього на екрані з QR-кодом , що відкрився, натиснути у правому верхньому кутку символ «Поділитися» та обрати спосіб, яким відправляти посилання (wahtsapp, sms, email тощо);
 2. на другому телефоні натиснути на головному екрані кнопку «Додати пристрій», у вікні, що відкрилося, натиснути на кнопку сканера у правому верхньому кутку та просканувати камерою телефона QR-код на екрані першого телефона;

- **Адміністрування прав.** До одного приладу може підключитися та керувати ним необмежена кількість користувачів. Для адміністрування їх прав необхідно зайти у налаштування приладу і далі у меню «Контроль прав». Перемкнути тригер «Увімкнути контроль доступу» - таким чином поточний користувач стає адміністратором цього приладу та може призначати усім іншим підключеним користувачам різний рівень доступу: 1) адміністрування – повне керування приладом + можливість визначення прав інших користувачів; 2) керування – повне керування приладом без можливості визначення прав інших користувачів; 3) перегляд – перегляд поточного стану приладу без можливості керування. До тих пір, поки тригер «Увімкнути контроль доступу» увімкнений, усі нові користувачі, котрі тим чи іншим чином будуть підключатися до приладу, будуть отримувати права лише на перегляд. Для отримання прав на керування приладом їм потрібно буде звернутися до адміністратора приладу. Вимкнути тригер може лише користувач з правами адміністратора. Якщо вимкнути цей тригер, то усі підключені користувачі та ті, які знову підключаються, отримують повні права на керування приладом.

2. База рецептів

У додатку доступна база з більш ніж 800 автоматичних рецептів, що містять детальний опис кожного кроку приготування страви. Необхідно звернути увагу, що частина кроків у рецептах автоматична, а частина потребує участі користувача (наприклад, докласти необхідні продукти у чашу) та для їх запуску потрібно буде натиснути відповідну кнопку у додатку.

Детальнішу інформацію щодо керування мультиваркою з допомогою WIFI Ви можете знайти у додатку [Polaris IQ Home](#).

3. Персональні рецепти користувача.

Користувач може зберегти свій персональний рецепт, що складається з кількох кроків режиму «Мій рецепт PLUS». Для цього увімкніть у додатку режим «Мій рецепт Plus» та натисніть кнопку «Додати крок», задайте необхідну температуру та час кроку. Натискайте кнопку «Додати крок», щоб додати кожний наступний крок. Після завершення створення послідовності натисніть кнопку «Зберегти» та задайте ім'я Вашого рецепта. Створені таким чином рецепти будуть зберігатися у додатку в меню «Персональні». Ви можете поділитися цим рецептом з будь-яким іншим мультиварки лінійки IQ Home будь-яким зручним способом (пошта, месенджер, sms, соціальні мережі тощо). Для цього затисніть кнопку вибраного персонального рецепта та перетягніть її на значок «Поділитися», що з'явився.

4. Відкладений старт

При керуванні мультиваркою через WIFI, використовуючи мобільний додаток «POLARIS: IQ home», Ви можете скористатися можливістю відкласти старт та приготувати страву через встановлений час або до встановленого часу. Для цього передбачені параметри «Відносний» та «Абсолютний».

- Відносний відкладений старт означає, що страва буде готова через встановлений час.
- «Абсолютний» відкладений старт – використовується для встановлення часу, до якого страва має бути готовою.

5. ЕКСПЛУАТАЦІЯ ПРИЛАДУ У РАЗІ КЕРУВАННЯ КНОПКАМИ

- Перед початком експлуатації приладу уважно прочитайте цю Інструкцію з експлуатації та дотримуйтеся її вказівок.
- При першому вмиканні приладу можлива поява диму, пов'язана з обгоранням залишків мастила, що використовується під час виробництва.




Увага! Налаштування та індикація поточного часу не передбачена.

- Щоб усунути сторонні запахи, перед першим використанням рекомендується прокип'ятити воду в мультиварці за температурного режиму з кипінням протягом 30 хвилин, заповнивши чашу на одну третину.
- Після закінчення обробки від'єднайте прилад від мережі, дайте приладу охолонути з відкритою кришкою, злийте воду з чаші, протріть прилад насухо і залиште його сушитися з відкритою кришкою.
- Протріть ущільнююче кільце кришки з обох боків серветкою, змоченою рослинною олією, а потім – серветкою, змоченою лимонним соком.



Увага: ущільнююче кільце не знімається.

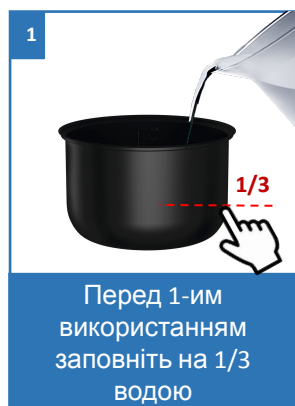

5.1. ПОРЯДОК РОБОТИ

1. Відкрийте кришку приладу, натиснувши кнопку замка кришки

- Переконайтеся, що внутрішні і зовнішні частини приладу звільнені від упаковки і не мають забруднень.
- Витягніть чашу з мультиварки.



Увага: Використовуйте лише оригінальну чашу, яка не має вм'ятин та деформацій, не замінюйте її чашею з іншої мультиварки або іншою посудиною. Це може послужити причиною несправності приладу.

- Переконайтеся, що між чашею і нагрівальною поверхнею немає сторонніх предметів або рідини.



Кнопка замка
кришки

Витягніть чашу з
мультиварки

Переконайтеся, що
дно чаші чисте

2. Покладіть необхідні продукти у чашу (крім програм «Смаження», «Омлет»).

- Дотримуйтеся рецепту приготування страви та вказівок в описі програми приготування.
- У програмах «Смаження» та «Омлет» кладіть продукти в чашу лише після її попереднього прогрівання до робочої температури. У програмі «Смаження» прогрівання здійснюється зі встановленою у прилад порожньою чашею з невеликою кількістю олії на дні чаші. У програмі «Омлет» олія додається у чашу за бажанням. Кришка приладу під час прогрівання має бути закрита.
- У цих програмах мультиварка подає звуковий сигнал, коли робочої температури досягнуто. При цьому відлік часу приготування починається лише після звукового сигналу. Прогрівання до заданої температури може займати тривалий час (до 20 хвилин). Кришка під час прогрівання має бути закрита.



Покладіть необхідні
продукти у чашу

Дотримуйтеся
рецепту та
програми
приготування.

3. Поставте чашу в мультиварку

- Стежте за тим, щоб чаша була правильно встановлена на нагрівальному елементі.
- Злегка повертайте внутрішню чашу в мультиварці у різні боки, поки вона не встановиться в потрібному положенні щільно на нагрівальній поверхні.

4. Кришка мультиварки може залишатися відчиненою або зачиненою залежно від програми приготування та рекомендацій рецепта.

- Дотримуйтесь рекомендацій щодо положення кришки, вказаних в описі кожної програми.

Увага! При неправильному положенні кришки результат може не відповідати вимогам.



5. Увімкніть мультиварку в мережу

- Не вмикайте прилад у розетку, якщо не виконані вищезазначені рекомендації. На дисплеї спалахне індикація (- - - -).
- Прилад знаходиться у режимі очікування.
- Параметри мережі повинні відповідати технічним характеристикам приладу (див. розділ «Технічні характеристики»).



6. Натисненням кнопки “МЕНЮ” оберіть програму приготування

- Кнопка «МЕНЮ» перемикає програму приготування на одну вниз до кінця лівого стовпчика, а потім правого.
- На панелі керування у полі з назвою програми буде блимати світловий індикатор назвою програми.



Увага! Назви програм на панелі керування не є кнопками вибору програм.

7. Задайте час приготування згідно з рецептом страви

- Послідовним натисненням кнопок “ГОДИНИ” або “ХВИЛИНИ” задайте час приготування, якщо у рецепті вказано час, що відрізняється від часу, заданого за замовчуванням.



Діапазон та крок зміни часу – відповідно до обраної програми приготування.

Увага! Зміна часу приготування під час виконання програми неможлива



Натисненням кнопки “МЕНЮ” оберіть програму приготування



Задайте час приготування вручну, якщо у рецепті це рекомендується

8. Задайте температуру приготування відповідно до рецепту страви (доступно лише для програм «Смаження» та «Мій рецепт Plus»)

- Натисніть кнопку “t°”
- Значення температури, що відображається на дисплеї, почне блимати (лише для тих програм, де можлива її зміна).
- Послідовним натисненням кнопки “t°” змініть значення температури приготування.
- Діапазон та крок зміни температури - згідно з обраною програмою приготування.

Увага! Зміна температури приготування під час виконання програми неможлива



Встановлення температури та часу доступне для «Смаження» та «Мій рецепт Plus»

9. Запустіть програму приготування

- Натисніть кнопку “СТАРТ”. (Якщо ви не натиснете кнопку “СТАРТ” впродовж 30 секунд після налаштування параметрів приготування, мультиварка подасть звуковий сигнал і перейде в режим очікування).
- Мультиварка подасть звуковий сигнал.
- Світлові індикатори кнопки “СТАРТ” та назви програми будуть світитися впродовж усього часу приготування.
- Також на дисплеї спалахне індикатор кнопки “ПІДІГРІВ/СКАСУВАННЯ”, це означає, що після закінчення роботи програми прилад автоматично перейде у режим ПІДІГРІВ, якщо його не було відключено заздалегідь (див. п. 5.4.).
- Прилад не переходить у режим ПІДІГРІВ після завершення програми з температурою приготування менше 80°C.

! Увага!

При першому вмиканні приладу можлива поява диму, пов'язана з обгоранням залишків мастила, що використовується під час виробництва.

Під час роботи приладу можуть з'явитися звуки «клацання», пов'язані з роботою реле. Таке явище є нормальною роботою приладу і не свідчить про його несправність.

10. Закінчення програми

- Після завершення часу роботи мультиварка подасть звуковий сигнал.
- Індикатор кнопки “СТАРТ” згасне.
- Прилад перейде у режим ПІДІГРІВ, якщо його не було відключено заздалегідь (див. п. 5.4.).
- Відобразиться прямий відлік часу, який показує, як довго підігрівається страва.

11. Вимкніть пристрій

- Перш ніж приступити до чищення приладу, дайте йому охолонути.



Увага! Ручка кришки приладу не призначена для перенесення. Вона служить лише для відкривання/закривання кришки. Перенесення приладу за ручку може призвести до поломки замка кришки



5.2. ФУНКЦІЯ «ВІДСТРОЧЕНИЙ СТАРТ»

Функція «Відстрочений старт» дозволяє приготувати їжу до необхідного часу.

- Максимальний час відстрочення приготування може складати 24 години.



Проте не відстрочуйте, будь ласка, старт на тривалий час, якщо в інгредієнтах страви є продукти, що швидко псуються.



Примітка. При керуванні мультиваркою через WIFI, використовуючи мобільний додаток "POLARIS: IQ home", Ви можете скористатися як "Відносним" відкладеним стартом, тобто. страва буде готова через встановлений час, або Абсолютним відкладеним стартом - тоді страва буде готова до встановленого часу. Крок встановлення відкладеного старту – 1 хвилина.

- Функція «Відстрочений старт» доступна для усіх програм.
- У програмах «Смаження», «Омлет» зворотний відлік часу вмикається після досягнення робочої температури, тому закінчення приготування може настати дещо раніше або пізніше заданого для «Відстроченого старту» часу (залежно від заповнення чаші).

Для активації режиму «Відстрочений старт»:

- Оберіть програму приготування, використовуючи кнопку "МЕНЮ".
- Задайте параметри програми (час та температуру, де це можливо).
- Натисніть кнопку "ВІДСТРОЧЕНИЙ СТАРТ".
- Спалахне світловий індикатор кнопки "ВІДСТРОЧЕНИЙ СТАРТ".
- З допомогою кнопок "ГОДИНИ" або «ХВИЛИНИ» задайте час, за який страва має бути готова. Таймер під час налаштування часу блимає. Час відстрочення додається до заданого раніше часу приготування.
- Мінімальний крок задавання часу відстрочення – 1 хвилина, крім програми «Смаження».
- Натисніть кнопку "СТАРТ".
- Мультиварка подасть звуковий сигнал, почнеться зворотний відлік часу.
- Коли доданий до основного часу час відстрочення закінчиться, індикатор кнопки "ВІДСТРОЧЕНИЙ СТАРТ" згасне, і мультиварка розпочне виконання програми за заданими параметрами..
- Зворотний відлік часу продовжиться відповідно до налаштувань обраної програми.




Оберіть програму приготування, використовуючи кнопку "МЕНЮ".







Натисніть кнопку "ВІДСТРОЧЕНИЙ СТАРТ"



задайте час, за який страва має бути готова

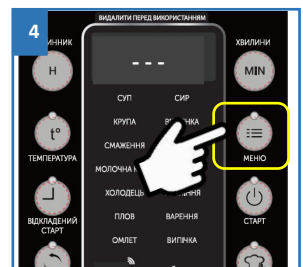

Натисніть кнопку "СТАРТ"

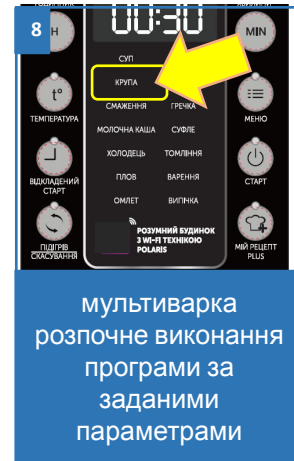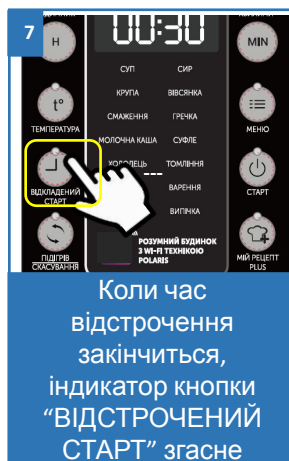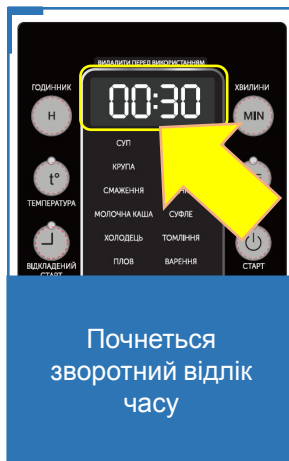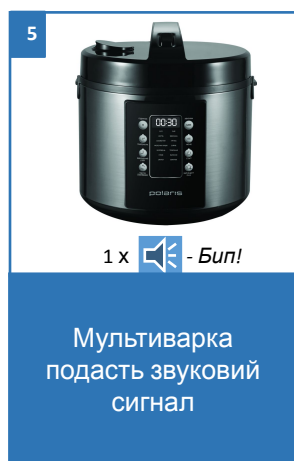


5.3. ПЕРЕРИВАННЯ ПРОГРАМИ

За необхідності Ви можете перервати виконання програми у будь-який час. Натисніть кнопку "ПІДІГРІВ / СКАСУВАННЯ", мультиварка подасть звуковий сигнал та перейде в режим очікування.

Увага!



При відключенні електроживлення прилад запам'ятовує поточні значення часу та температури. При подачі електроживлення виконання програми триває далі.

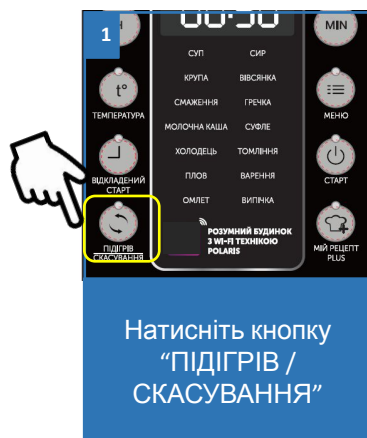



5.4. Вимкнення / увімкнення автоматичного переходу у режим ПІДІГРІВ

Ви можете заздалегідь відключити автоматичний перехід у режим ПІДІГРІВ після завершення програми.

1. Для цього під час виконання програми натисніть кнопку “СТАРТ”.
2. Прилад подасть звуковий сигнал, світловий індикатор кнопки “ПІДІГРІВ / СКАСУВАННЯ” згасне.
3. Для повторного увімкнення режиму ПІДІГРІВ знову натисніть кнопку “СТАРТ”, світловий індикатор кнопки “ПІДІГРІВ / СКАСУВАННЯ” спалахне знову.



На замітку! У програмах з температурою приготування менше 80°C на останньому етапі прилад у режим ПІДІГРІВ автоматично не переходить.

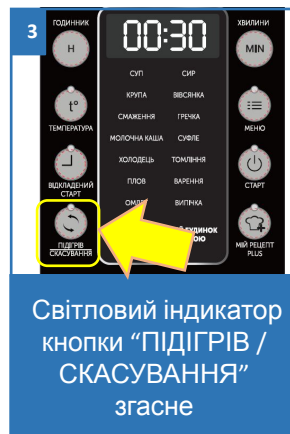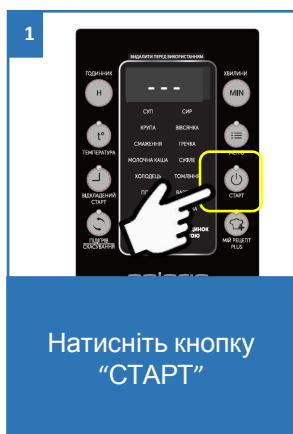

5.5. ПРОГРАМИ ПРИГОТУВАННЯ

«Мій рецепт Plus»



Ця програма дозволяє задати вручну температуру та час приготування на трьох послідовних етапах, у додатку – на дев'яти послідовних етапах, завдяки чому Ви зможете приготувати будь-які страви. Можливий вибір та налаштування одного, двох або трьох етапів (ступенів), що змінюються автоматично.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

1. Відкрийте кришку приладу, натиснувши на кнопку

- Переконайтеся, що внутрішні і зовнішні частини приладу звільнені від упаковки і не мають забруднень.
- Переконайтеся, що між чашею та нагрівальною поверхнею немає сторонніх предметів або рідини.

2. Покладіть у чашу необхідні інгредієнти згідно з рецептурою

- Дотримуйтеся рекомендованого співвідношення інгредієнтів та послідовності їх додавання у чашу.

3. Встановіть чашу в мультиварку

- Завжди перевіряйте правильність встановлення чаші.

4. Закрийте кришку або ж залиште її відкритою залежно від вимог рецепта



Увага!

При неправильному положенні кришки результат може не відповідати вимогам.

5. Увімкніть прилад

- На дисплеї спалахне індикація « - - - - ».
- Прилад знаходиться у режимі очікування.
- Не підключайте прилад до розетки, якщо вищезгадані рекомендації не виконані.
- Параметри мережі повинні відповідати технічним характеристикам приладу (див. розділ «Технічні характеристики»).




Кнопка замка кришки




Витягніть чашу з мультиварки



Покладіть необхідні продукти в чашу

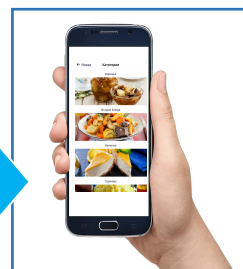

Дотримуйтесь рецепта та програми приготування

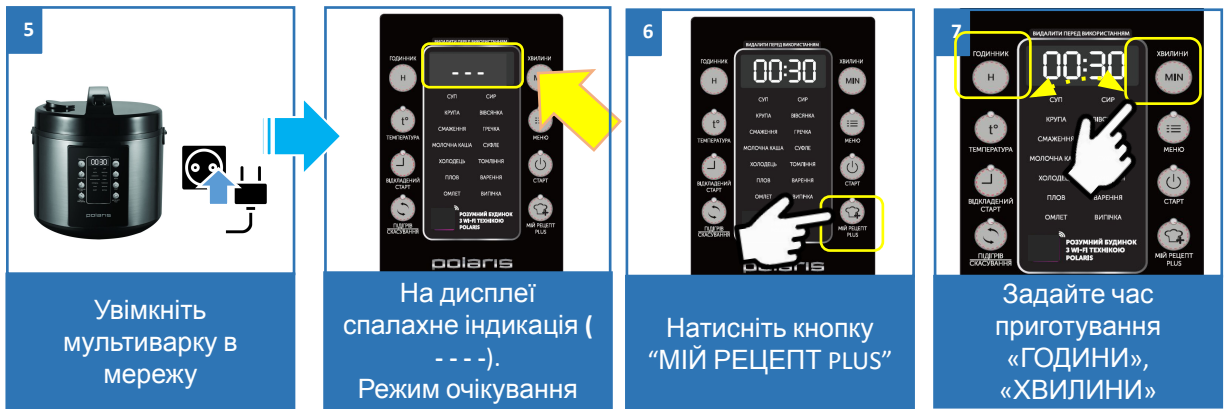

6. Натисніть кнопку "МІЙ РЕЦЕПТ PLUS"


- На панелі керування спалахне світловий індикатор кнопки "Мій рецепт Plus" та буде блимати світловий індикатор кнопки "СТАРТ".
- На дисплеї спалахне індикатор першого етапу та тривалість приготування за замовчуванням для першого етапу.
- На дисплеї буде блимати час приготування.

7. Задайте час приготування на першому етапі відповідно до рецепта

- Послідовним натисненням кнопок "ГОДИНИ" та "ХВИЛИНИ" задайте час приготування.
- Максимальна тривалість виконання усіх трьох етапів програми «Мій рецепт Plus» - 16 годин.
- Максимальна тривалість виконання одного етапу – 9 годин 55 хвилин.
- Крок зміни часу натисненням кнопок "ГОДИНИ" та "ХВИЛИНИ" змінний:
 - 1 хвилина в діапазоні від 5 до 45 хвилин
 - 5 хвилин - від 45 хвилин до 1 години 30 хвилин
 - 10 хвилин - від 1 години 30 хвилин до 3 годин
 - 20 хвилин - від 3 годин до 12 годин
 - Тривалість етапів з температурою приготування понад 140°C – не більше 2 годин.

8. Задайте температуру приготування відповідно до рецепта.

- Натисніть кнопку "t°"
- Послідовним натисненням кнопки "t°" задайте температуру приготування.
- Діапазон зміни температури може варіюватися від 35°C до 160°C.
- Крок зміни температури 5°C у діапазоні від 35 до 110°C і 10°C у діапазоні від 110 до 160°C.

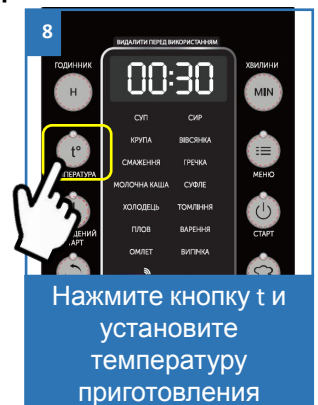

9. Перейдіть до програмування наступного етапу

- Натисніть кнопку “Мій рецепт Plus”
- На дисплеї спалахне індикація другого етапу та час приготування за замовчуванням.
- Дотримуючись приведеного вище алгоритму, запрограмуйте необхідну кількість етапів приготування від 1 до 3.



10. Запустіть програму

- Натисніть кнопку “СТАРТ”. Прилад подасть звуковий сигнал.
- На дисплеї відобразиться зворотний відлік часу приготування.
- Мультиварка розпочне приготування згідно заданої програми.
- Світлові індикатори кнопок “СТАРТ” та “Мій рецепт Plus” будуть світитися впродовж усього часу приготування.
- Індикатор етапів приготування блимає відповідно до етапу, який виконується.
- Також спалахне індикатор кнопки “ПІДІГРІВ / СКАСУВАННЯ”, це означає, що після завершення роботи програми прилад автоматично перейде в режим ПІДІГРІВ, якщо він не був відключений заздалегідь (див. п. 5.4.)

11. Завершення програми

- Після закінчення роботи мультиварка подасть звуковий сигнал. Індикатор роботи згасне.
- Прилад перейде в режим ПІДІГРІВ.
- Відобразиться прямий відлік часу, який показує, як довго підігрівається страва.

12. Вимкніть прилад

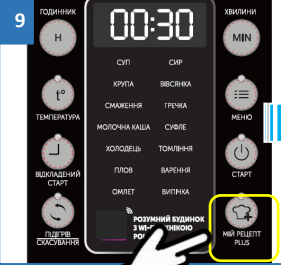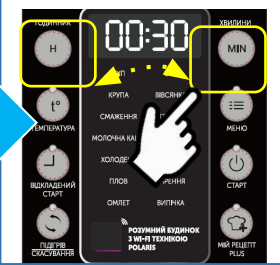 Натисніть кнопку “МІЙ РЕЦЕПТ PLUS”	 Запрограмуйте необхідну кількість етапів приготування від 1 до 3	 Натисніть кнопку “СТАРТ”	 Мультиварка подасть 1 звуковий сигнал
 Почнеться зворотний відлік часу	 Індикатори кнопок “СТАРТ”, “МІЙ РЕЦЕПТ PLUS”, “ПІДІГРІВ / СКАСУВАННЯ» світиться	 Після закінчення роботи мультиварка подасть звуковий сигнал	 Вимкніть прилад

«СУП»

Програма «Суп» призначена для приготування супів, бульйонів та інших страв. Наявність у чаші води для правильної роботи програми обов'язкова. Під час приготування у цій програмі рекомендується залишати кришку закритою. Відкривати кришку у процесі приготування не рекомендується.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.).

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

- Покладіть необхідні інгредієнти, згідно з рецептурою, в чашу.
- Встановіть чашу в мультиварку.
- Попереднє обсмажування інгредієнтів здійснюється у програмі «Смаження».
- Час приготування для цієї програми за замовчуванням - 1 година.
- Діапазон часу приготування може варіюватися від 1 години до 4 годин з кроком 10 хвилин.
- Увімкніть мультиварку, натисніть кнопку «МЕНЮ», оберіть «Суп»
- Запустіть програму, натиснувши кнопку «СТАРТ».
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п. 5.4).



«СМАЖЕННЯ»

Програма «Смаження» служить для обсмажування продуктів. Залежно від рецептури та природи продуктів можна вибирати необхідні часові й температурні режими.

Попереднє нагрівання у програмі «Смаження» має відбуватися без продукту, із зачищеною кришкою. Після сигналу про прогрівання слід відкрити кришку, покласти продукт та смажити з відкритою кришкою.



Увага!

Не залишайте мультиварку в режимі «Смаження» без нагляду.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.


- Налийте в чашу невелику кількість олії, якої достатньо для обсмажування.
- Час приготування для цієї програми за замовчуванням - 30 хвилин. Діапазон часу приготування може варіюватися від 10 хвилин до 1 години з кроком 5 хвилин. Діапазон температури приготування може варіюватися від 100 до 160°C з кроком 10°C.
- Увімкніть мультиварку, натисніть кнопку «МЕНЮ», оберіть «Смаження» (натискаючи кнопку «МЕНЮ» 3 рази).
- Запустіть програму, натиснувши кнопку «СТАРТ». Для пришвидшення прогрівання закрийте кришку. Зворотний відлік часу відобразиться на дисплеї після звукового сигналу про прогрівання чаші.
- Покладіть продукти в чашу після звукового сигналу.
- Під час смаження необхідно помішувати, перевертати продукт та контролювати його готовність. Присихання та підгоряння страви свідчать про пропущений момент готовності та нестачі олії. Якщо готовність страви настала раніше закінчення заданого часу приготування, вимкніть прилад вручну натисненням кнопки «ПІДІГРІВ / СКАСУВАННЯ».




Відкрийте кришку приладу, натиснувши на кнопку



Витягніть чашу з мультиварки

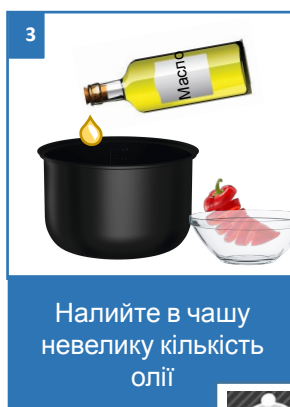

Налийте в чашу невелику кількість олії

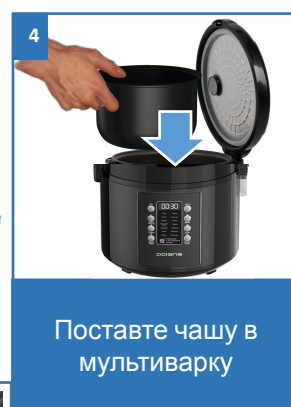


Поставте чашу в мультиварку




Увімкніть у мережу, натисніть кнопку «МЕНЮ» 3 рази



Вручну можна збільшити час або зменшити (від 10 хв. до 1 год.)

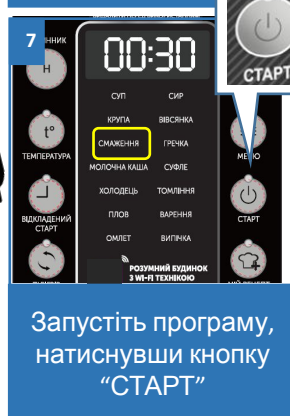

Запустіть програму, натиснувши кнопку «СТАРТ»

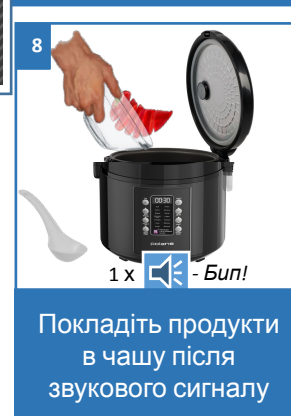

Покладіть продукти в чашу після звукового сигналу

«КРУПА»

Програма призначена для приготування розсипчастих корисних гарнірів із круп. Наявність у чаші води для правильної роботи програми обов'язкова.

Під час приготування у цій програмі рекомендується залишати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.).

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть необхідні інгредієнти, згідно з рецептурою, в чашу. Встановіть чашу в мультиварку.
- Час приготування для цієї програми за замовчуванням - 40 хвилин. Діапазон часу приготування може варіюватися від 20 хвилин до 2 годин з кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку "СТАРТ".
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п. 5.4).
- Після завершення програми «Крупа» не рекомендується залишати страву у режимі ПІДІГРІВ понад 15 хв.

«МОЛОЧНА КАША»

Програма призначена для приготування молочних супів та каш. Наявність у чаші води для правильної роботи програми обов'язкова.

Під час приготування у цій програмі рекомендується залишати **кришку закритою**. Відкривати кришку у процесі приготування не рекомендується.

При неправильному положенні результат може не відповідати вимогам.

Якщо у процесі приготування спостерігається інтенсивне кипіння молочних продуктів, рекомендується на деякий час відкрити кришку, щоб запобігти переливанню молока через край чаші.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Помістіть необхідні інгредієнти, згідно з рецептурою, в чашу.
- ⚠ **Увага:** Молоко має бути кімнатної температури.
- Встановіть чашу в мультиварку.
- Час приготування для цієї програми за замовчуванням - 1 година. Діапазон часу приготування може варіюватися від 10 хвилин до 1 години 30 хвилин з кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку "СТАРТ".
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п. 5.4).
- Після завершення програми «Молочна каша» не рекомендується залишати страву у режимі ПІДІГРІВ понад 15 хв.

«ПЛОВ»

Ця програма призначена для приготування різних видів плову. Наявність у чаші води для правильної роботи програми обов'язкова.

Під час приготування у цій програмі рекомендується залишати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.).

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть у чашу необхідні інгредієнти згідно з рецептурою. Встановіть чашу у мультиварку.
- Попереднє обсмажування інгредієнтів відбувається у програмі «Смаження».
- Час приготування для цієї програми за замовчуванням - 1 година. Діапазон часу приготування може варіюватися від 20 хвилин до 2 годин з кроком 5 хвилин.



Важливо: У разі завчасного обсмажування для варіння рису на заключному етапі у програмі «Плов» достатньо задати час 20 хвилин.

- Запустіть програму, натиснувши кнопку «СТАРТ».
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п.5.4).

«СИР»

Програма «Сир» призначена для приготування сиру з кефіру або кислого молока.

Під час приготування у цій програмі рекомендується залишати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть у чашу необхідні інгредієнти.
- Встановіть чашу у мультиварку.
- Час приготування для цієї програми за замовчуванням – 35 хвилин. Діапазон часу приготування може варіюватися від 10 до 50 хвилин з кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку «СТАРТ».
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу.

«ГРЕЧКА»

Програма призначена для приготування гарніру з гречаної крупи.

Наявність у чаші води для правильної роботи програми обов'язкова. Під час приготування у цій програмі рекомендується залишати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть у чашу необхідні продукти.
- Встановіть чашу у мультиварку.
- Час приготування для цієї програми за замовчуванням – 25 хвилин.
- Діапазон часу приготування може варіюватися від 20 хвилин до 2 годин з мінімальним кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку “СТАРТ”. Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п. 5.4).
- Після завершення програми «Гречка» не рекомендується залишати страву у режимі ПІДІГРІВ понад 15 хв.

«ВАРЕННЯ»

Ця програма призначена для приготування варення.

Під час приготування у цій програмі рекомендується тримати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть у чашу необхідні інгредієнти згідно з рецептурою.
- Встановіть чашу у мультиварку.
- Час приготування для цієї програми за замовчуванням – 1 година. Діапазон часу приготування може варіюватися від 30 хвилин до 4 годин з кроком 5 хвилин
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п.5.4)

«ХОЛОДЕЦЬ»

Програма «Холодець» призначена для приготування холодцю. Наявність у чаші води для правильної роботи програми обов'язкова. Під час приготування у цій програмі рекомендується тримати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть необхідні інгредієнти, згідно з рецептурою, в чашу.
- Встановіть чашу в мультиварку.
- Час приготування за замовчуванням для цієї програми – 6 годин. Діапазон часу приготування може варіювати від 2 до 8 годин з кроком 1 година.
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п.5.4).

«ОМЛЕТ»

Ця програма призначена для приготування омлету.

Під час приготування у цій програмі рекомендується залишати кришку закритою.

Дотримуйтеся вказівок розділу 5.1.

Порядок роботи:

- Покладіть у чашу необхідні інгредієнти.
- Встановіть чашу у мультиварку.
- Час приготування для цієї програми за замовчуванням – 20 хвилин. Діапазон часу приготування може варіюватися від 10 до 30 хвилин з мінімальним кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу.

«ВІВСЯНКА»

Спеціальна програма призначена для швидкого приготування здорового та корисного сніданку з вівсяної крупи. Наявність у чаші води для правильної роботи програми обов'язкова. Під час приготування у цій програмі рекомендується залишати кришку закритою. Під час тривалого варіння слід помішувати кашу та контролювати готовність. Якщо готовність продукту наступила до закінчення заданого часу, необхідно відключити програму кнопкою «Підігрів / Скасування».

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)
Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть у чашу необхідні інгредієнти згідно з рецептурою. Встановіть чашу у мультиварку.
- Час приготування для цієї програми за замовчуванням – 5 хвилин. Діапазон часу приготування може варіюватися від 5 хвилин до 1 години з кроком 5 хвилин.
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал.
- Після завершення програми «Вівсянка» пристрій НЕ переходить в автоматичний режим ПІДІГРІВ.

«ТОМЛІННЯ»

Програма «Томління» імітує процес приготування страв у російській печі. Страва готується шляхом дуже довгого та повільного тушкування за температури, яка постійно зростає, що дозволяє зберегти корисні властивості продуктів та надати їм неповторного смаку. Під час приготування у цій програмі рекомендується тримати **кришку закритою**.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.).
Дотримуйтеся вказівок розділу 5.1. Порядок роботи.

Порядок роботи:

- Покладіть необхідні інгредієнти, згідно з рецептурою, в чашу. Встановіть чашу в мультиварку. Попереднє обсмажування інгредієнтів здійснюється у програмі «Смаження».
- Час приготування для цієї програми за замовчуванням - 5 годин. Діапазон часу приготування може варіюватися від 1 до 8 годин з кроком 10 хвилин.
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п.5.4).

«ВИПІЧКА»

Програма «Випічка» служить для випікання коржів, кексів, пирогів, запіканок і приготування інших страв із вже готового тіста.

Під час приготування у цій програмі рекомендується залишати **кришку закритою**.

Порядок роботи:

- Викладіть тісто в чашу і розрівняйте.
- *Можете змастити чашу вершковим маслом або маргарином, щоб випічку було легше витягати.*
- Час приготування для цієї програми за замовчуванням - 1 година. Діапазон часу приготування може варіюватися від 30 хвилин до 3 годин 30 хвилин з кроком 10 хвилин.
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- *Час приготування випічки залежить від її виду та об'єму.*
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу (див. п. 5.4).

«СУФЛЕ»

Ця програма призначена спеціально для приготування суфле.

Під час приготування у цій програмі рекомендується тримати кришку закритою.

Для цієї програми доступна функція відстроченого старту (див. п.5.2.)

Порядок роботи:

- Викладіть тісто в чашу і розрівняйте. Встановіть чашу у мультиварку.
- Можна змастити чашу вершковим маслом, щоб суфле було легше витягати.
- Час приготування для цієї програми за замовчуванням – 1 година. Діапазон часу приготування може варіюватися від 50 хвилин до 1 години 30 хвилин з мінімальним кроком 5 хвилин
- Запустіть програму, натиснувши кнопку “СТАРТ”.
- Після завершення програми мультиварка подасть звуковий сигнал та автоматично перейде в режим ПІДІГРІВ з прямим відліком часу.

5.6. СТИСЛА ТАБЛИЦЯ ПРОГРАМ ПРИГОТУВАННЯ

Програма приготування	Час та температура* приготування за замовчуванням	Регулювання часу та температури	Положення кришки	«Відстрочений старт»
Мій рецепт PLUS	20 хвилин (16 годин – макс. сумарна тривалість трьох етапів, 9 годин 55 хвилин – макс. тривалість одного етапу.) Температура: 35 – 160°C.	крок зміни часу: 1 хвилина в діапазоні від 5 до 45 хвилин, 5 хвилин – від 45 хвилин до 1 години 30 хвилин, 10 хвилин – від 1 години 30 хвилин до 3 годин, 20 хвилин – від 3 годин до 12 годин, крок зміни температури: 5°C в діапазоні від 35 до 110°C 10°C в діапазоні від 110 до 160°C.	Відкрита / Закрита	Так
Суп	1 година / 97°C	1 година – 4 години, крок 10 хвилин	Закрита	Так
Крупа	40 хвилин / 115°C температура завершення програми 115 °C+ 5 хвилин	20 хвилин – 2 години, крок 5 хвилин	Закрита	Так
Смаження	30 хвилин	10 хвилин – 1 година, крок 5 хвилин 100 – 160°C, крок 10°C	Відкрита	Так
Молочна каша	1 година / 95°C	10 хвилин – 1 година 30 хвилин, крок 5 хвилин	Закрита	Так
Холодець	6 годин / 93°C	2 – 8 годин, крок 1 година	Закрита	Так
Плов	1 година / 120-125°C температура завершення програми 145 °C-150 °C	20 хвилин – 2 години, крок 5 хвилин	Закрита	Так
Омлет	20 хвилин / 100°C	10 - 30 хвилин, крок 5 хвилин	Закрита	Так
Сир	35 хвилин / 95°C	10 - 50 хвилин, крок 5 хвилин	Закрита	Так
Вівсянка	5 хвилин / 96°C	5 хвилин - 1 година, крок 5 хвилин	Закрита	Так
Гречка	25 хвилин / 115°C	20 хвилин - 2 години, крок 5 хвилин	Закрита	Так
Суфле	1 година/ 150°C	50 хвилин - 1 година 30 хвилин, крок 5 хвилин	Закрита	Так
Томління	5 годин / перша чверть часу приготування 45°C, друга- 65°C, третя - 85°C, четверта - 95°C	30 хвилин – 8 годин, крок 30 хвилин	Закрита	Так
Варення	1 година / 102°C	30 хвилин – 4 години, крок 5 хвилин	Закрита	Так
Випічка	1 година / 130°C	30 хвилин – 3 години 30 хвилин, крок 10 хвилин	Закрита	Так

*У програмах, в котрих можна вручну налаштувати температуру, користувач сам задає необхідну температуру вручну, при цьому готовність страви напряму залежить від правильності вибору температури та часу приготування.

Налаштування температури в автоматичних програмах зазначені для довідки, вони змінюються у процесі приготування автоматично без участі користувача. При цьому в різні моменти виконання програми (залежно від вмісту чаші), температура може відрізнятися від довідкового значення, котре було встановлено.

Наприклад: при заданій температурі 115 °C та наявності рідини у чаші, при виконанні замірів температура у чаші не перевищить значення 100 °C (точка кипіння води), кипіння води при цьому буде інтенсивним. Різниця між заданим і реальним значеннями температури не свідчить про несправність приладу.

Якщо програма передбачає варіння (роботу з водою), тоді у разі википання або відсутності води у чаші програма автоматично скидається, оскільки температура дна чаші перевищує значення порогу безпеки для цієї програми. Скидання програми без води - нормальна реакція системи захисту.

Проводячи вимірювання, слід враховувати наступне:

- Точка заміру температури знаходиться у центрі дна чаші, встановленої у прилад, вимірювання здійснюється закріпленням датчиком (термопарою) при закритій кришці приладу.
- Для правильної оцінки значення необхідно здійснювати вимірювання протягом усього часу виконання програми з інтервалом 30 сек між вимірюваннями.
- На основі отриманих значень будується діаграма залежності температури від часу, знаходиться відрізок, на котрому температура змінюється циклічно при відносно незмінних максимальних і мінімальних значеннях (відрізок термостатування)
- Довідкове значення температури буде знаходитися між виміряним мінімальним і максимальним значенням на відрізку термостатування.

Проводячи вимірювання, слід враховувати особливості автоматичних програм:



- якщо програма розрахована на роботу з рідиною (водою), то, проводячи вимірювання, необхідно налити в чашу 1 л води.
- якщо програма розрахована на роботу без води, тоді вимірювання необхідно здійснювати з порожньою чашею.

У разі, коли в чаші знаходяться продукти, вимірянні значення можуть відрізнятися від довідкових через наявність у продуктах різного вмісту рідини (води), кипіння котрої не дозволяє температурі в точці заміру піднятися вище 100 °C відповідно до законів фізики.

Для отримання значень, близьких до реально налаштованих, слід використовувати рідини з температурою кипіння, що перевищує задане довідкове значення (наприклад, олію), з масою, еквівалентною масі продукту.

6. ЧИЩЕННЯ ТА ДОГЛЯД ЗА ПРИБАДОМ

- Після закінчення приготування завжди очищайте мультиварку від залишків їжі та забруднень.
- Не користуйтеся щітками з металевим дротом і розчинником для очищення забруднених частин мультиварки.
- Якщо рештки страви прикипіли до внутрішньої чаші, замочіть її перед миттям. Протріть внутрішню чашу після миття.
- Не занурюйте корпус приладу у воду. Для очищення корпусу користуйтеся вологою м'якою губкою або тканиною.
- Внутрішню чашу та контейнер для варіння на парі можна мити у посудомийній машині. Під час миття чаші у посудомийній машині стежте, щоб чаша не пошкодилась об деталі машини. Керуйтеся інструкцією до посудомийної машини та описом миючих засобів, які використовуються, щоб уникнути ушкодження чаші, яка виготовлена з алюмінію з покриттям.
- Не допускайте засмічення отвору для випуску пари. Клапан для випускання пари має знімну конструкцію, регулярно промивайте його водою, щоб уникнути забруднень.
- Щоразу після приготування необхідно зняти та опорожнити відсік для конденсату, розташований на боковій стінці приладу. Промийте, просушіть його та встановіть на місце.
- Для помішування використовуйте лише дерев'яну лопатку або спеціальну пластмасову ложку, що поставляється у комплекті з приладом.
- Не наливайте в чашу оцет, це може її пошкодити.
- Через деякий час чаша може змінити колір через те, що контактує з водою та миючими засобами. Це нормальне явище, і мультиварка може експлуатуватися далі без побоювань. Для очищення НЕ користуйтеся абразивними речовинами.

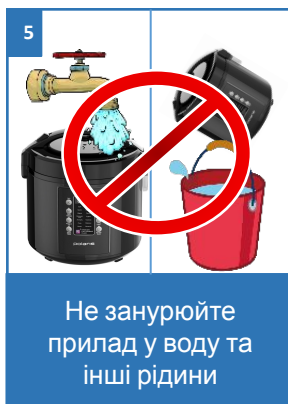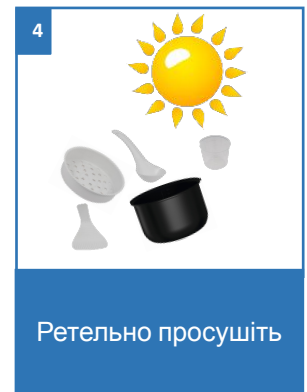

7. ТРАНСПОРТУВАННЯ ТА ЗБЕРІГАННЯ

- Транспортування приладів здійснюють усіма видами транспорту відповідно до правил перевезення вантажів, що діють на транспорті конкретного виду.
- Під час перевезення приладу використовуйте оригінальну заводську упаковку.
- Транспортування приладів має виключати можливість безпосередньої дії на них атмосферних опадів та агресивних середовищ.
- Прилади зберігаються в закритому сухому і чистому приміщенні за температури навколишнього повітря не вище плюс 40°C з відносною вологістю не вище 70% і за відсутності у довкіллі пилу, кислотних та інших випаровувань, що негативно впливають на матеріали приладів.

8. РЕАЛІЗАЦІЯ

Правила реалізації не встановлені.

9. ВИМОГИ ЩОДО УТИЛІЗАЦІЇ

Відходи, що утворюються при утилізації виробів, підлягають збору з подальшою утилізацією відповідно до Закону України "Про управління відходами".



[REDACTED]



[REDACTED]

10. ЗАГАЛЬНІ ВКАЗІВКИ З БЕЗПЕКИ ПІД ЧАС РОБОТИ З ЕЛЕКТРОПРИЛАДАМИ

- Експлуатація приладу повинна здійснюватися відповідно до «Правил технічної експлуатації електроустановок споживачів».
- Прилад призначений винятково для використання у побуті.
- Прилад повинен використовуватися лише за призначенням.
- Цей прилад не призначений для використання людьми (у тому числі дітьми), у яких наявні фізичні, нервові або психічні відхилення або яким бракує досвіду і знань, за винятком випадків, коли за такими особами здійснюється нагляд або особа, відповідальна за їхню безпеку, проводить їм інструктаж щодо використання цього приладу. Необхідно здійснювати нагляд за дітьми, аби не допустити їхніх ігор із приладом.
- Перед введенням приладу в експлуатацію уважно прочитайте цю інструкцію з експлуатації.
- Щоразу перед вмиканням приладу оглядайте його. За наявності пошкоджень приладу і кабелю живлення в жодному разі не вмикайте прилад у розетку.
- Не слід користуватися приладом після падіння, якщо є видимі ознаки пошкодження. Перед використанням прилад має оглянути кваліфікований спеціаліст.
-  Прилад та мережевий кабель необхідно зберігати так, щоб вони не попадали під вплив вогню, прямих сонячних променів та вологи.

Увага! Не використовуйте прилад поблизу ванн, раковин або інших посудин, заповнених водою.

- У жодному разі не занурюйте прилад у воду чи інші рідини. Не торкайтеся приладу вологими руками. При намоканні приладу негайно відключіть його від мережі.
- У разі падіння приладу у воду негайно від'єднайте його від мережі. При цьому в жодному разі не занурюйте руки у воду. Перед повторним використанням прилад має бути перевірений кваліфікованим спеціалістом.
- Вмикайте прилад лише в джерело змінного струму (~). Перед увімкненням переконайтеся, що прилад розрахований на напругу, яка використовується в мережі.
- **Будь-яке помилкове увімкнення позбавляє Вас права на гарантійне обслуговування.**
- Прилад може вмикатися лише у мережу з заземленням. Задля Вашої безпеки заземлення має відповідати встановленим електротехнічним нормам. Не користуйтеся нестандартними джерелами живлення або пристроями підключення.
- Не використовуйте прилад поза приміщенням. Оберегайте прилад від ударів об гострі кути. Після закінчення експлуатації, під час чищення або у разі поломки приладу завжди від'єднуйте його від мережі.
- Забороняється від'єднувати прилад від мережі, тримаючи його за кабель живлення. Під час вимикання приладу з мережі тримайтеся за штепсельну вилку.
- Використання додаткових аксесуарів, що не входять до комплекту, позбавляє Вас права на гарантійне обслуговування.
- Після використання ніколи не обмотуйте кабель електроживлення навколо приладу, тому що згодом це може призвести до заломлення кабелю. Завжди гладко розправляйте кабель на час зберігання.
- Не здійснюйте ремонт приладу самостійно. Ремонт повинен виконуватися лише кваліфікованими фахівцями сервісного центру.
- Для ремонту приладу можуть використовуватися лише оригінальні запасні частини.

11. ЗАПОБІЖНІ ЗАХОДИ ПІД ЧАС ВИКОРИСТАННЯ МУЛЬТИВАРКИ

- Під час використання приладу переконайтеся у тому, що навколо нього є достатньо вільного місця. Прилад повинен знаходитися на відстані не менше 15 см від вогнебезпечних об'єктів, таких як меблі, штори та ін.
- Не розташовуйте прилад у безпосередній близькості до стін та меблів, оскільки під час роботи з приладу виходить пара, що може викликати зміну кольорів та деформацію меблів і покриття стін.
- Не накривайте мультиварку рушником та іншими предметами у процесі роботи, пара має виходити вільно.
- Під час користування приладом встановлюйте його на сухій рівній термостійкій поверхні, не допускайте закриття сторонніми предметами, скатертинами, покриттями з тканини тощо вентиляційних отворів у дні приладу, оскільки це може призвести до перегрівання.
- Перед першим використанням рекомендується прокип'ятити воду в мультиварці в режимі «Мій рецепт плюс» при температурі 110° протягом 30 хвилин при заповненні чаші до половини для усунення сторонніх запахів.
- Не вмикайте виконання програм на мультиварці без встановленої внутрішньої чаші, не виймайте чашу з мультиварки під час виконання програми.
- Не користуйтеся мультиваркою поряд з джерелами тепла (газовими або електричними плитами).
- Щоб уникнути опіків, не торкайтеся приладу, що працює. Після закінчення експлуатації дайте мультиварці охолонути.
- Перевірте напругу, перш ніж вмикати прилад у мережу.
- Не залишайте електроприлад ввімкненим в мережу, якщо не готуєте їжу.
- Перед тим, як від'єднати прилад від мережі, переконаєтесь, що він знаходиться в режимі очікування і програма не запущена.
- Ніколи не піднімайте / не пересувайте прилад, поки він під'єднаний до електромережі.
- Не піднімайте мультиварку за ручку кришки, це може призвести до поломки замка.
- Не переносьте прилад із заповненою продуктами внутрішньою чашею.
- Не торкайтеся до внутрішньої чаші під час роботи мультиварки.
- Не стукайте по внутрішній поверхні чаші, не відтирайте її силою та не користуйтеся для чищення приладу абразивними очисними і агресивними миючими речовинами.
- Не користуйтеся для перемішування або витягання продуктів з чаші металевим кухонним приладдям, воно може пошкодити антипригарне покриття. Використовуйте дерев'яне, пластикове або силіконове приладдя.
- Не залишайте кухонне приладдя в чаші у процесі приготування.
- Не користуйтеся мультиваркою без кільця ущільнення або якщо воно пошкоджене. Для заміни кільця ущільнення звертайтеся в авторизований сервісний центр.
- Не залишайте продукти або воду в мультиварці на тривалий час.
- Не заповнюйте чашу продуктами вище відмітки максимального рівня.
- Не наливайте в чашу оцет, це може пошкодити покриття.
- Не використовуйте чашу мультиварки для приготування їжі не у мультиварці, не нагрівайте її на плиті та інших джерелах тепла.

- Не використовуйте чашу в якості посудини для змішування або контейнера для зберігання продуктів.
- Не використовуйте у приладі несправну (деформовану) чашу.
- Не замінюйте чашу мультиварки іншою посудиною або чашею від іншої мультиварки. Не використовуйте у приладі деформовану чашу або чашу з пошкодженням внутрішнього покриття.
- Між знімною чашею та внутрішнім корпусом не повинно бути ніяких сторонніх предметів, нашарувань та решток продукту.
- Для приготування крупи дотримуйтеся рекомендованого співвідношення крупи та води у чаші.
- Через деякий час чаша може змінити колір внаслідок контакту з водою і миючими засобами. Це нормальне явище, і мультиварка може без побоювань використовуватися далі.
- Виробник не несе відповідальності за збитки, які виникли в результаті неправильного або не передбаченого цією Інструкцією з експлуатації використання.

12. ЯКЩО У ВАС ВИНИКЛА ПРОБЛЕМА

Проблема	Причина	Спосіб усунення
Індикатор роботи не світиться, нагрівальний елемент не працює	1. Проблема з електроживленням	• Перевірте, чи підключений прилад до мережі. • Перевірте надійність з'єднання мережевого кабелю із роз'ємом на корпусі приладу. • Зверніться за допомогою до авторизованого сервісного центру.
	2. Відмова термозапобіжника через перегрівання (перекриті стороннім предметом або покривом вентиляційні отвори корпусу - порушення вимог експлуатації).	
	3. Несправність електроніки	
Індикатор світиться, нагрівальний елемент не працює	Несправність електроніки, несправність нагрівального елемента.	Зверніться за допомогою до авторизованого сервісного центру.
Страва готується занадто довго	1. Живлення від мережі відсутнє.	Перевірте, чи підключений прилад до мережі
	2. Нагрівальний елемент несправний.	Зверніться за допомогою до авторизованого сервісного центру.
	3. Внутрішня чаша мультиварки встановлена з перекосом або деформована, або не відповідає моделі.	Перевірте внутрішню чашу, переконайтеся, що вона встановлена правильно. Деформовану чашу замініть на справну, таку, що відповідає моделі.
	4. Сторонній предмет (забруднення) між нагрівальною пластиною та чашею.	Видаліть сторонній предмет (забруднення)

Проблема	Причина	Спосіб усунення
Пристрою не вдається підключитися до WIFI роутера	1. У процесі підключення відбувається збій	a. Переконайтеся у тому, що Ваш прилад підтримується у додатку: на головному меню додатку натисніть кнопку «Додати пристрій» та розверніть список «Всі пристрої»; b. Переконайтеся у тому, що Ваш роутер працює на частоті 2,4 MHz, режим мережі 802.11 b/g/n. Для налаштування роутера керуйтеся інструкцією до Вашого роутера; c. Переконайтеся у тому, що Ваш роутер не накладає додаткових обмежень на вхідні підключення (наприклад, підключення MAC-адрес). Для налаштування роутера керуйтеся інструкцією до Вашого роутера; d. Переконайтеся у тому, що у Вас встановлена остання версія програми; e. Вивантажте програму з пам'яті телефона та запустіть ще раз: відкрийте список відкритих додатків у телефоні та перемістіть пальцем догори запущене вікно програми Polaris IQHome, потім заново запустіть програму та повторіть процес підключення; f. Активуйте режим діагностики приладу – зверніться до розділу «Налаштування підключення» в Інструкції користувача; g. Скиньте налаштування приладу (Reset) – зверніться до розділу «Налаштування підключення» в Інструкції користувача;
	2. Підключення здійснене успішно, прилад з'явився у списку приладів у додатку, але керування ним недоступне.	Переконайтеся у тому, що Ваш телефон перепідключився до мережі WIFI. Для цього відкрийте розділ WIFI налаштувань телефона і у випадку необхідності підключіться до вашої мережі Wi-Fi вручну.
	3. Прилад був успішно підключений, але раптово перестав реагувати на команди з додатка.	Зайдіть на сторінку приладу і у правому верхньому кутку натисніть зірочку. Далі в розділі «Діагностика з'єднання» ознайомтеся з діаграмою діагностики. Натисніть на знак оклику поряд з червоною ділянкою мережі та дотримуйтеся інструкцій інтерактивного помічника.
		Не знайшли відповіді на вашу проблему? Ознайомтеся з додатковою інформацією або зв'яжіться зі службою підтримки у розділі «Розумний дім» на нашому сайті.
Прилад не реагує на натиснення кнопок на панелі приладу	Увімкнена функція захисту від випадкового натиснення («захист від дітей»)	Вимкніть захист у додатку, або з панелі приладу
Увага! Якщо з допомогою вищенаведених кроків Ви не можете усунути проблему своїми силами, зверніться, будь ласка, в сервісний центр		

13. КОМПЛЕКТАЦІЯ

Прилад	1 шт.
Кабель живлення	1 шт.
Внутрішня чаша з антипригарним покриттям	1 шт.
Контейнер для варіння на парі	1 шт.
Плоска ложка	1 шт.
Мірний стакан	1 шт.
Інструкція з експлуатації	
Гарантійний талон	
Книга рецептів	
Упаковка (поліетиленовий пакет + коробка)	

14. ТЕХНІЧНІ ХАРАКТЕРИСТИКИ

РМС 5001 IQ Home - мультиварка побутова електрична торгової марки Polaris

Напруга: 220 - 240 В

Частота: ~50 Гц

Потужність: 750 Вт

Загальний об'єм чаші: 5 л

Об'єм чаші до верхньої відмітки: 3,5 л

Бездротове підключення Wi-Fi IEEE 802. 11b/g/n 2,4 Гц

Додатково можна придбати чашу Polaris PIP 0502K, що відповідає мультиварці.

Примітка: Внаслідок постійного процесу внесення змін та вдосконалень між Інструкцією з експлуатації та виробом можуть спостерігатися деякі відмінності. Виробник сподівається, що користувач зверне на це увагу. Останню версію Інструкції з експлуатації Ви можете знайти на сайті <https://iqpolaris.com/>

Виробник має право без попереднього повідомлення вносити зміни у конструкцію та комплектацію виробу, котрі є результатом робіт з удосконалення конструкції або технології виробництва. У разі необхідності покупець може звернутися до виробника або уповноваженої виробником особи за актуальною версією інструкції з експлуатації.

15. ІНФОРМАЦІЯ ПРО СЕРТИФІКАЦІЮ

Прилад сертифікований на відповідність вимогам Технічних регламентів та Державних стандартів України



076



Строк служби виробу:

3 роки

Гарантійний строк:

2 роки від дня покупки

[Redacted text block]

[Redacted text block]

[Redacted text line]

[Redacted text block]

[Redacted text line]

[Redacted text block]

16. ГАРАНТІЙНІ ЗОБОВ'ЯЗАННЯ

Виріб: Мультиварка побутова електрична

Модель: PMC 5001 IQ Home

Ця гарантія діє протягом 24 місяців з підтвердженою датою придбання товарів і передбачає гарантійне обслуговування виробу відповідно до чинного законодавства України.

1. Гарантійні зобов'язання розповсюджуються на усі моделі, які випускаються під торговою маркою POLARIS та були придбані в уповноважених виробником продавців, у країнах, де надається гарантійне обслуговування (незалежно від місця покупки).
2. Виріб купується виключно для особистих побутових потреб. Виріб повинен використовуватися відповідно до інструкції з експлуатації та з дотриманням правил та вимог безпеки.
3. Зобов'язки виробника відповідно до цієї гарантії виконують продавці – уповноважені дилери виробника та офіційні центри з обслуговування (сервіс-центри). Ця гарантія не розповсюджується на вироби, придбані у не уповноважених виробником продавців, котрі самостійно несуть відповідальність перед споживачем згідно з законодавством.
4. Ця гарантія не розповсюджується на дефекти та зовнішні зміни приладу, що виникли у результаті:
 - Хімічного, механічного та іншого впливу, попадання сторонніх предметів, рідин, комах та продуктів їх життєдіяльності всередину виробу;
 - Неправильної експлуатації, що полягає у використанні виробу не за його прямим призначенням, а також встановлення та експлуатації виробу з порушенням вимог Інструкції з експлуатації та правил техніки безпеки;
 - Нормальної експлуатації, а також природного зношування, що не впливають на функціональні властивості: механічні пошкодження зовнішньої або внутрішньої поверхні (вм'ятини, подряпини, потертості), природні зміни кольору металу, у тому числі поява райдужних та темних плям, а також корозії на металі у місцях пошкодження поверхні та непокритих ділянках металу;
 - Відкладання вапняного осаду, водяного каменю та накипу внаслідок використання води з високим вмістом мінеральних речовин;
 - Використання приладу з метою, для якої він не призначений;
 - Зношування деталей оздоблення, ламп, батарей, захисних екранів, накопичувачів сміття, ременів, щіток, фільтрів, ущільнювачів та інших деталей з обмеженим строком використання;
 - Ремонту виробу, здійсненого особами або фірмами, що не є сервісними центрами*.
 - Пошкодження виробу під час транспортування, некоректного його використання, а також у зв'язку з ремонтом.

5. Виробник не несе гарантійних зобов'язань, якщо на виробі відсутня паспортна ідентифікаційна табличка або дані в ній вилучені або виправлені.
6. Ця гарантія діє лише для виробів, що використовуються для особистих побутових потреб, та не розповсюджується на вироби, котрі використовуються з комерційною, промисловою та професійною метою.

Увага!! Виробник не несе відповідальності за можливу шкоду, прямо чи опосередковано завдану виробом POLARIS людям, домашнім тваринам, навколишньому середовищу, або пошкодження майна у випадку, якщо це сталося у результаті недотримання правил або умов експлуатації та встановлення виробу, навмисних та необережних дій споживача або третіх осіб.

З усіх питань, пов'язаних з технічним обслуговуванням, перевіркою якості, гарантійним та післягарантійним ремонтом виробів POLARIS звертайтеся до сервісного центру POLARIS або до продавця – уповноваженого дилера POLARIS. Гарантійний ремонт виробів POLARIS здійснюють лише сервісні центри POLARIS.

*Адреси сервісних центрів на сайті Компанії: <https://iqpolaris.com/>

Для підтвердження дати придбання виробу при гарантійному ремонті або пред'явлення інших передбачених законом вимог просимо Вас зберігати документи про покупку.

Такими документами можуть бути заповнений гарантійний талон POLARIS, касовий чек або квитанція продавця, інші документи, що підтверджують дату та місце покупки.

У разі ненадання документу, що підтверджує дату придбання виробу, строк гарантії вираховується з дати виготовлення виробу.

Дата виготовлення вказана на паспортній ідентифікаційній табличці, що знаходиться на задній стінці виробу.

Dear customer!

Thank you for choosing **POLARIS** brand products.

Our products are designed to meet the high demands of quality, functionality and design. We are sure that you will be satisfied with the purchase of our company's new product.

Attention! Before using the device, please read the manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the appliance.

Keep this manual together with the warranty certificate, cash register receipt, if possible, the cardboard box and packing material.

Please pay attention! Due to the ongoing process of making changes and improvements, there may be some differences between the Manual and the product. The manufacturer hopes that the user will pay attention to this.

TABLE OF CONTENTS

1. General information	
2. SCOPE OF USE	
3. DESCRIPTION OF THE APPLIANCE	
3.1. Appliance design	
3.2. Control panel	
4. PREPARATION FOR OPERATION	56
4.1. Remote control of the appliance via WIFI	
5. APPLIANCE OPERATION	66
5.1. Work procedure	
5.2. THE "DELAYED START" FUNCTION	71
5.3. Program interruption	
5.4. Disabling / enabling the automatic transition to the PREHEAT mode	
5.5. Cooking programs	
5.6. A brief table of cooking programs	
6. CLEANING AND CARE OF THE APPLIANCE	86
7. Transport and Storage	
8. Sales	
9. Disposal requirements	
10. General safety instructions when using the electric household appliances	
11. Precautions when using a multicooker	
12. If you have a problem	
13. SCOPE OF DELIVERY	
14. TECHNICAL SPECIFICATIONS	
15. CERTIFICATION INFORMATION	
16. WARRANTY OBLIGATIONS	

1. GENERAL INFORMATION

This User Manual will help you get acquainted with the technical data, design, rules of operation and storage of the electric household multicooker, model **POLARIS PMC 5001 IQ Home** (hereinafter referred to as the multicooker, appliance).

2. SCOPE OF USE

1. The appliance is intended for domestic and similar use at the temperature and humidity of the domestic premises in accordance with this Manual:
 - at employee food service areas of shops, offices, farms and other departments;
 - in places intended for permanent residence and in hotels;
 - in places intended for overnight stay and breakfast.
2. The appliance is not intended for industrial and commercial use as well as for processing non-food products.
3. The manufacturer shall not be liable for any damage resulting from incorrect or unintended use.

3. DESCRIPTION OF THE APPLIANCE

The multicooker **PMC 5001 IQ Home** is a modern multifunctional appliance of a new generation for cooking. Combining the functions of a stove, an oven, a steamer, a multicooker will help you save space in the kitchen. With a multicooker, you can easily and quickly cook your favorite dishes. The multicooker has 14 automatic programs and a customizable three-stage "My recipe PLUS" mode.

The "MY RECIPE PLUS" feature is designed specifically for creative people. Thanks to the possibility to independently set the temperature and cooking time, this function will give you truly limitless possibilities for cooking a variety of meals, from the simplest to culinary masterpieces.

You will quickly appreciate the advantage of the remote control, delayed start and auto-heating functions of meals which will allow you to prepare a meal by a certain time and keep it warm after cooking.


The PMC 5001 IQ Home multicooker has a unique remote control feature that takes home cooking to a new level.

To work with WIFI, you need to download the mobile application "POLARIS: IQ home".

3.1. APPLIANCE DESIGN



ACCESSORIES

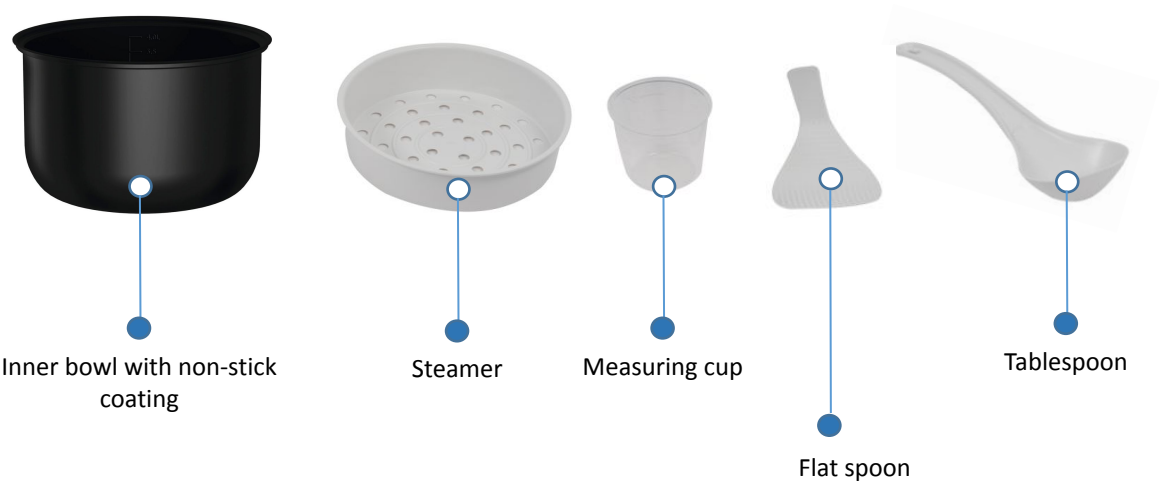

3.2. CONTROL PANEL AND DISPLAY




Button	Value
Display 	Displays the cooking time and cooking temperature if the program allows temperature changes.
	▪ This button is used to start the pre-selected cooking program. ▪ Pressing the "START" button during cooking disables and enables the automatic transition to the HEATING mode.
	▪ Using this button, you can interrupt any program before it ends. The appliance will then go into standby mode. ▪ If the appliance is in standby mode (programs are not running), pressing the "PREHEAT/CANCEL" button starts the PREHEAT mode with a direct countdown. ▪ In the cooking program selection mode, pressing this button resets the settings and puts the appliance into standby mode. ▪ The glowing indicator of the "Heating" button/Cancel" signals that the heating mode is turned on or that the program being executed switches to the heating mode after its completion.

Button	Value
	▪ The switch button to the universal 3-step "MY RECIPE PLUS" mode with manual adjustment of cooking time and temperature at each stage. After switching to the "MY RECIPE PLUS" setting mode, by pressing this button again, you can cycle between the stages.
	▪ Activation of the "Delayed start" function allows you to prepare food by the required time (see clause 5.2.).
	▪ This button is used to select one of 14 cooking programs. Each press of the "MENU" button moves the cursor of the program list from top to bottom one position in the left column then in the right, while the indicator light with the program name lights up on the control panel and a single beep sounds.
	▪ Using these buttons, you can adjust the cooking time according to the recipe of the meal. When the cooking time is changed, the "CLOCK" button changes the time in hours, and the "MINUTES" button changes the time in minutes.
	▪ Using this button, in the program selection and setting mode, you can switch from setting the cooking time to setting the temperature (if the temperature setting is provided by the selected program). Each press of this button increases the temperature value by one setting step if a temperature change is possible.
	▪ Indication of the control mode via WIFI

4. PREPARATION FOR OPERATION

- Open the package, carefully remove the appliance, and remove all packaging and promotional materials.
- Remove all accessories and the user manual.
- Check the scope of delivery (see the "Scope of delivery" section).
- Remove all advertising stickers. Wipe the appliance body with a damp cloth.
- Rinse the bowl and accessories with warm soapy water without using aggressive and abrasive detergents.
- Dry thoroughly.

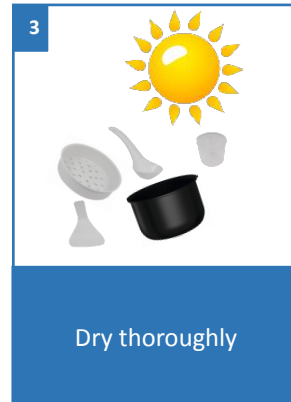

4.1. Remote control of the appliance via WIFI

- Install the free "POLARIS: IQ home" mobile app on your phone

Using the application, you can control the multicooker from anywhere in the world via the Internet: launch any modes, set a delayed start timer, create and save your own recipes in the "My Recipe Plus" application mode up to 9 steps long, or use any of the almost 1000 recipes from the application database: just choose your favorite recipes in the application on your on your smartphone, send them to the multicooker, load the products into the bowl, and the appliance, under the guidance of the application, will prepare a meal according to the program specified by the recipe.


Important!



Always download a firmware update for your multicooker if the app prompts you to do so.

Setting up the multicooker's WIFI connection

- Plug in the multicooker
- Connect your phone to your home WIFI network
- Open the Polaris IQ Home app

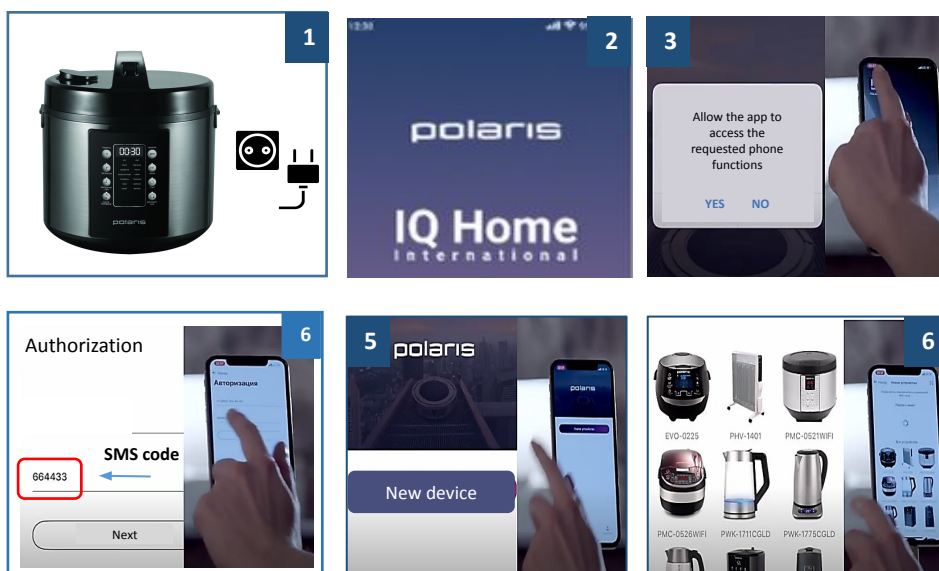








For the record!

Due to the continuous process of changes and improvements, there may be some differences between the manual, the product and the application. The manufacturer hopes that the user will pay attention to this. Because of this, what you see on the screen may differ from what is written in this Manual.

For phones with the Android operating system

Configuration of the new appliance

- "Home" screen: click on "Add appliance".
- In the "All appliances" list, select a multicooker PMC 5001
- Click "Open Settings" to open the WIFI settings on your phone
- Connect your phone to the WIFI network suggested by the app (PMC 5001)
- Go back to the app
- On the next screen, perform the pairing with the Appliance:
 1. Press and hold the "HOURS" and "MINUTES" buttons on the appliance body until the beep sounds.
 2. Then click on "Continue" in the app.
- Select from the list or type in the name and password of the WIFI network you want to configure with the appliance and click on "Connect".
- Wait for the configuration procedure to complete.
- In the application, press the "Continue" button

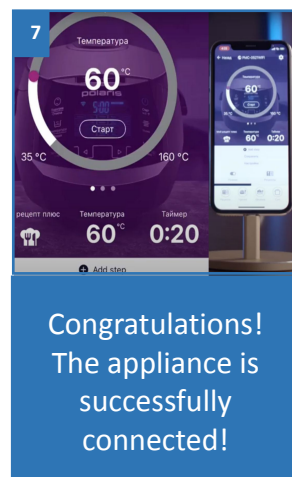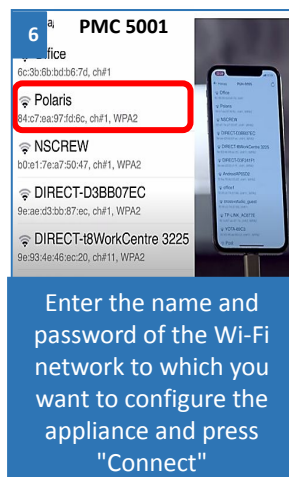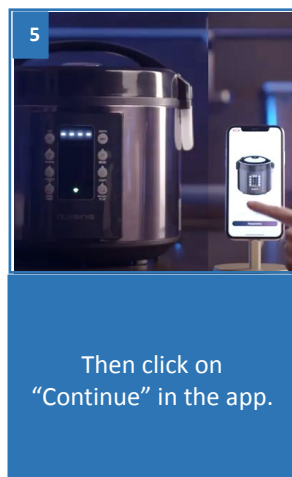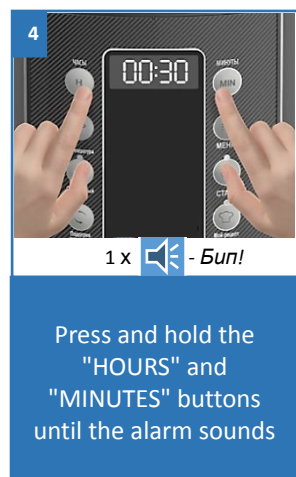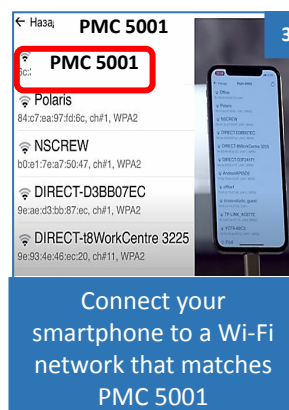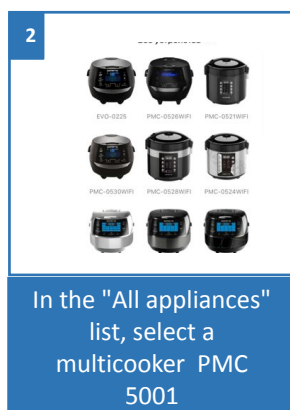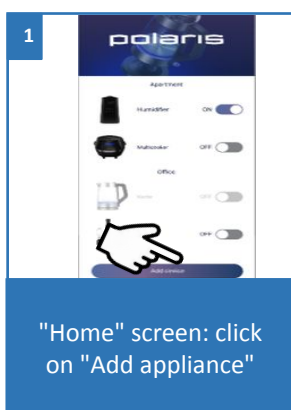

Pairing a previously configured appliance

- Home screen: press the "Add appliance" button.
- In the "Near you" list, select a multicooker (PMC 5001) (If the appliance is not available, make sure that you have a WIFI network connected to which the appliance is configured)
- On the next screen, you will be asked to pair with the Appliance:
 - Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds.
 - Then click on "Continue" in the app



"Home" screen: click on "Add appliance"



From the "Near you" list, select a multicooker PMC 5001









Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds



Then click on "Continue" in the app.

Reconfiguration of the appliance to a different WIFI network (diagnostic mode)







- Press and hold the "HOURS" and "MINUTES" buttons until two short beeps sound.
- Home screen: press the "Add appliance" button.
- In the "All appliances" list, select a multicooker PMC 5001.
- Press the Open Settings button to open the WIFI settings on your phone
- Connect the phone to the network PMC 5001
- Go back to the app
- On the next screen you will be asked to pair with the Appliance:
 1. Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds.
 2. Then click on "Continue" in the app
- On the screen that opens, select the desired action: "Leave the configuration and continue" – the appliance will then remain configured to the current WIFI network, but your phone can control it via the internet, or "Reconfigure appliance" – you will then be prompted to reconfigure your appliance to the new WIFI network.
 - If you have selected "Reconfigure device": enter the name and password of the WIFI network to which you want to configure the device and click on "Connect".
- Wait for the configuration procedure to complete.

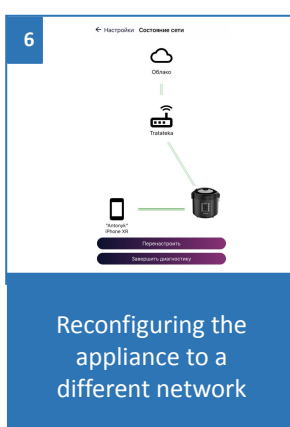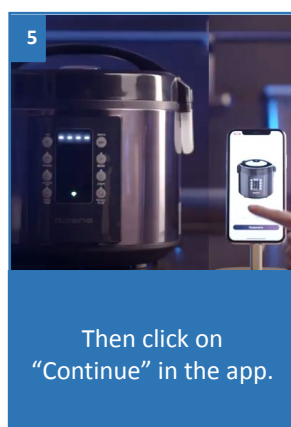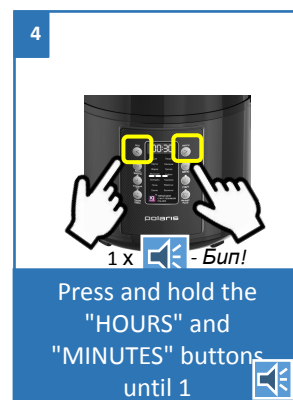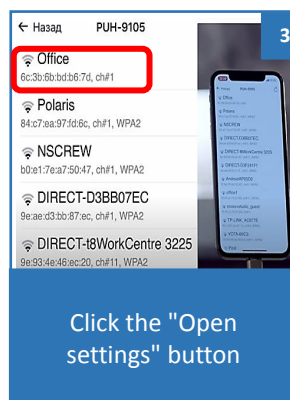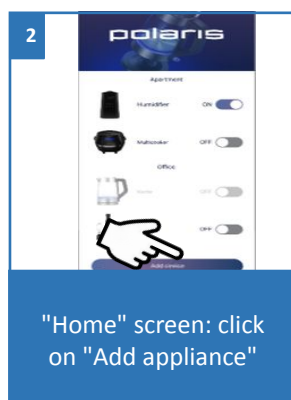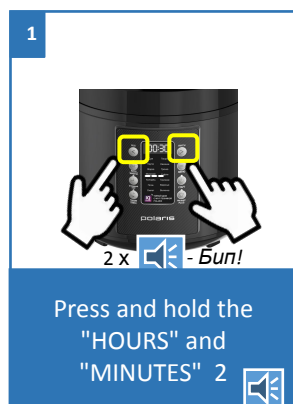

For phones with the IOS operating system

Configuration of the new appliance

- Home screen: press the "Add appliance" button.
- In the "All appliances" list, select a multicooker PMC 5001
- Click on "Continue"
- The app will ask you to connect to the "PMC 5001" WIFI network, click on "Connect"
- On the next screen you will be asked to pair with the Appliance:
 1. Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds.
 2. Then click on "Continue" in the app
- A screen with available WIFI networks will appear. Select the desired network and enter the password for the WIFI network to which you wish to configure the application, then click on "next".
- Wait for the configuration procedure to complete.
- Click on "Continue"

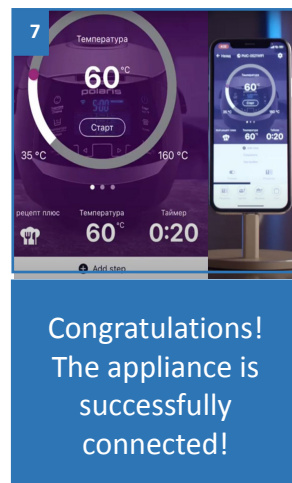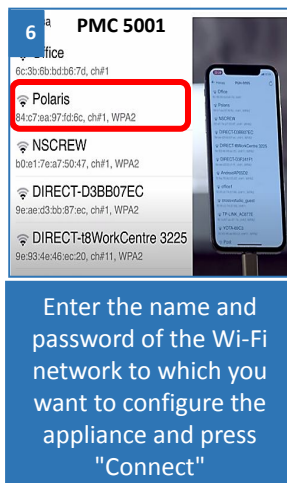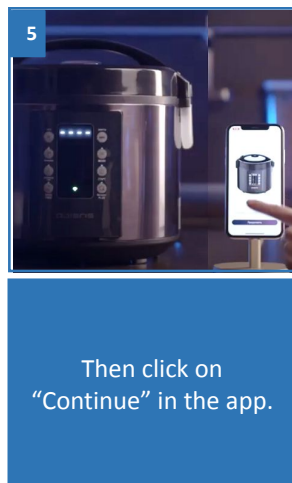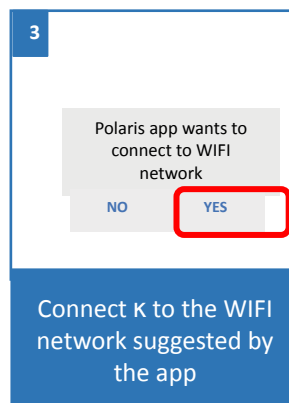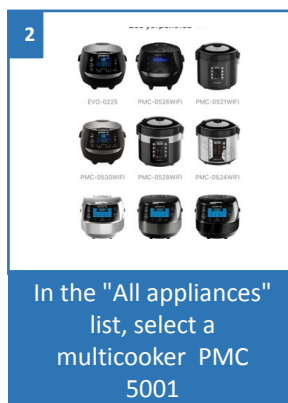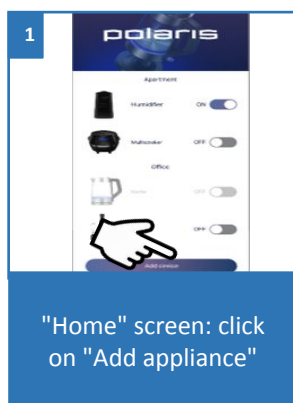

Pairing a previously configured appliance


- Home screen: press the "Add appliance" button.
- In the "Near you" list, select a multicooker (PMC 5001) (If the appliance is not available, make sure that you have a WIFI network connected to which the appliance is configured)
- On the next screen you will be asked to pair with the Appliance:
 - Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds.
 - Then click on "Continue" in the app




"Home" screen: click on "Add appliance"



From the "Near you" list, select a multicooker PMC 5001

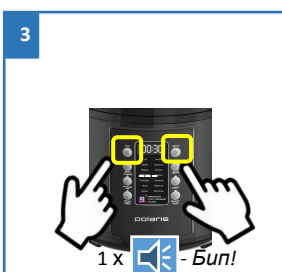





Press and hold the "HOURS" and "MINUTES" buttons until the alarm sounds

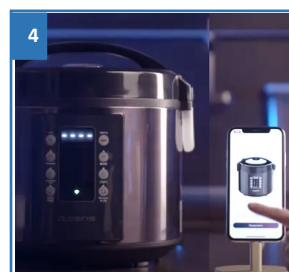

Then click on "Continue" in the app.

Reconfiguration of the appliance to a different WIFI network (diagnostic mode)

- Press and hold the "HOURS" and "MINUTES" buttons until two short beeps sound.
- "Home" screen: click on "New appliance" button.
- In the "All appliances" list, select a multicooker PMC 5001.
- Click on "Continue"
- The app will ask you to connect to the "PMC 5001" WIFI network, click on "Connect"
- On the next screen you will be asked to pair with the Appliance:
 1. Press and hold the "HOURS" and "MINUTES" buttons until the beep sounds, the Wi-Fi indicator will start flashing rapidly.
 2. Then click on "Continue" in the app
- On the screen that opens, select the desired action: "Complete the configuration" – the appliance will then remain configured to the current WIFI network but your phone can control it via the internet, or "Reconfigure" – you will then be prompted to reconfigure your appliance to the new WIFI network.
 - If you have selected "Reconfigure": enter the name and password of the WIFI network to which you want to configure the multicooker and click on "Connect".
- Wait until the configuration procedure is completed

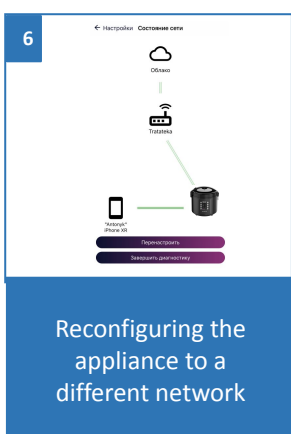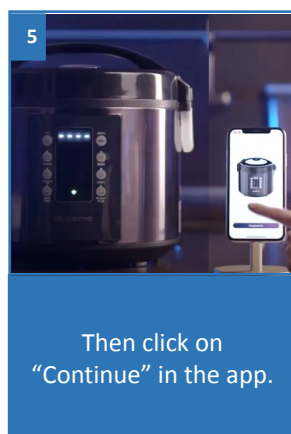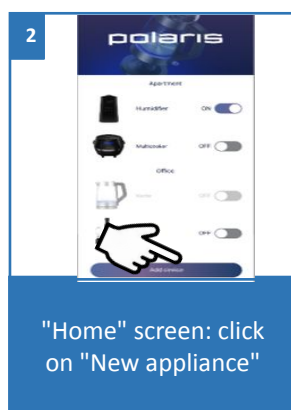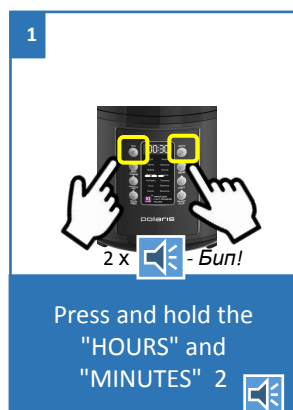

RETURN THE APPLIANCE TO THE FACTORY WIFI SETTINGS



3 x  - Beep!

Press and hold the "HOURS" and "MINUTES" buttons for up to three beeps – the appliance is returned to factory WIFI settings

Press and hold the "HOURS" and "MINUTES" buttons for up to 3 beeps



SOME OF THE FEATURES AVAILABLE IN THE Polaris IQ Home APP

1) Description of the function of controlling the rights over the appliance and transferring control of the appliance to other persons. These functions are the same for absolutely all appliances of the IQHome line.

- Transfer of control. You need to go to the "Rights Control" menu, click on the share icon in the upper right corner (after that, the QR code of your appliance will appear on the screen) and then select one of the two options:
 1. to send a link to the appliance via messenger or mail – to do this, on the screen that opens with the QR code, click the share icon in the upper right corner and select the method by which to send the link (wahtsapp, sms, email, etc.);
 2. on the second phone, click the "Add appliance" button on the main screen, in the window that opens, click on the scanner button in the upper right corner and scan the QR code on the screen of the first phone with the phone's camera;
- **Rights administration.** An unlimited number of users can connect to and control one appliance. To administer the rights, you need to go to the device settings and then to the "Rights Control" menu. Toggle the "Enable access control" trigger - this way the current user becomes the administrator of this appliance and can assign different access levels to all other connected users: 1) administration - full control of the appliance + the ability to determine the rights of other users; 2) management – full control of the device without the ability to determine the rights of other users; 3) viewing – viewing the current state of the appliance without the ability to control. As long as the "Enable access control" trigger is enabled, all new users who will connect to the appliance in one way or another will receive viewing rights only. To obtain the rights to control the appliance, they will need to contact the appliance administrator. Only a user with administrator rights can turn off the trigger. If you turn off this trigger, all connected and newly connected users receive full rights to control the appliance

2) Recipe database

A database of more than 800 automatic recipes is available from the application, containing a detailed description of each step of cooking a meal. It should be noted that some of the steps in the recipes are automatic, and some require user participation (for example, to report the necessary products to the bowl) and to start them, you will need to press the appropriate button in the application.

You can find more detailed information on managing a multicooker using WIFI in the Polaris IQ Home app.

3. The user's personal recipes.

The user can save his/her personal recipe, consisting of several steps of the "My recipe PLUS" mode. To do this, turn on the "My Recipe Plus" mode in the application and click the "Add step" button and set the required temperature and step time. Click the "Add step" button to add each subsequent step. When you finish creating the sequence, click the "Save" button and enter the name of your recipe. The recipes created in this way will be stored in the application in the "Personal" menu. You can share this recipe with any other user of the IQHome multicooker line in any convenient way (mail, messenger, sms, social media, etc.). To do this, hold down the button of the selected personal recipe and drag it to the "share" icon that appears.

4. Delayed start

When controlling the multicooker via WIFI, using the mobile application "POLARIS: IQ home", you can take advantage of the opportunity to postpone the start and cook the meal after a set time or by a set time.

For this purpose, the parameters "Relative" and "Absolute" are provided.

- A "relative" delayed start means that the meal will be ready after a set time
- "Absolute" delayed start is used to set the time by which the meal should be ready.

5. OPERATION OF THE APPLIANCE WHEN OPERATING THE BUTTONS

- Before using the appliance, read the Manual carefully and follow its instructions.
- When the appliance is switched on for the first time, smoke may appear due to the burning of oil residues used in production.



Attention! Current time setting and display is not provided.

- To eliminate foreign odors, it is recommended to boil water in a multicooker at a boiling temperature before the first use for 30 minutes when filling the bowl by one third.
- After finishing the treatment, disconnect the appliance from the mains, let the appliance cool down with the cover open, drain the water from the bowl, wipe the appliance dry and leave it to dry with the cover open.
- Wipe the sealing ring of the lid on both sides with a napkin soaked in vegetable oil, and then with a napkin soaked in lemon juice.



Attention: The O-ring is not removable.



5.1. WORK PROCEDURE

1. Open the cover of the appliance by pressing the cover lock button

- Make sure that the inner and outer parts of the appliance are free of packaging and free of contamination.
- Remove the bowl from the multicooker.



Attention: Use only the original bowl of this model which does not have dents and deformations, do not replace it with a bowl from another multicooker or another container. This may cause the appliance to malfunction.

- Make sure that there are no foreign objects or liquid between the bowl and the heating surface.



2. Place the necessary products in a bowl (except for the programs "Frying", "Omelet").

- Follow the recipe for cooking the meal and the instructions in the description of the cooking programs.
- In the "Frying" and "Omelet" programs, place the products in the bowl only after it has been preheated to operating temperature. In the "Frying" program, heating is performed with an empty bowl installed in the appliance, with a small amount of oil at the bottom of the bowl. On the "Omelet" program, oil is added to the bowl as desired. The appliance cover must be closed during warm-up.
- In these programs, the multicooker alarms when the operating temperature is reached. In this case, the cooking time starts counting only after the alarm. Warming up to the set temperature can take a long time (up to 20 minutes). The cover must be closed when warming up



3. Place the bowl in the multicooker

- Make sure that the bowl is properly mounted on the heating element.
- Turn the inner bowl in the multicooker slightly from side to side until it is firmly positioned in the desired position on the heating surface.

4. The cover of the multicooker can remain open or closed depending on the cooking program and recipe recommendations

- Follow the recommendations for the position of the cover indicated in the description of each program.




Attention! If the cover is positioned incorrectly, the result may not meet the requirements



5. Plugin the multicooker

- Do not plug the appliance into an outlet unless the above recommendations are followed. The display will light up (- - -).
- The appliance is in standby mode.
- The mains parameters must correspond to the technical characteristics of the appliance (see the section "Technical specifications").

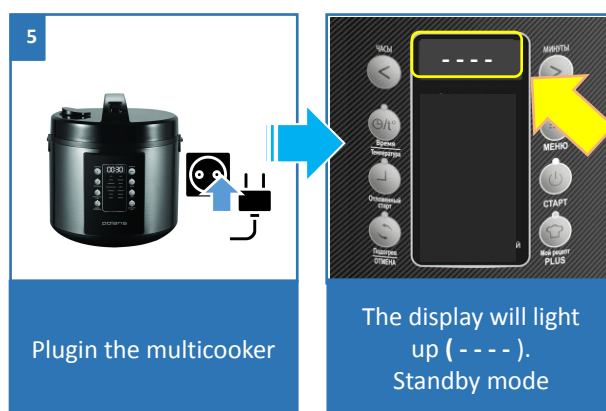

6. By pressing the "MENU" button, select the cooking program

- The "MENU" button switches the cooking program one step down to the end of the left column, then the right.
- An indicator light with the name of the program will be lit on the control panel.




Attention! The program names on the control panel are not program selection buttons

7. Set the cooking time according to the recipe of the meal

- By pressing the "HOURS" or "MINUTES" buttons sequentially, set the cooking time if the recipe specifies a time other than the default one.
- The range of time and step changes is according to the selected cooking program.



Attention! It is not possible to change the cooking time during the program

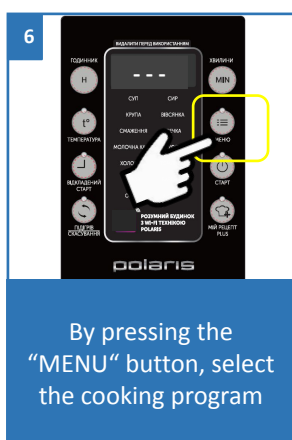

By pressing the "MENU" button, select the cooking program




Set the cooking time manually if it is recommended in the recipe

8. Set the cooking temperature according to the recipe of the alarm (available only for the programs "Frying" and "My recipe PLUS")

- Press the "t°" button
- The temperature value shown on the display will start flashing (only for those programs where it is possible to change it).
- By pressing the "t°" button sequentially, change the cooking temperature value.
- The range and step of temperature change is according to the selected cooking program.



Attention! It is not possible to change the cooking temperature during the program

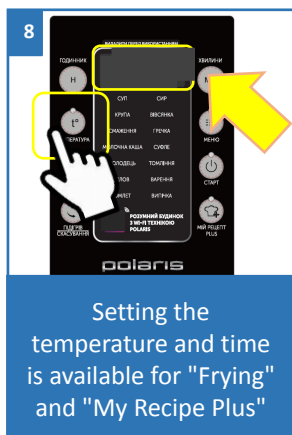

Setting the temperature and time is available for "Frying" and "My Recipe Plus"

9. Start the cooking program

- Press the "START" button. (If you do not press the "START" button within 30 seconds after setting the cooking parameters, the multicooker will alarm and enter standby mode.)
- The multicooker will alarm.
- The light indicators of the "START" button and the name of the program will be lit during the entire cooking time.
- The indicator of the "PREHEAT / CANCEL" button will also light up on the display which means that at the end of the program, the appliance will automatically switch to the PREHEAT mode if it was not turned off in advance (see clause 5.4.)
- The appliance does not switch to PREHEAT mode at the end of programs with a cooking temperature of less than 80°C.

Attention!



When the appliance is switched on for the first time, smoke may appear due to the burning of oil residues used in production.

During operation of the appliance, there may be "clicks" associated with the operation of the relay. The presence of this effect is the normal operation of the appliance and does not indicate its malfunction.

10. End of the program

- At the end of the working time, the multicooker will sound.
- The "START" button indicator will go off.
- The appliance will switch to PREHEAT mode if it has not been switched off in advance (see clause 5.4.).
- A direct time count will be displayed showing how much the meal is being heated

11. Turn off the appliance

- Allow the appliance to cool down before cleaning.



Attention! The handle of the appliance cover is not intended for carrying it. It only serves to open/close the cover. Carrying the appliance by the handle may cause the cover lock to break



5.2. THE "DELAYED START" FUNCTION

The "Delayed start" function allows you to prepare food by the required time.

- The maximum delay time for the end of cooking can be 24 hours.



However, please do not delay the start for a long time if there are perishable products in the ingredients of the alarm.




Note: When controlling a multicooker via WIFI using the mobile application "POLARIS: IQ home", you can use either "Relative delayed start", i.e. the meal will be ready after a set time, or "Absolute delayed start" - then the meal will be ready by the set time. The delayed start installation step is 1 minute.

- The Delayed start function is available for all programs.
- In the programs "Frying", "Omelet", the countdown is turned on when the operating temperature is reached, so the end of cooking may come a little earlier or later than the time set for the "Delayed start" (depending on the filling of the bowl).

To activate the "Delayed start" mode:

- Select the cooking program using the MENU button.
- Set the program parameters (time and temperature where possible).
- Click the "DELAYED START" button
- The indicator light of the "DELAYED START" button will light up.
- Use the "HOURS" or "MINUTES" buttons to set the time after which the meal should be ready. The timer flashes during the time setting. The delay time is added to the previously set cooking time.
- The minimum delay time setting step is 1 minute except for the "Frying" program.
- Click the "START" button.
- The multicooker will alarm, and the countdown will begin.
- When the delay time comes to the end, the indicator of the "DELAYED START" button will turn off, and the multicooker will start executing the program with the specified parameters.
- The countdown will continue according to the settings of the selected program

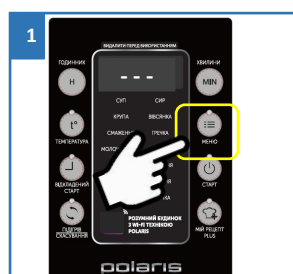


Select the cooking program using the MENU button.



Click the "DELAYED START" button



Set the time after which the meal should be ready

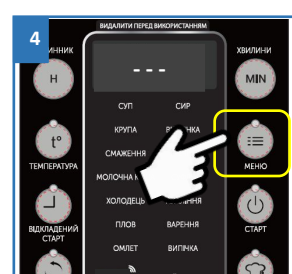

Click the "START" button

5



1 x  - Бун!

The multicooker will alarm

6



The countdown will start

7



When the delay time comes to an end, the indicator of the “DELATED START” button will turn off

8



Then, the multicooker will start executing the program with the specified parameters

5.3. PROGRAM INTERRUPTION


If necessary, you can interrupt the program at any time. Press the “PREHEAT/ CANCEL” button, the multicooker will alarm and enter standby mode.



Attention!

When the power supply is turned off, the appliance stores the current time and temperature values. When electricity is supplied, the program continues to run.

1

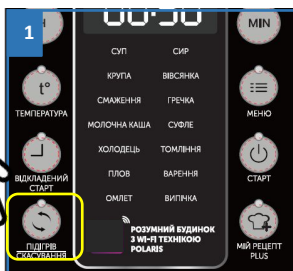Press the “PREHEAT /CANCEL” button

2



1 x  - Бун!

The multicooker will emit 1 alarm and switch to standby mode


5.4. Disabling / enabling the automatic transition to the PREHEAT mode

You can turn off the automatic switch to PREHEAT mode at the end of the program in advance.

1. To do this, press the "START" button when completing the program.
2. The appliance will alarm and the indicator light of the "PREHEAT/CANCEL" button will go out.
3. To turn on the PREHEAT mode again, press the "START" button again, the indicator light of the "PREHEAT/CANCEL" button will light up again.



For the record! The appliance does not automatically switch to the HEATING mode in programs with a cooking temperature at the last stage of less than 80°C.

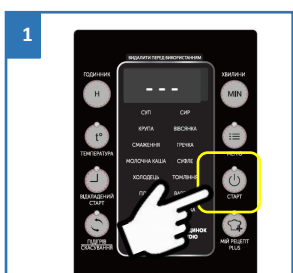

Click the "START" button



The multicooker will alarm once



The indicator light of the "PREHEAT/CANCEL" button will go out

5.5. COOKING PROGRAMS

"MY RECIPE PLUS"



This program allows you to manually set the temperature and cooking time from the panel in three consecutive stages, through the application - in nine consecutive stages which will allow you to cook any meals. It is possible to select and configure one, two or three automatically changing stages (steps). The delayed start function is available for this program (see clause 5.2.)

1. Open the cover of the appliance by pressing the button

- Make sure that the inner and outer parts of the appliance are free of packaging and free of contamination.
- Make sure that there are no foreign objects or liquid between the bowl and the heating surface.

2. Place the necessary ingredients according to the recipe, in a bowl

- Follow the recommended ratio of ingredients and the sequence of their addition to the bowl.

3. Place the bowl in the multicooker

- Always check that the bowl is installed correctly.

4. Close the cover or leave it open depending on the requirements of the recipe




Attention! If the cover is positioned incorrectly, the result may not meet the requirements.

5. Turn on the appliance

- The display will light up " - - - - ".
- The appliance is in standby mode.
- Do not plug the appliance into an outlet unless the above recommendations are followed.
- The mains parameters must correspond to the technical characteristics of the appliance (see the section "Technical specifications").



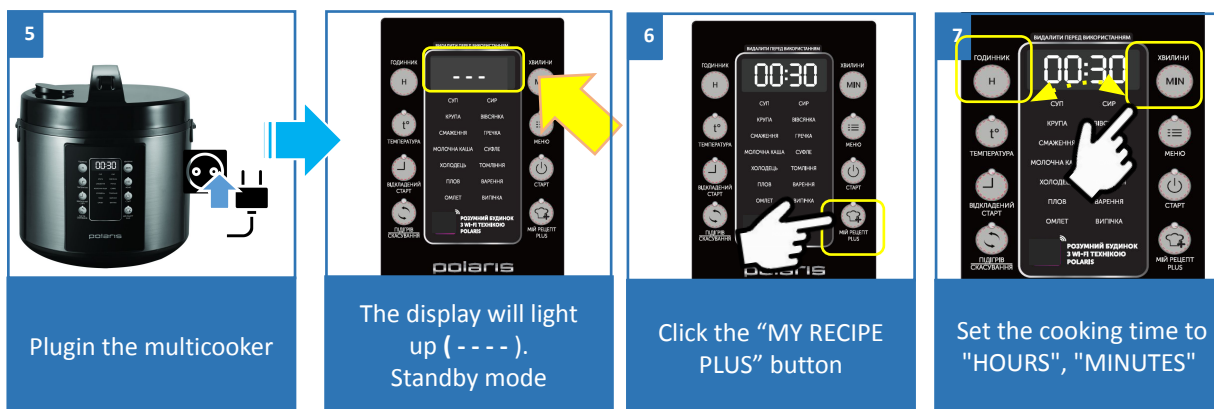

6. Click the "MY RECIPE PLUS" button

- The "MY RECIPE PLUS" button indicator light will light up on the control panel and the "START" button indicator light will flash.
- The indicator of the first stage and the default cooking time for the first stage will light up on the display.
- The cooking time flashes on the display.

7. Set the cooking time in the first step according to the recipe

- By pressing the "HOURS" and "MINUTES" buttons sequentially, set the cooking time.
- The maximum duration of all three stages of the MY RECIPE PLUS program is 16 hours.
- The maximum duration of one step is 9 hours and 55 minutes.
- The step of changing the time by pressing the "HOURS" and "MINUTES" buttons is variable:
 - 1 minute in the range from 5 to 45 minutes,
 - 5 minutes - from 45 minutes to 1 hour 30 minutes,
 - 10 minutes – from 1 hour 30 minutes to 3 hours,
 - 15 minutes – from 3 hours to 12 hours,
 - The duration of the stages with a cooking temperature of more than 140 °C is no more than 2 hours.

8. Set the cooking temperature according to the recipe

- Press the "t°" button
- Press the "t°" buttons sequentially to set the cooking temperature.
- The temperature range can vary from 35 to 160°C.
- The temperature change increment is 5 °C in the range from 35 to 110 °C and 10 °C in the range from 110 to 160 °C.



9. Proceed to programming the next step

- Click the “MY RECIPE PLUS” button.
- The display will light up the indication of the second stage and the default cooking time.
- Following the above algorithm, program the required number of cooking steps from 1 to 3.

10. Start the program

- Click the "START" button. The appliance will alarm.
- The cooking time countdown will be shown on the display.
- The multicooker will start cooking according to the set program.
- The light indicators of the “START” and “MY RECIPE PLUS” buttons will be lit during the entire cooking time.
- The cooking steps indicator flashes according to the step being performed.
- The indicator of the “PREHEAT / CANCEL” button will also light up which means that at the end of the program, the appliance will automatically switch to the PREHEAT mode if it was not turned off in advance (see clause 5.4.)


11. End of the program

- At the end of the working time, the multicooker will sound. The operation indicator will go off.
- The appliance will switch to the PREHEAT mode.
- A live countdown will be displayed showing how much the meal is being heated.

12. Turn off the appliance



Click the “MY RECIPE PLUS” button

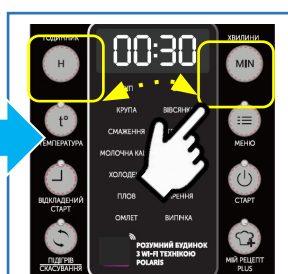


Following the required number of cooking steps from 1 to 3



Click the "START" button



The multicooker will alarm once

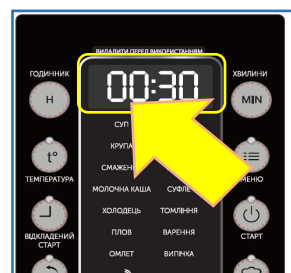

The countdown will start



The indicators of the buttons "START", "MY RECIPE PLUS", "PREHEAT / CANCEL" are lit



At the end of the working time, the multicooker will sound



Turn off the appliance

"SOUP"

The "Soup" program is designed for cooking soups, broths and other meals.

The presence of water in the bowl is mandatory for the correct operation of the program. It is recommended to keep the cover closed during cooking in this program. It is not recommended to open the cover during cooking.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker.
- The pre-roasting of the ingredients is carried out in the "Frying" program.
- The default cooking time for this program is 1 hour. The cooking time range can vary from 1 to 4 hours in 10-minute increments.
- Turn on the multicooker, press the "MENU" button, select "Soup"
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"FRYING"

The "Frying" program is used for frying products. Depending on the recipe and the nature of the products, you can choose the necessary time and temperature conditions.

Preheating on the Frying program should be carried out without the product, with the cover closed. After the preheating signal, open the cover, place the product and fry with the cover open.



Attention!

Do not leave the multicooker unattended in the "Frying" mode.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

- Pour a small amount of oil into the bowl, sufficient for frying.
- The default cooking time for this program is 30 minutes. The cooking time range can vary from 10 minutes to 1 hour with an increment of 5 minutes.
- The cooking temperature range can vary from 100 to 160 °C in 10°C increments.
- Turn on the multicooker, press the "MENU" button, select "Frying" (by pressing the "MENU" button 3 times).
- Start the program by clicking the "START" button. To speed up the heating, close the cover. The countdown will be shown on the display after the beep of the bowl warming up.
- Place the products in the bowl after the alarm.
- During frying, it is necessary to stir, turn the product over and control its readiness. Drying and burning of the product indicates a missed moment of readiness and a lack of oil. If the meal is ready before the end of the set cooking time, turn off the appliance manually by pressing the "PREHEAT / CANCEL" button.

"MILK PORRIDGE"

The program is designed for the preparation of milk soups and porridges. The presence of liquid in the bowl is mandatory for the correct operation of the program.

It is recommended to keep **the cover closed during cooking in this program**. It is not recommended to open the cover during cooking.

If the cover is positioned incorrectly, the result may not meet the requirements

If there is an intense boiling of dairy products during cooking, it is recommended to open the cover for a while to prevent boiling milk from overflowing over the edge of the bowl.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
Attention: Milk must be at room temperature.
- Place the bowl in the multicooker.
- The default cooking time for this program is 1 hour. The cooking time range can vary from 10 minutes to 1 hour and 30 minutes in 5-minute increments.
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).
- *At the end of the "Milk porridge" program, it is not recommended to leave the meal in the PREHEAT mode for more than 15 minutes.*

"PILAF"

This program is designed for cooking various types of pilaf. The presence of water in the bowl is mandatory for the correct operation of the program. It is recommended to keep **the cover closed** during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker. The pre-roasting of the ingredients is carried out in the "Frying" program.
- The default cooking time for this program is 1 hour. The cooking time range can vary from 20 minutes to 2 hours in 5-minute increments.
Important: with pre-cooked roasting, the time setting of 20 minutes is sufficient for cooking rice at the final stage in the "Pilaf" program.
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"COTTAGE CHEESE"

The "Cottage cheese" program is used to make cottage cheese from kefir or sour milk. It is recommended to keep **the cover closed** during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the necessary ingredients in a bowl.
- Place the bowl in the multicooker.
- The default cooking time for this program is 35 minutes. The time range can vary from 10 minutes to 50 minutes with an increment of 5 minutes.
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown.

"BUCKWHEAT"

The program is designed to prepare a side meal of buckwheat. The presence of water in the bowl is mandatory for the correct operation of the program. It is recommended to keep the cover closed during cooking in this program.

The delayed start function is available for this program (see clause 5.2.) Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the food to the bowl.
- Place the bowl in the multicooker.
- The default time for this program is 25 minutes.
- The cooking time range can vary from 20 minutes to 2 hours with a minimum increment of 5 minutes.
- Start the program by clicking the "START" button. At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).
- At the end of the "Buckwheat" program, it is not recommended to leave the meal in the PREHEAT mode for more than 15 minutes.

"JELLIED MEAT"

The "Jellied meat" program is used for making Jellied meat. The presence of water in the bowl is mandatory for the correct operation of the program.

It is recommended to keep **the cover closed** during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker.
- The default cooking time for this program is 6 hours. The cooking time range can vary from 2 to 8 hours in 1 hour increments.
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"OMELET"

The program is designed for making an omelet. It is recommended to keep the cover closed during cooking in this program.

Follow the instructions in section 5.1.

Operating procedure:

- Place the necessary ingredients in a bowl.
- Place the bowl in the multicooker.
- The default cooking time for this program is 20 minutes. The time range can vary from 10 to 30 minutes with a minimum increment of 5 minutes.
- Start the program by clicking the "START/ Cancel" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown.

"OATMEAL"

A special program is designed to quickly prepare a healthy and wholesome breakfast of oatmeal. The presence of water in the bowl is mandatory for the correct operation of the program. It is recommended to keep the cover closed during cooking in this program. When cooking for a long time, stir the porridge and control the readiness. If the product is ready before the end of the set time, turn off the program with the "Preheating/Cancel" button.

The delayed start function is available for this program (see clause 5.2.)
Follow the instructions in section 5.1. Operating procedure.

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker.
- The default cooking time for this program is 5 minutes. The cooking time range can vary from 5 minutes to 1 hour with a minimum increment of 5 minutes.
- Start the program by clicking the "START" button. At the program end, the multicooker will sound.
- After the end of the "Oatmeal" program, the appliance DOES NOT switch to the automatic PREHEATING mode.

"STEWING IN A RUSSIAN OVEN"

The program "Stewing in a Russian oven" simulates the process of cooking in a Russian oven. The meal is prepared by very long and slow stewing at a constantly rising temperature which allows you to preserve the useful properties of the products and give them a unique taste.

It is recommended to keep **the cover closed** during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)
Follow the instructions in section 5.1. Work procedure

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker. The pre-roasting of the ingredients is carried out in the "Frying" program.
- The default cooking time for this program is 5 hours. The cooking time range can vary from 1 to 8 hours in 30-minute increments.
- Start the program by clicking the "START" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"BAKERY PRODUCTS"

The "Bakery products" program is used for baking cakes, muffins, pies, casseroles and cooking other meals from ready-made dough.

It is recommended to keep **the cover closed** during cooking in this program.

Operating procedure:

- Put the dough in a bowl and smooth it out.
- *You can grease the bowl with butter or margarine to make the pastry easier to remove.*
- The default cooking time for this program is 1 hour. The cooking time range can vary from 30 minutes to 3 hours in 30-minute increments.
- Start the program by clicking the "START" button.
- *The baking time depends on its type and volume.*
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"SOUFFLE"

The program is designed specifically for souffle preparation. It is recommended to keep the cover closed during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)

Operating procedure:

- Put the dough in a bowl and smooth it out. Place the bowl in the multicooker.
- You can grease the bowl with butter to make the souffle easier to remove. The default cooking time for this program is 1 hour. The cooking time range can vary from 50 minutes to 1 hour 30 minutes with a minimum increment of 5 minutes.
- Start the program by clicking the "START/ Cancel" button.
- At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct time count.

"JAM"

The program is designed for making jam.

It is recommended to keep **the cover closed** during cooking in this program.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Work procedure

Operating procedure:

- Place the necessary ingredients according to the recipe, in a bowl.
- Place the bowl in the multicooker.
- The default cooking time for this program is 1 hour.
- The cooking time range can vary from 30 minutes to 4 hours in 5-minute increments.
- Start the program by clicking the "START" button. At the end of the program, the multicooker will emit an alarm and automatically switch to the PREHEAT mode with a direct countdown (see clause 5.4).

"FRYING"

The "Frying" program is used for frying products. Depending on the recipe and the nature of the products, you can choose the necessary time and temperature conditions.

Preheating on the Frying program should be carried out without the product, with the cover closed. After the preheating signal, open the cover, place the product and fry with the cover open.



Attention!

Do not leave the multicooker unattended in the "Frying" mode.

The delayed start function is available for this program (see clause 5.2.)

Follow the instructions in section 5.1. Operating procedure.

- Pour a small amount of oil into the bowl, sufficient for frying.
- The default cooking time for this program is 30 minutes. The cooking time range can vary from 10 minutes to 1 hour with an increment of 5 minutes.
- The cooking temperature range can vary from 100 to 160 °C in 10°C increments.
- Turn on the multicooker, press the "MENU" button, select "Frying" (by pressing the "MENU" button 3 times).
- Start the program by clicking the "START" button. To speed up the heating, close the cover. The countdown will be shown on the display after the beep of the bowl warming up.
- Place the products in the bowl after the alarm.
- During frying, it is necessary to stir, turn the product over and control its readiness. Drying and burning of the product indicates a missed moment of readiness and a lack of oil. If the meal is ready before the end of the set cooking time, turn off the appliance manually by pressing the "PREHEAT / CANCEL" button.

5.6. A BRIEF TABLE OF COOKING PROGRAMS

Cooking program	Time and temperature* default cooking time	Time and temperature adjustment	Cover position	"Delayed start"
MY RECIPE PLUS	20 minutes (16 hours is the maximum total duration of the three stages, 9 hours 55 minutes – the maximum duration of one stage.) Temperature: 35 – 160°C.	Time change increment: 1 minute in the range from 5 to 45 minutes, 5 minutes - from 45 minutes to 1 hour 30 minutes, 10 minutes – from 1 hour 30 minutes to 3 hours, 15 minutes – from 3 hours to 12 hours, Time change increment: 5°C in the range from 35 to 110°C 10°C in the range from 110 to 160°C	Open / Closed	Yes
Soup	1 hour / 97°C	1 hour – 4 hours, increment of 10 minutes	Closed	Yes
Cereal	40 minutes / 115°C the end temperature of the program is 115 °C+ 5 minutes	20 minutes – 2 hours, increment of 5 minutes	Closed	Yes
Frying	30 minutes	10 minutes – 1 hour, increment of 5 minutes 100 – 160°C, increment 10°C	Open	Yes
Milk porridge	1 hour / 95°C	10 minutes – 1 hour 30 minutes, increment 5 minutes	Closed	Yes
Jellied meat	6 hours / 93°C	2 – 8 hours, increment of 1 hour	Closed	Yes
Pilaf	1 hour / 120-125°C The end temperature of the program is 145 °C-150°C	20 minutes – 2 hours, increment of 5 minutes	Closed	Yes
Omelet	20 minutes / 100°C	10 - 30 minutes, increment of 5 minutes	Closed	Yes
Cottage cheese	35 minutes / 95°C	10 - 50 minutes, increment of 5 minutes	Closed	Yes
Oatmeal	5 minutes / 96°C	5 minutes – 1 hour, increment of 5 minutes	Closed	Yes
Buckwheat	25 minutes / 115°C	20 minutes – 2 hours, increment of 5 minutes	Closed	Yes
Souffle	1 hour/ 150°C	50 minutes – 1 hour 30 minutes, increment 5 minutes	Closed	Yes
Stewing in a Russian oven	5 hours / the first quarter of the cooking time is 45°C, the second is 65°C, , the third is 85°C, the fourth is 95°C	30 minutes – 8 hours, increment of 30 minutes	Closed	Yes
Jam	1 hour / 102°C	30 minutes – 4 hours, increment of 5 minutes	Closed	Yes
Bakery products	1 hour / 130°C	30 minutes – 3 hours 30 minutes, increment 10 minutes	Closed	Yes

* In programs with the ability to manually adjust the temperature, the user sets the required temperature manually while the readiness of the product directly depends on the correct choice of temperature and cooking time.

The temperature settings of the automatic programs are indicated for reference, their change during the cooking process occurs automatically without user intervention. At the same time, at different points in the program (depending on the contents of the bowl), the temperature may differ from the reference value which is the setting value.

For example: at a set temperature of 115 °C and the presence of liquid in the bowl when measured, the temperature in the bowl will not exceed 100 °C (boiling point of water) while the boiling of water in the bowl will be intense. In this case, the difference between the set and actual temperature values is not a sign of a malfunction of the appliance.

If the program is designed for cooking (working with water) then when boiling or there is no water in the bowl, the program is automatically reset, since the temperature of the bottom of the bowl exceeds the safety threshold for this program. Resetting the program without water is a normal reaction of the protection system.

When making measurements, the following should be considered:

- The temperature measurement point is located in the center of the bottom of the bowl installed in the appliance, the measurement is performed by a fixed sensor (thermocouple) with the cover of the appliance closed.
- To correctly estimate the value, measurements should be made during the entire duration of the program with a time interval of 30 seconds. between dimensions.
- Based on the obtained values, a temperature–time dependence diagram is drawn up, and a section is identified where the temperature changes cyclically at relatively constant maximum and minimum values (the thermostating section)
- The reference temperature value will be between the minimum and maximum measured value at the temperature control area.

When measuring, the features of automatic programs should be considered:

- if the program is designed to work with liquid (water), then 1 liter of water should be poured into the bowl during measurements.
- If the program is designed to work without water, measurements should be made with an empty bowl.

If there is a product in the bowl, the measured values may differ from the reference values due to the presence of different liquid (water) contents in the products, the boiling of which does not allow the temperature at the measuring point to rise above 100 °C according to the laws of physics.

To obtain values close to the actual settings, a liquid with a boiling point exceeding the specified reference value (for example, vegetable oil) with a weight equivalent to the weight of the product should be used.

6. CLEANING AND CARE OF THE APPLIANCE


- At the end of cooking, always clean the multicooker from food residues and dirt.
- Do not use brushes with metal wire and solvent to clean contaminated parts of the multicooker.
- If the remains of the meal are stuck to the inner bowl, soak it before washing. Wipe the inner bowl after washing.
- Do not immerse the appliance body in water. Use a damp, soft sponge or cloth to clean the body.
- The inner bowl and steaming container can be washed in the dishwasher. When washing in the dishwasher, make sure that the bowl is not damaged by the components of the machine. Follow the instructions for the dishwasher and the description of the detergents used to avoid damage to the bowl made of coated aluminum.
- Do not allow the steam outlet to become clogged. The steam separator valve has a removable design, rinse it regularly with water to avoid clogging.
- After each cooking, the condensate collector located on the side wall of the appliance must be removed and emptied. Rinse, dry it and put it back in place.
- To stir, use only a wooden spatula or a special plastic spoon supplied with the appliance.
- Do not pour vinegar into the bowl, it may damage it.
- After a while, the bowl may change color due to the fact that it comes into contact with water and detergents. This is a normal phenomenon, and the multicooker can be safely operated further. DO NOT use abrasives to clean the appliance.



Unplug the appliance and wait until it has cooled down completely



Wipe the case with a soft cloth

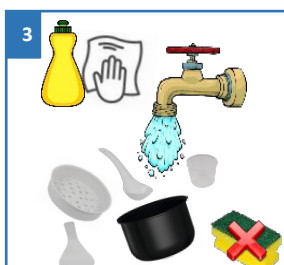

Rinse the bowl and accessories with warm soapy water



Dry thoroughly



Do not immerse the appliance in water or other liquids



The inner bowl and steaming container can be washed in the dishwasher

7. TRANSPORT AND STORAGE

- The appliances are transported by all means of transport in accordance with the rules for that particular type of carriage of goods in place on a particular type of transport.
- When transporting the appliance, use the original factory packaging.
- Transportation of appliances should exclude the possibility of direct exposure to atmospheric precipitation and aggressive environments.
- Appliances are stored in a closed, dry and clean room at an ambient temperature of no higher than 40 °C with a relative humidity of no higher than 70% and no acid or other vapours in the environment that negatively affect the materials of the electrical appliances.

8. SALES

Sales rules have not been established.

9. DISPOSAL REQUIREMENTS

Waste generated during the disposal of products is subject to collection and subsequent disposal in accordance with the Law of Ukraine "On Waste Management".



Attention! At the end of its service life, do not dispose of the appliance with household waste. Take it to a specialized recycling center for further disposal. By doing so, you will help to protect the environment.



To avoid the risk of fire, electric shock, or injury when using your appliance or damaging it, follow basic precautions for working with this appliance, as well as general safety guidelines for working with electrical appliances.

10. GENERAL SAFETY INSTRUCTIONS WHEN OPERATING ELECTRICAL APPLIANCES

- The appliance must be operated in accordance with the “Rules for the Technical Operation of Consumer Electrical Installations”.
- The appliance is intended for household use only.
- The appliance must only be used for its intended purpose.
- This appliance is not intended for use by people (including children) who have physical, nervous or mental disabilities or lack of experience and knowledge unless such persons are supervised or instructed regarding the use of this appliance by the person responsible for their safety. It is necessary to supervise children in order to prevent their games with the appliance.
- Please read this user manual carefully before putting this appliance into operation.
- Inspect the appliance each time before turning it on. If the appliance and the power cord are damaged never plug the appliance into a power outlet.
- Do not use the appliance after a fall if there are visible signs of damage. The appliance must be checked by a qualified professional before use.
- The appliance and the power cord must be stored so that they are not exposed to heat, direct sunlight and moisture.



Attention! Do not use the appliance near bathtubs, sinks, or other containers filled with water.

- Never immerse the appliance in water or other liquids. Do not touch the appliance with wet hands. If the appliance gets wet immediately unplug it.
- If the appliance falls into the water unplug it immediately. In this case, do not put your hands in water. Before reuse, the appliance must be checked by a qualified professional.
- Plug the appliance into an AC power source (~) only. Before switching on, make sure that the appliance is rated for the voltage used in the mains supply.
- **Any erroneous plug-in deprives you of the right to warranty service.**
- The appliance can only be connected to a grounded grid. To ensure your safety, grounding must comply with established electrical codes. Do not use non-standard power sources or connection devices.
- Do not use the appliance outdoors. Protect the appliance from hitting sharp corners. Upon termination of operation, cleaning or breakdown of the appliance always unplug it.
- It is forbidden to disconnect the appliance from the mains by holding it by the mains wire. When disconnecting the appliance from the mains, hold on to the plug.
- The use of additional accessories that are not included in the scope of delivery deprives you of the right to warranty service.
- Never wrap the power cord around the appliance after use as this can lead to a broken cord over time. Always straighten the cord for storage.
- Do not repair the appliance yourself. Repairs should only be carried out by qualified service personnel.
- Only original spare parts may be used to repair the appliance.

11. SAFETY PRECAUTIONS WHEN WORKING WITH THE MULTICOOKER

- When using the appliance, make sure that there is enough free space around it. The appliance must be at least 15cm away from flammable objects such as furniture, curtains, etc.
- Do not place the appliance in close proximity to walls and furniture as steam escapes from the appliance during operation which can cause discoloration and deformation of furniture and wall coverings.
- Do not cover the multicooker with a towel and other objects during operation, steam should come out freely.
- When using the appliance, install it on a dry, flat, heat-resistant surface, do not allow foreign objects, tablecloths, cloth coverings or anything else to cover the ventilation holes in the bottom of the appliance as this may lead to overheating.
- Before the first use, it is recommended to boil water in a multicooker in the "My recipe plus" mode, at a temperature of 110 ° for 30 minutes when filling the bowl to half to eliminate foreign odors.
- Do not turn on the execution of programs on the multicooker without an internal bowl installed, do not remove the bowl from the multicooker while the program is running.
- Do not use the multicooker near heat sources (gas or electric stoves).
- To avoid burns, do not touch the operating appliance. At the end of operation, allow the multicooker to cool down.
- Check the voltage before plugging the appliance into the mains.
- Do not leave the appliance plugged in if you are not cooking.
- Before disconnecting the appliance from the mains, make sure that it is in standby mode and the program is not running.
- Never lift/move the appliance while it is connected to the mains.
- Do not lift the multicooker by the cover handle, this may cause the lock to break.
- Do not carry the appliance with the inner bowl filled with food.
- Do not touch the inner bowl while the multicooker is running.
- Do not knock on the inner surface of the bowl, do not take it away by force, and do not use abrasive cleaners and aggressive detergents to clean the appliance.
- Do not use metal kitchen utensils to mix or remove food from the bowl, they may damage the non-stick coating. Use wooden, plastic or silicone accessories.
- Do not leave kitchen utensils in the bowl during the cooking process.
- Do not use a multicooker without an O-ring or if it is damaged. To replace the O-ring, contact an authorized service center.
- Do not leave food or water in the multicooker for a long time.
- Do not fill the bowl with food above the maximum level mark.
- Do not pour vinegar into the bowl, it may damage the coating.
- Do not use the bowl of the multicooker to cook food outside the multicooker, do not heat it on the stove or other heat sources.

- Do not use the bowl as a mixing container or a food storage container.
- Do not use a defective (deformed) bowl in the appliance.
- Do not replace the bowl of the multicooker with another container or a bowl from another multicooker. Do not use a deformed bowl or a bowl with damaged inner coating in the appliance.
- There should be no foreign objects, layers and product residues between the removable bowl and the inner body as well as between the bottom of the bowl and the heating element.
- When cooking cereals, observe the recommended ratio of cereals and water in the bowl.
- After a while, the bowl may change color due to contact with water and detergents. This is a normal phenomenon, and the multicooker can be safely operated further.
- The manufacturer shall not be liable for damage resulting from improper use or use unintended in this Manual.

12. IF YOU HAVE A PROBLEM

Problem	Cause	Troubleshooting method
The operation indicator is off, the heating element is not working	1. Power supply problem.	• Check that the appliance is plugged in. • Check the reliability of the connection of the power cord to the connector on the appliance body. • Contact an authorized service centre for assistance
	2. Failure of the thermal fuse due to overheating (the ventilation openings of the body are blocked by a foreign object or a cover – violation of the operating requirements).	
	3. The electronics malfunction.	
The indicator is on, the heating element is not working	Electronics malfunction, heating element malfunction.	Contact an authorized service centre for assistance
The meal takes too long to cook	1. There is no mains power	Check that the appliance is plugged in.
	2. The heating element is defective	Contact an authorized service centre for assistance
	3. The inner bowl of the multicooker is installed with a skew, either deformed or does not match the model.	Check the inner bowl, make sure it is installed correctly. Replace the deformed bowl with a serviceable one corresponding to the model.
	4. Foreign object (contamination) between the heating plate and the saucepan	Remove the foreign object (contamination)

Problem	Cause	Troubleshooting method
The appliance cannot connect to the WIFI router	1. The connection fails	a. Make sure that your appliance is supported in the application: on the home menu of the application, click Add Appliance button and expand All Appliances list; b. Make sure your router is operating at 2.4 MHz, network mode 802.11 b/g/n. To configure the router, refer to the instructions for your router; c. Make sure that your router does not impose additional restrictions on incoming connections (for example, connecting only the specified MAC addresses). To configure the router, refer to the instructions for your router. d. Make sure you have the latest version of the program; e. Unload the program from the smartphone memory and run again: open the list of open applications in the phone and swipe up the launched Polaris IQ Home program window then restart the program and repeat the connection process; f. Activate the appliance diagnostic mode - see the section "Connection Settings" in the User Guide; g. Reset the appliance - see the section "Connection Settings" in the User Guide;
	2. The connection was successful, the appliance appeared in the list of appliances in the application but its control is not available.	Make sure your phone has reconnected to the WIFI network. To do this, open the WIFI section of your phone's settings and if necessary, connect to your WIFI network manually.
	3. The appliance was successfully connected but unexpectedly stopped responding to commands from the application.	Go to the appliance page and click on the asterisk in the upper right corner. Next, in the Connection Diagnostics section, refer to the Diagnostics Chart. Click on the exclamation mark next to the red section of the network and follow the instructions of the online assistant.
Haven't found the answer to your problem? See additional information or contact support service in the section "Smart Home" on our website.		
The appliance does not respond to pressing buttons on the appliance panel	The function of protection against accidental pressing is activated	Turn off protection in the application or from the appliance panel

Attention! If you cannot resolve the problem on your own using the steps described above, please contact your Service Center.

13. SCOPE OF DELIVERY

Appliance	1 pc	
Power cord	1 pc	
Inner bowl with non-stick coating		1 pc
Steaming container	1 pc	
Flat spoon	1 pc	
Measuring cup	1 pc	
User Manual		
Warranty Certificate		
Recipe Book		
Packing (plastic bag + box)		

14. TECHNICAL SPECIFICATIONS

PMC 5001 IQ Home - multicooker electric household of Polaris trademark

Voltage: 220 - 240 V

Frequency: ~50 Hz

Power: 750 W

Total bowl capacity: 5 L

Volume of the bowl up to the upper mark - 3.5 L

IEEE 802.11b/g/n 2.4Ghz Wireless Wi-Fi Connection

Additionally, you can buy a Polaris PIP 0502K bowl which matches to a multicooker.

Note: Due to the ongoing process of making changes and improvements, there may be some differences between the Manual and the product. The manufacturer hopes that the user will pay attention to this. You can find the latest version of the User Manual at <https://iqpolaris.com/>.

The manufacturer has the right, without prior notice, to make changes to the design and configuration of the product which are the result of work to improve the design or production technology. If necessary, the buyer can contact the manufacturer or a person authorized by the manufacturer for an up-to-date version of the user manual.

15. CERTIFICATION INFORMATION

The device is certified for compliance with the requirements of the Technical Regulations and State Standards of Ukraine



Product life: 3 years

Warranty period: 2 years from the date of purchase

"The product includes components that are subject to normal wear and tear and/or have a limited lifetime and are scheduled for replacement at cost as their service life is used up. The Manufacturer offers a limited warranty on these components. In this product, such components include:

Multicooker bowl, the warranty period for the inner coating of the bowl is 6 months from the date of purchase"

The service life of the inner bowl, subject to the rules of operation, is 3 years

Date of manufacture is indicated on the appliance.

Manufacturer:

NINGBO HANSFORT OVERSEAS EISHA LIMITED,

No. 158 Dongshan Liu, Hushan Zhidao, Cixi, Zhejiang Province, PRC

NINGBO HANSFORT OVERSEAS ASIA LIMITED,

No. 158 Dongshan Lu, Hushan Jiedao, Cixi City, Zhejiang Province, PRC

Made in China.

Importer and authorized representative of the manufacturer in Ukraine:

TOV Renklod LTD

St. I.Franka, bldg. 18A, office 5. Kyiv, 01030, Ukraine, phone: +38(044)5996292

Telephone number of the single help desk: +38 (093) 472-11-00

Service center: Ukraine, 04060 Kyiv. St. Shchuseva, 44

phone: 0-800-50-30-15, (044) 537-48-45,

Viber (050) 537-48-45

e-mail: nashservice_kiev@foxtrot.ua

16. WARRANTY OBLIGATIONS

Product: Household electric multicooker

Model: PMC 5001 IQ Home

This warranty is valid for 24 months from the confirmed date of purchase of the product and implies warranty service of the product in accordance with the the current legislation of Ukraine.

1. The manufacturer's warranty covers all models produced under the POLARIS trademark and purchased from authorized sellers in the countries where the warranty service is provided (regardless of the place of purchase).
2. The product shall be purchased for personal household needs only. The product must be used in strict accordance with the User Manual in compliance with safety rules and requirements.
3. The manufacturer's obligations under this warranty shall be fulfilled by sellers - authorized manufacturer dealers and official service centres. This warranty does not apply to products purchased from sellers not authorized by the manufacturer, who independently answer the consumer in accordance with Russian law.
4. This warranty does not apply to defects and external changes of the product that occurred after the transfer of the goods to the consumer due to:
 - Chemical, mechanical or other effects, ingress of foreign objects, liquids, insects and their metabolic products into the product;
 - Improper operation including the use of the product not for its intended purpose as well as the installation and operation of the product in violation of the requirements of the User Manual and safety rules;
 - Normal operation, as well as natural wear and tear, not affecting the functional properties: mechanical damage to the external or internal surface (dents, scratches, scuffs), natural changes in the color of the metal, including the appearance of rainbow and dark spots, as well as - corrosion on the metal in places of damage to the coating and uncoated areas of the metal;
 - Deposits of calcareous sediment, lime scales and scum, due to the use of water with a high content of minerals;
 - Use of the product for purposes for which it is not intended;
 - Wear and tear of trim parts, lamps, batteries, shields, debris collectors, belts, brushes, and other limited life parts;
 - Repairs to the product made by persons or organizations other than Service Centers*;
 - Damage to the product during transportation, improper use, or due to modifications or repairs not intended by the product design.

5. The manufacturer shall not be liable under warranty if the product does not have a nameplate or if the data in the nameplate has been erased or corrected.
6. This warranty is valid only for the products used for personal household needs and does not apply to products that are used for commercial, industrial or professional purposes.

Attention!!! The manufacturer shall not be liable for possible damage caused directly or indirectly by the POLARIS product to people, pets, the environment, or damage to property, if this occurred as a result of non-compliance with the rules or conditions of use and installation of the product, intentional or negligent actions of the consumer or third parties.

For all questions related to maintenance, quality control, warranty and post-warranty repair of POLARIS products, contact the POLARIS service center or the seller - an authorized POLARIS dealer.

Warranty repair of POLARIS products is carried out only by POLARIS service centers.

*Addresses of service centers on the Company's website: <https://iqpolaris.com/>

In order to prove the date of purchase of the product in case of warranty repairs or other statutory claims, please keep the purchase documents.

Such documents may include a completed POLARIS warranty card, a cash receipt or receipt of the Seller, other documents confirming the date and place of purchase.

In case of failure to provide a document confirming the date of purchase of the product, the warranty period is calculated from the date of manufacture of the product.

The date of manufacture is shown on the identification plate on the back of the product.

