

A (x1)


B (x2)



C (x1)




D (x1)



E (x1)




F (x1)

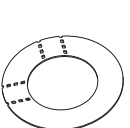

G (x1)



H (x1)



I (x2)



J (x3)
M6x16



K (x1)
4mm




L (x1)
6mm




 M-A (x4) M4x12	 M-B (x4) M4x16
 M-C (x4) M5x12	 M-D (x4) M5x16
 M-E (x4) D5	 M-F (x4) Ø15xØ8x5

x2


1

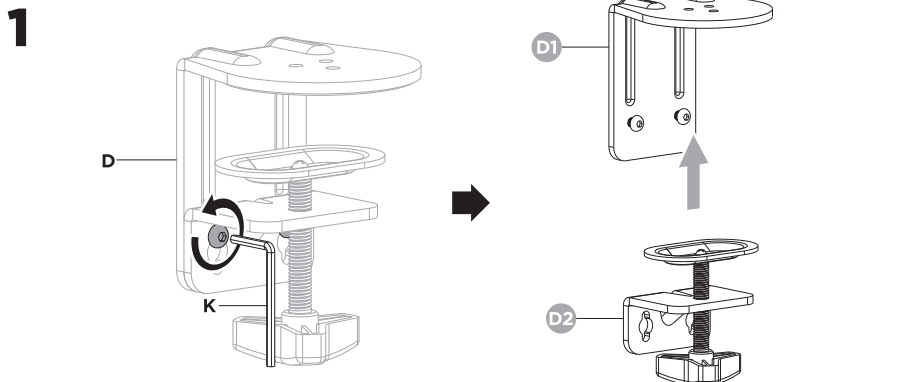

2 Clamp Mounting

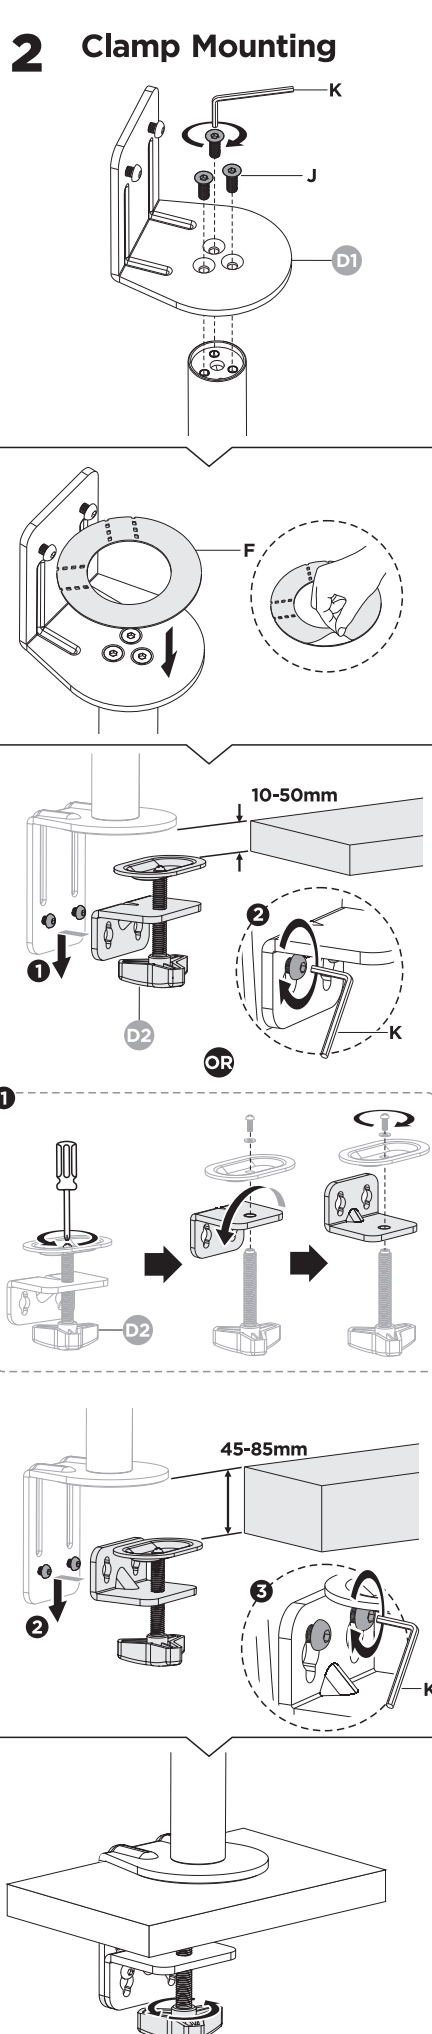

Grommet Mounting

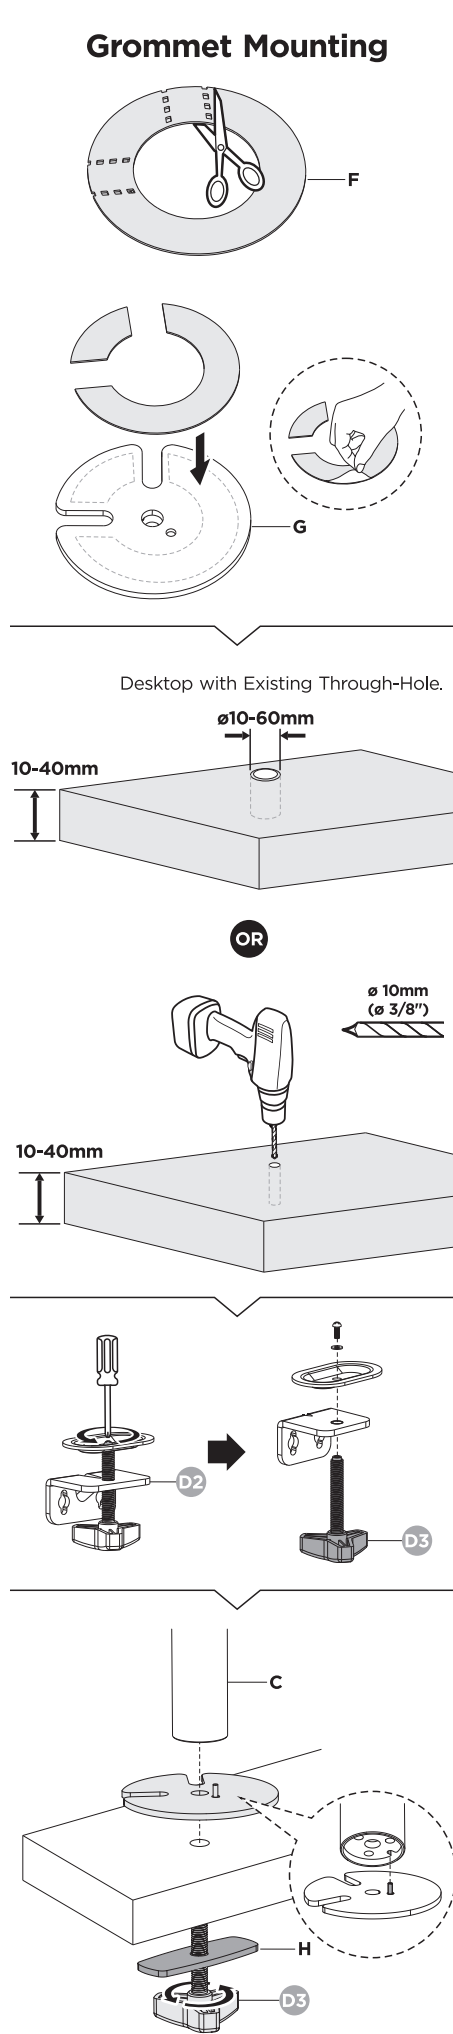


3


WARNING:

1. Firmly hold the two halves of the spring arm together and have another person cut Off the cable tie from around the spring arm.

2. Slowly release the pressure on the spring arm and allow it to gradually stretch to its full extension.

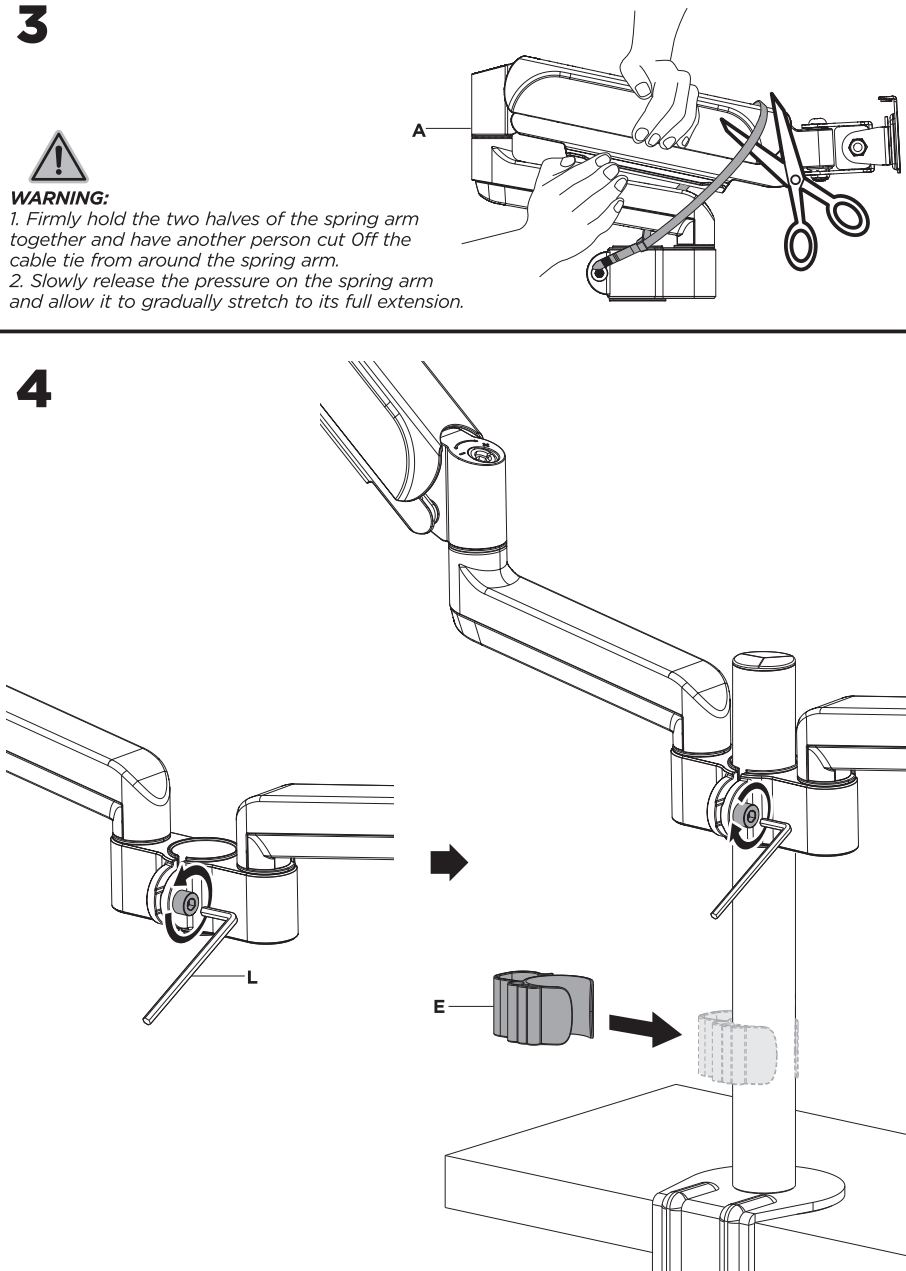

5

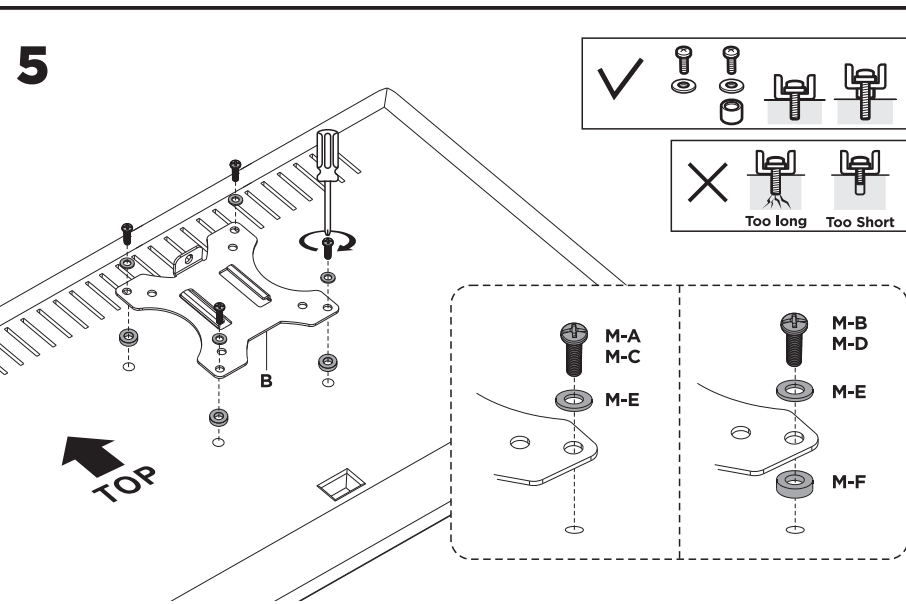

6

