

Dell 27 Plus 4K USB-C Monitor

S2725QC

User's Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.


Contents

Safety instructions	5
About your monitor	6
Package contents	6
Product features	7
Operating system compatibility	10
Identifying parts and controls	10
Front view	10
Side view	11
Back view	12
Bottom view	13
Monitor specifications	14
Dell Display and Peripheral Manager (DDPM) for Windows	15
Resolution specifications	15
Supported video modes	15
Preset display modes	16
Electrical specifications	17
Physical characteristics	18
Environmental characteristics	19
Pin assignments	20
HDMI port	20
Universal Serial Bus (USB) interface	21
Plug-and-play capability	22
LCD monitor quality and pixel policy	22
Ergonomics	23
Handling and moving your display	24
Maintenance guidelines	25
Cleaning your monitor	25
Setting up the monitor	26
Attaching the stand	26
Connecting your monitor	29
Connecting the USB-C and power cables	29
Connecting the HDMI and power cables (optional)	30
Routing the cables	30
Attaching the side I/O-cover	31
Organizing your cables	31
Turn on the monitor	32
Securing your monitor using Kensington lock (optional)	32
Removing the monitor stand	33
VESA wall mounting (optional)	34
Operating the monitor	35
Turn on the monitor	35
Using the joystick control	35
Using the On-Screen Display (OSD) menu	37
Accessing the Menu Launcher	37
Using the navigation keys	38
Accessing the menu system	38


OSD warning message	50
Locking the control buttons	53
Setting the maximum resolution	54
Requirements to view or playback HDR content	54
Using the tilt, swivel, pivot and height adjustment	55
Tilt and swivel adjustment	55
Height adjustment	55
Pivot adjustment	56
Adjusting the rotation display settings of your computer	57
Troubleshooting	58
Self-test	58
Built-in diagnostics	58
Common problems	59
Product-specific problems	61
Universal Serial Bus (USB) specific problems	62
Speakers-specific problems	62
Regulatory information	63
FCC notices (U.S. only) and other regulatory information	63
EU product database for energy label and product information sheet	63
Contacting Dell	64

Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your monitor.

 **NOTE:** Before using the monitor, read the safety information that is shipped with your monitor and printed on the product. Keep the documentation at a secure location for future reference.

 **WARNING:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

 **CAUTION:** The possible long-term effect of listening to audio at high volume through the headphones (on monitor that support it) may cause damage to your hearing ability.

- Place the monitor on a solid surface and handle it carefully.
 - The screen is fragile and can be damaged if dropped or hit with a sharp object.
 - Ensure that your monitor is electrically rated to operate with the AC power available in your location.
 - Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
 - Connect the power cable from the monitor to a wall outlet that is near and accessible. See [Connecting your monitor](#).
- Do not place and use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions that are marked on the product.
- Certain monitors can be wall mounted using the VESA mount that is sold separately. Ensure to use the correct VESA specifications as mentioned in the wall mounting section of the User's Guide.

For information about safety instructions, see the Safety, Environmental, and Regulatory Information (SERI) document that is shipped with your monitor.






About your monitor


Package contents

The following table provides the list of components that are shipped with your monitor. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

NOTE: Some items may be optional and may not ship with your monitor. Some features may not be available in certain countries.

Table 1. Monitor and accessories inside the box.

Component image	Component description
	Display
	VESA cover
	Stand riser
	Stand base
	Side I/O-cover
	Power cable (varies by country)
	USB-C to C 10Gbps 100 W cable (cable length: 1 m)

Component image	Component description
	<ul style="list-style-type: none"> QR Card Safety, Environmental, and Regulatory Information

Product features

The **Dell S2725QC** monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), and LED backlight. The monitor features include:

- 684.7 mm (27.0 in.) viewable area (measured diagonally). 3840 x 2160 (16:9) resolution, plus full-screen support for lower resolutions.
- Supports AMD FreeSync Premium Technology, with a refresh rate of 120 Hz and a rapid response time of 4 ms gray to gray in **Extreme** mode*.

*The 4 ms gray-to-gray mode is achievable in **Extreme** mode to reduce visible motion blur and increase image responsiveness. However, this may introduce some slight and noticeable visual artifacts into the image. As every system setup and every user's needs are different, we recommend that users experiment with the different modes to find the setting that is right for them.

- A wide viewing angle to allow viewing from a sitting or standing position.
- Color gamut of 99% sRGB.
- Digital connectivity with one USB-C and two HDMI ports.
- Use a USB-C cable to provide power (up to 65 W) to a compatible notebook while receiving video and data signal.
- Tilt, swivel, pivot, and height adjustment capabilities.
- The ultra-thin bezel reduces the gap between monitors in multi-screen setups, making installation simpler and providing a sleek, seamless viewing experience.
- Removable stand and Video Electronics Standards Association (VESA) 100 mm mounting holes for flexible mounting solutions.
- Equipped with:
 - One USB-C 5Gbps upstream port (DisplayPort 1.4 Alternate Mode, Power Delivery up to 65 W)
 - One USB 5GbpsType-A downstream port with Battery Charging 1.2
 - One USB-C 5Gbps downstream port (Power Delivery up to 15 W)
 - One USB 5GbpsType-A downstream port
- Plug-and-play capability if supported by your computer.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Power button and OSD menu lock.
- Security-lock slot for Kensington locks (sold separately).
- Stand lock.
- ≤ 0.5 W in Standby Mode.
- Integrated speakers (2 x 5 W).
- Dell ComfortView Plus is an integrated low blue light screen feature that improves eye comfort by reducing potentially harmful blue light emissions without compromising color. Through ComfortView Plus technology, Dell has reduced harmful blue light exposure from <50% to <35%. This monitor is certified with TÜV Rheinland Eye Comfort 3.0 with a 4-star rating. It incorporates key technologies that also deliver a flicker-free screen, up to 120 Hz refresh rate, a color gamut of minimum 99% sRGB. Dell ComfortView Plus feature is enabled by default on your monitor.
- This monitor uses a low blue light panel. When the monitor is reset to factory settings or default setting, it is in compliance with TÜV Rheinland's hardware low blue light certification.

Blue light ratio:

The ratio of light in the range from 415 nm-455 nm compared to 400 nm-500 nm should be less than 50%.

Table 2. Blue light ratio.

Category	Blue light ratio
1	≤ 20%
2	20% < R ≤ 35%
3	35% < R ≤ 50%

- Decreases the level of hazard blue light that is emitted from the screen to make viewing more comfortable for your eyes without distortion of color accuracy.
- The monitor adopts Flicker-Free technology, which clears the eye visible flicker, brings comfort viewing experience and preventing users suffer from eye strain and fatigue.
- This monitor is in compliance with TÜV Rheinland hardware low blue light certification under Category 2.

About TÜV Rheinland Eye Comfort 3.0

- TÜV Rheinland Eye Comfort 3.0 certification program presents a consumer-friendly star rating scheme to the display industry promoting eye wellness from safety to eye care. Compared to existing certifications, the 5-star-rating program adds rigorous testing requirements on overall eye care attributes such as low blue-light, flicker-free, refresh rate, color gamut, color accuracy and ambient light sensor performance. It lays out requirement metrics and rates the product performance on five levels, and the sophisticated technical assessment process provides consumers and buyers with indicators that are easier to judge.
- The eye wellness factors being considered remain constant, however, the standards for the various star ratings are different. The higher the star rating, the more stringent the standards. The table below lists the major eye comfort requirements which apply in addition to the basic eye comfort requirements (such as pixel density, uniformity of luminance and color, and freedom of movement).
- For more information around **TÜV Eye Comfort certification** please refer to: <https://www.tuv.com/world/en/eye-comfort.html>



Table 3. Eye Comfort 3.0 requirements and star rating scheme for monitors.

Eye Comfort 3.0 Requirements and Star Rating Scheme for Monitors				
Category	Test item	Star Rating Scheme		
		3-star	4-star	5-star
Eye Care	Low Blue Light	TÜV Hardware LBL Category III ($\leq 50\%$) or Software LBL solution ¹	TÜV Hardware LBL Category II ($\leq 35\%$) or Category I ($\leq 20\%$)	TÜV Hardware LBL Category II ($\leq 35\%$) or Category I ($\leq 20\%$)
	Flicker Free	TÜV Flicker Reduced or TÜV Flicker Free	TÜV Flicker Reduced or TÜV Flicker Free	Flicker Free
Ambient Light Management	Ambient Light Sensor performance	No sensor	No sensor	Ambient light sensor
	Intelligent CCT control	No	No	Yes
	Intelligent Luminance control	No	No	Yes
Image quality	Refresh Rate	≥ 60 Hz	≥ 75 Hz	≥ 120 Hz
	Luminance uniformity	Luminance uniformity $\geq 75\%$		
	Color Uniformity	Color uniformity $\Delta u'v' \leq 0.02$		
	Freedom of movement	Luminance changes shall decrease less than 50%; The color shift shall be less than 0.01.		
	Gamma difference	Gamma difference $\leq \pm 0.2$	Gamma difference $\leq \pm 0.2$	Gamma difference $\leq \pm 0.2$
	Wide color gamut ²	NTSC ³ Min.72% (CIE 1931) or sRGB ⁴ Min.95% (CIE 1931)	sRGB ⁴ Min.95% (CIE 1931)	DCI-P3 ⁵ Min.95% (CIE 1976) & sRGB ⁴ Min.95% (CIE 1931) or Adobe RGB ⁶ Min.95% (CIE 1931) & sRGB ⁴ Min.95% (CIE 1931)
Eye Comfort User Guide	User guide	Yes	Yes	Yes
Remark	¹ Software controls the blue light emission by reducing excessive blue light, resulting in a more yellow tone. ² Color gamut describes the availability of colors in the display. Various standards were developed for specific purposes. 100% corresponds to the full color space as defined in the standard. ³ NTSC stands for National Television Standards Committee, which developed a color space for the television system that is used in the United States. ⁴ sRGB is a standard red, green, and blue color space that is in use on monitors, printers, and the World Wide Web. ⁵ DCI-P3, short for Digital Cinema Initiatives - Protocol 3, is a color space used in digital cinema that encompasses a wider range of colors than the standard RGB color space. ⁶ Adobe RGB is a color space created by Adobe Systems that encompasses a broader range of colors than the standard RGB color model, particularly in the cyans and greens.			

Operating system compatibility

- Windows 10 and later*.
- macOS 12* and macOS 13*.

*The operating system compatibility on Dell and Alienware branded monitors may vary based on factors such as:

- Specific release dates when operating system versions, patches, or updates are available.
- Specific release dates when Dell and Alienware branded monitor firmware, software application, or driver updates are available on the Dell support website.

Identifying parts and controls

Front view

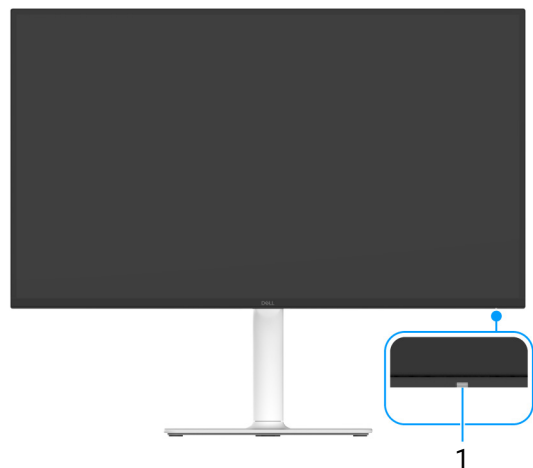


Figure 1. Front view with the monitor stand

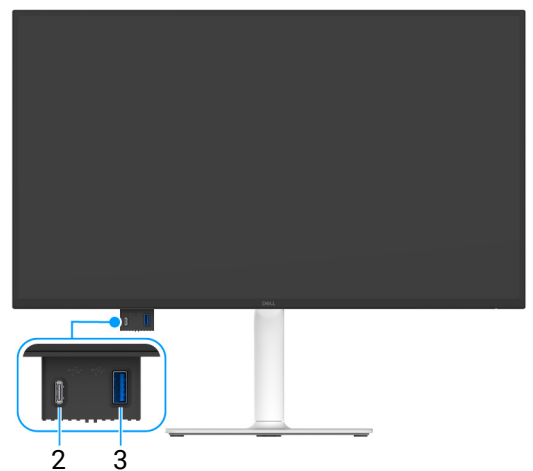





Figure 2. Front view of the monitor

Table 4. Components and descriptions.

Label	Description	Use
1	Power LED indicator	Solid white light indicates that the monitor is turned on and functioning normally. Blinking white light indicates that the monitor is in Standby Mode.
2	 Quick access port: USB-C 5Gbps downstream port (Power Delivery up to 15 W)	Connect your USB device* or charge your device. NOTE: To use this port, you must connect the USB-C cable that came with your monitor to the USB-C upstream port on the monitor and to your computer.

Label	Description	Use
3	 Quick access port: USB 5Gbps Type-A downstream port with Battery Charging 1.2	Connect your USB device* or charge your device.  NOTE: To use this port, you must connect the USB-C cable that came with your monitor to the USB-C upstream port on the monitor and to your computer.

*To avoid signal interference, when a wireless USB device has been connected to a USB downstream port, it is NOT recommended to connect any other USB devices to the adjacent port(s).

Side view



Figure 3. Side view

Back view

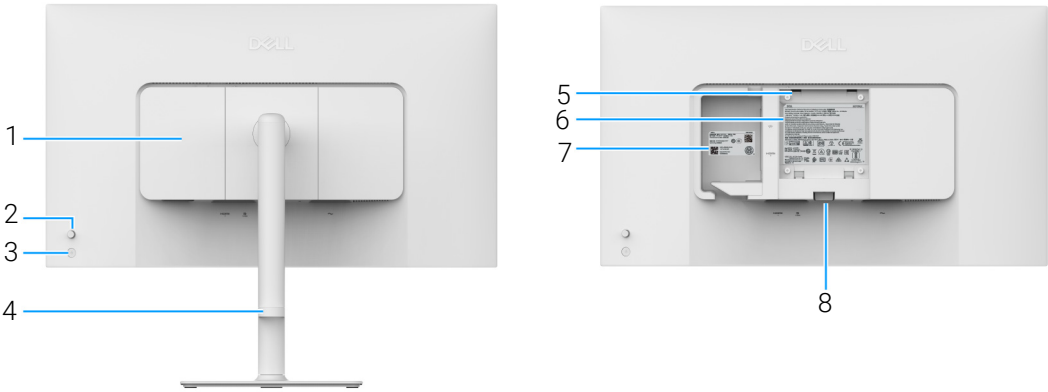


Figure 4. Back view

Table 5. Components and descriptions.

Label	Description	Use
1	Side I/O-cover	Use to cover side I/O.
2	Joystick	Use to control the OSD menu. (For more information, see Operating the monitor.)
3	Power button	To turn the monitor on or off.
4	Cable management guide	Use to organize the cables by routing them through the guide.
5	VESA mounting holes (100 mm x 100 mm - behind the VESA cover)	Wall-mount the monitor using VESA-compatible wall mount kit (100 mm x 100 mm). NOTE: Wall-mount kit is not shipped with your monitor and is sold separately.
6	Regulatory label	Lists the regulatory approvals.
7	MyDell QR code, serial number, and Service Tag label	Refer to this label if you must contact Dell for technical support. The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your monitor and access warranty information.
8	Stand-release button	Releases the stand from the monitor.

Bottom view

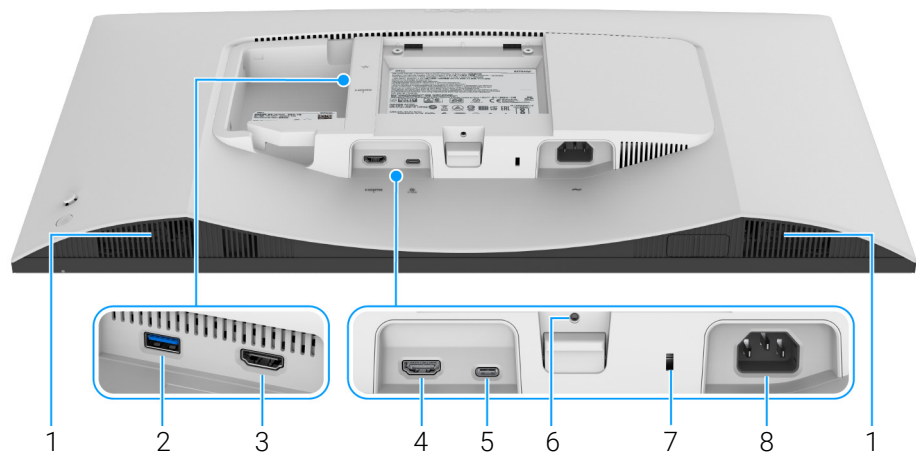







Figure 5. Bottom view without monitor stand

Table 6. Components and descriptions.

Label	Description	Use
1	Speakers	Provides audio output.
2	 USB 5Gbps Type-A downstream port	Connect your USB device. NOTE: To use this port, you must connect the USB-C cable that came with your monitor to the USB-C upstream port on the monitor and to your computer.
3	 HDMI port (HDMI 2)	Connect your computer with the HDMI cable (sold separately).
4	 HDMI port (HDMI 1)	Connect your computer with the HDMI cable (sold separately).
5	 USB-C 5Gbps upstream port (DisplayPort 1.4 Alternate Mode, Power Delivery up to 65 W)	Connect the USB-C to C 10Gbps 100W cable that came with your monitor to the computer. This port supports USB Power Delivery, Data, and DisplayPort video signal. This port supports DisplayPort 1.4 Alternate Mode with a maximum resolution of 3840 x 2160 at 120 Hz, PD 20 V/3.25 A, 15 V/3 A, 9 V/3 A, 5 V/3 A. Once this cable is connected, you can use the USB connectors on the monitor. NOTE: USB-C is not supported on versions of Windows prior to Windows 10.
6	Stand-lock feature	To lock the stand to the monitor using a M3 x 6 mm screw (screw not included).
7	Security-lock slot (based on Kensington Security Slot)	Secures the monitor with a security lock (purchased separately) to prevent unauthorized movement of your monitor.
8	 Power port	Connect the power cable (shipped with your monitor).

Monitor specifications

Table 7. Monitor specifications.

Description	Value
Screen type	Active matrix - TFT LCD
Panel technology	In-Plane Switching (IPS) Technology
Aspect ratio	16:9
Viewable image dimensions	
Diagonal	684.7 mm (27.0 in.)
Active area	
Horizontal	596.74 mm (23.49 in.)
Vertical	335.66 mm (13.22 in.)
Area	200302.79 mm ² (310.47 in. ²)
Pixel pitch	
Horizontal	0.1554 mm
Vertical	0.1554 mm
Pixel per inch (PPI)	163
Viewing angle	
Horizontal	178° (typical)
Vertical	178° (typical)
Brightness	350 cd/m ² (typical)
Contrast ratio	1500:1 (typical)
Display screen coating	Anti-glare with hard-coating 3H
Backlight	LED Edgelight System
Response time	
Normal mode	8 ms gray to gray
Fast mode	5 ms gray to gray
Extreme mode	4 ms gray to gray* *The 4 ms gray-to-gray mode is achievable in Extreme mode to reduce visible motion blur and increase image responsiveness. However this may introduce some slight and noticeable visual artifacts into the image. As every system setup and every user's needs are different, we recommend that users experiment with the different modes to find the setting that is right for them.
Color depth	1.07 billion colors
Color gamut	sRGB 99% (CIE 1931) (typical)
Connectivity	Bottom <ul style="list-style-type: none"> 1 USB-C 5Gbps upstream port (DisplayPort 1.4 Alternate Mode, Power Delivery up to 65 W) 2 HDMI 2.1 ports (HDCP 1.4 & 2.3) (Supports up to UHD 3840 x 2160, 120 Hz, FRL, HDR, VRR as per specified in HDMI 2.1) 1 USB 5Gbps Type-A downstream port Quick Access Port <ul style="list-style-type: none"> 1 USB 5Gbps Type-A downstream port with Battery Charging 1.2 1 USB-C 5Gbps downstream port (Power Delivery up to 15 W)
Border width (edge of monitor to active area)	
Top	7.30 mm (0.29 in.)
Left/Right	7.40 mm (0.29 in.)
Bottom	13.02 mm (0.51 in.)

Description	Value
Adjustability	
Height adjustment up to	130 mm
Tilt	-5° to 21°
Swivel	-30° to 30°
Pivot	-90° to 90°
Integrated speakers	2 integrated 5 W speakers
Cable management	Yes
Dell Display and Peripheral Manager compatibility	Easy Arrange and other key features
Security	Security-lock slot (for Kensington locks, sold separately)

*USB-C (Alternate mode with DisplayPort 1.4): HBR3/DisplayPort 1.4/ DP audio is supported.

Dell Display and Peripheral Manager (DDPM) for Windows

DDPM is a software application that helps you set up and configure the Dell monitors and peripherals. Some of its features include:

1. Adjusting the monitor On-Screen Display (OSD) settings such as brightness, contrast, and resolution without needing to use the joystick on the monitor.
2. Arrange multiple applications on your screen by placing them into a template of your choice using **Easy Arrange**.
3. Assign applications or files to the partitions of **Easy Arrange**, save the layout as a profile, and restore the profile automatically with **Easy Arrange Memory** when needed.
4. Connect the Dell Monitor to multiple input sources and manage these video inputs using the **Input Source** feature.
5. Customize each application with its own distinct color mode using the **Color Preset** feature.
6. Replicate software application settings from one monitor to another identical monitor using the **Import/Export** application settings feature.
7. Receive notifications and update the firmware and software.
8. If the display supports the Keyboard Video Mouse (KVM) feature, you can set up and share the keyboard and mouse across connected computers using the **USB KVM** option.
9. Also, if the display supports the **Network KVM** feature, then you can share the keyboard and mouse across computers on the same network and transfer files between them.
10. For displays with integrated webcams, this software provides features to customize the webcam settings.
11. A macOS version of DDPM software is also available for your monitor. For the list of displays that support DDPM macOS version, see the knowledge base article 000201067 at <https://www.dell.com/support>.

① **NOTE:** Some features of the DDPM mentioned above are available only on select monitor models. For more information about DDPM, and the recommended computer configuration to install it, go to <https://www.dell.com/support/ddpm>.

Resolution specifications

Table 8. Resolution specifications.

Description	Value
Horizontal scan range	27 kHz to 270 kHz (automatic)
Vertical scan range	48 Hz to 120 Hz (automatic)
Maximum preset resolution	3840 x 2160 up to 120 Hz

Supported video modes

Table 9. Supported video modes.

Description	Value
Video display capabilities (HDMI)	480p, 576p, 720p, 1080p, 1080i, 2160p
Video display capabilities (USB-C alternate mode)	480p, 576p, 720p, 1080p, 2160p

Preset display modes

HDMI display modes

Table 10. HDMI display modes.

Display mode	Horizontal frequency (kHz)	Vertical frequency (Hz)	Pixel clock (MHz)	Sync polarity (Horizontal/Vertical)
640 x 480	31.47	59.94	25.18	-/-
640 x 480	37.50	75	31.50	-/-
720 x 400	31.47	70.08	28.32	-/+
800 x 600	37.88	60.32	40	+/+
800 x 600	46.88	75	49.50	+/+
1024 x 768	48.36	60	65	-/-
1024 x 768	60.02	75.03	78.75	+/+
1152 x 864	67.50	75	108	+/+
1280 x 1024	63.98	60.02	108	+/+
1280 x 1024	79.98	75.03	135	+/+
1600 x 900	60	60	108	+/+
1600 x 1200	75	60	162	+/+
1920 x 1080	67.50	60	148.50	+/+
1920 x 1080	137.26	119.98	285.50	+/-
2048 x 1280	78.92	59.92	174.25	+/-
2560 x 1440	88.79	59.95	241.50	+/-
2560 x 1440	183	120	497.75	+/-
3840 x 2160	135	60	594	+/+
3840 x 2160	270	120	1188	+/+

DisplayPort display modes

Table 11. DisplayPort display modes.

Display mode	Horizontal frequency (kHz)	Vertical frequency (Hz)	Pixel clock (MHz)	Sync polarity (Horizontal/Vertical)
640 x 480	31.47	59.94	25.18	-/-
640 x 480	37.50	75	31.50	-/-
720 x 400	31.47	70.08	28.32	-/+
800 x 600	37.88	60.32	40	+/+
800 x 600	46.88	75	49.50	+/+
1024 x 768	48.36	60	65	-/-
1024 x 768	60.02	75.03	78.75	+/+
1152 x 864	67.50	75	108	+/+
1280 x 1024	63.98	60.02	108	+/+
1280 x 1024	79.98	75.03	135	+/+
1600 x 900	60	60	108	+/+
1600 x 1200	75	60	162	+/+
1920 x 1080	67.50	60	148.50	+/+
1920 x 1080	137.26	119.98	285.50	+/-
2048 x 1280	78.92	59.92	174.25	+/-
2560 x 1440	88.79	59.95	241.50	+/-
2560 x 1440	183	120	497.75	+/-

Display mode	Horizontal frequency (kHz)	Vertical frequency (Hz)	Pixel clock (MHz)	Sync polarity (Horizontal/Vertical)
3840 x 2160	133.31	60	533.25	+/-
3840 x 2160	270	120	1188	+/+

NOTE: This monitor supports AMD FreeSync Premium Technology.

Electrical specifications

Table 12. Electrical specifications.

Description	Value
Video input signals	<ul style="list-style-type: none"> HDMI 2.0, 600 mV for each differential line, 100 Ω input impedance per differential pair USB-C (Alternate mode with DisplayPort 1.4), 90 Ω input impedance per differential pair
AC input voltage/frequency/current	100 VAC to 240 VAC/50 Hz or 60 Hz \pm 3 Hz/2.3 A (typical)
Inrush current	<ul style="list-style-type: none"> 120 V: 40 A (maximum) at 0°C (cold start) 240 V: 80 A (maximum) at 0°C (cold start)
Power consumption	<ul style="list-style-type: none"> 0.3 W (Off mode)¹ 0.4 W (Standby mode)¹ 25.2 W (On mode)¹ 180 W (Max.)² 21.0 W (P_{on})³ 65.5 kWh (TEC)³

¹ As defined in EU 2019/2021 and EU 2019/2013.

² Maximum brightness and contrast setting with maximum power loading on all USB ports.

³ P_{on} : Power consumption of On mode as defined in Energy Star 8.0 version.

TEC: Total energy consumption in kWh as defined in Energy Star 8.0 version.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components, and peripherals you ordered and you shall have no obligation to update such information.

Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.

NOTE: This monitor is ENERGY STAR certified. This product qualifies for ENERGY STAR in the factory default settings which can be restored by "Factory Reset" function in the OSD menu. Changing the factory default settings or enabling other features may increase power consumption that could exceed the ENERGY STAR specified limit.



Physical characteristics

Table 13. Physical characteristics.

Description	Value
Signal cable type	<ul style="list-style-type: none"> Digital: HDMI, 19 pins (cable not included) Digital: USB-C to C, 24 pins
<p>NOTE: Dell monitors are designed to work optimally with the video cables that are shipped with your monitor. As Dell does not have control over the different cable suppliers in the market, the type of material, connector, and process that is to manufacture these cables, Dell does not guarantee video performance on cables that are not shipped with your Dell monitor.</p>	
Dimensions (with stand)	
Height (extended)	518.63 mm (20.42 in.)
Height (compressed)	388.63 mm (15.30 in.)
Width	611.54 mm (24.08 in.)
Depth	200.40 mm (7.89 in.)
Dimensions (without stand)	
Height	355.98 mm (14.02 in.)
Width	611.54 mm (24.08 in.)
Depth	60 mm (2.36 in.)
Stand dimensions	
Height (extended)	411.80 mm (16.21 in.)
Height (compressed)	371.24 mm (14.62 in.)
Width	248 mm (9.76 in.)
Depth	200.40 mm (7.89 in.)
Base	248 mm (9.76 in.) x 181.93 mm (7.16 in.)
Weight	
Weight with packaging	8.90 kg (19.62 lb)
Weight with stand assembly and cables	6.71 kg (14.79 lb)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	4.85 kg (10.69 lb)
Weight of stand assembly	1.65 kg (3.64 lb)

Environmental characteristics

Table 14. Environmental characteristics.

Description	Value
Compliant standards	
<ul style="list-style-type: none">ENERGY STAR certified monitorRoHS-compliantBFR/PVC reduced monitor (Its circuit boards are made from BFR/PVC-free laminates.)Arsenic-free glass and Mercury-free for the panel only	
Temperature	
Operating	0°C to 40°C (32°F to 104°F)
Non-operating	<ul style="list-style-type: none">Storage: -20°C to 60°C (-4°F to 140°F)Shipping: -20°C to 60°C (-4°F to 140°F)
Humidity	
Operating	10% to 80% (non-condensing)
Non-operating	<ul style="list-style-type: none">Storage: 5% to 90% (non-condensing)Shipping: 5% to 90% (non-condensing)
Altitude	
Operating	5,000 m (16,404 ft) (maximum)
Non-operating	12,192 m (40,000 ft) (maximum)
Thermal dissipation	<ul style="list-style-type: none">614.6 BTU/Hour (maximum)86.0 BTU/Hour (On mode)

Pin assignments

HDMI port

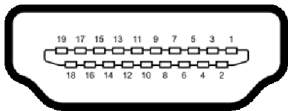


Figure 6. HDMI port

Table 15. HDMI pins and assignments.

Pin number	19-pin side of the connected signal cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5 V POWER
19	HOT PLUG DETECT

Universal Serial Bus (USB) interface

This section gives you information about the USB ports that are available on the monitor.

USB 5Gbps Type-A

Table 16. USB Type-A specifications.

Transfer speed	Data rate	Maximum power supported*
SuperSpeed	5 Gbps	4.50 W
High speed	480 Mbps	4.50 W
Full speed	12 Mbps	4.50 W

NOTE: This monitor is USB 5Gbps compatible.

USB-C 5Gbps upstream port

Table 17. USB-C specifications.

USB-C	Description
Video	DisplayPort 1.4**
Data	USB 5Gbps
Power Delivery (PD)	Up to 65 W

*Up to 2 A on USB downstream port (Quick Access Port) with BC1.2 compliance devices or normal USB devices.

**HBR3/DisplayPort 1.4/DP audio is supported.

USB Type-A downstream connector



Figure 7. USB Type-A connector

Table 18. USB Type-A pins and assignments.

Pin number	Signal name	Pin number	Signal name
1	VBUS	6	StdA_SSRX+
2	D-	7	GND_DRAIN
3	D+	8	StdA_SSTX-
4	GND	9	StdA_SSTX+
5	StdA_SSRX-	Shell	Shield

USB-C port

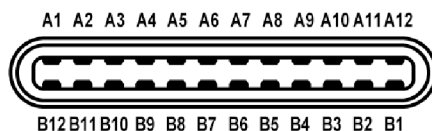


Figure 8. USB-C port

Table 19. USB-C pins and assignments.

Pin number	Signal name	Pin number	Signal name
A1	GND	B1	GND
A2	TX1+	B2	TX2+
A3	TX1-	B3	TX2-
A4	VBUS	B4	VBUS
A5	CC1	B5	CC2
A6	D+	B6	D+
A7	D-	B7	D-
A8	SBU1	B8	SBU2
A9	VBUS	B9	VBUS
A10	RX2-	B10	RX1-
A11	RX2+	B11	RX1+
A12	GND	B12	GND

USB ports

- 1 USB-C 5Gbps upstream port - bottom (1)
- 1 USB-C 5Gbps downstream port - Quick Access Port (1)
- 2 USB 5Gbps Type-A downstream port - bottom (1) and Quick Access Port (1)

NOTE: USB 5Gbps functionality requires a USB 5Gbps-capable computer.

NOTE: The USB ports on the monitor work only when the monitor is turned On or in Standby mode. If you turn Off the monitor and then turn it On, the attached peripherals may take a few seconds to resume normal functionality.

Plug-and-play capability

You can connect the monitor to any Plug and Play-compatible system. The monitor automatically provides the computer with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so that the computer can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings as required. For more information about changing the monitor settings, see [Operating the monitor](#).

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information about Dell Monitor Quality and Pixel Policy, see www.dell.com/pixelguidelines.

Ergonomics

⚠ **CAUTION:** Improper or prolonged usage of a keyboard may result in injury.

⚠ **CAUTION:** Viewing the monitor screen for extended periods of time may result in eye strain.

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- To reduce the risk of eye strain and neck, arm, back, or shoulder pain from using the monitor for a long period, we recommend you to:
 1. Set the distance of the screen between 20 to 28 in. (50 - 70 cm) from your eyes.
 2. Blink frequently to moisten your eyes or wet your eyes with water after prolonged usage of the monitor.
 3. Take regular and frequent breaks for 20 minutes every two hours.
 4. Look away from your monitor and gaze at a distant object that is 20 feet away for at least 20 seconds during the breaks.
 5. Perform stretches to relieve tension in the neck, arm, back, and shoulders during the breaks.
- Ensure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- Adjust the tilt of the monitor, its contrast, and brightness settings.
- Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- Use a chair that provides good lower-back support.
- Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- Ensure that your feet are resting flat on the floor.
- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary, to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.
- Keep the area under your desk clear of obstructions and cables or power cords that may interfere with comfortable seating or present a potential trip hazard.

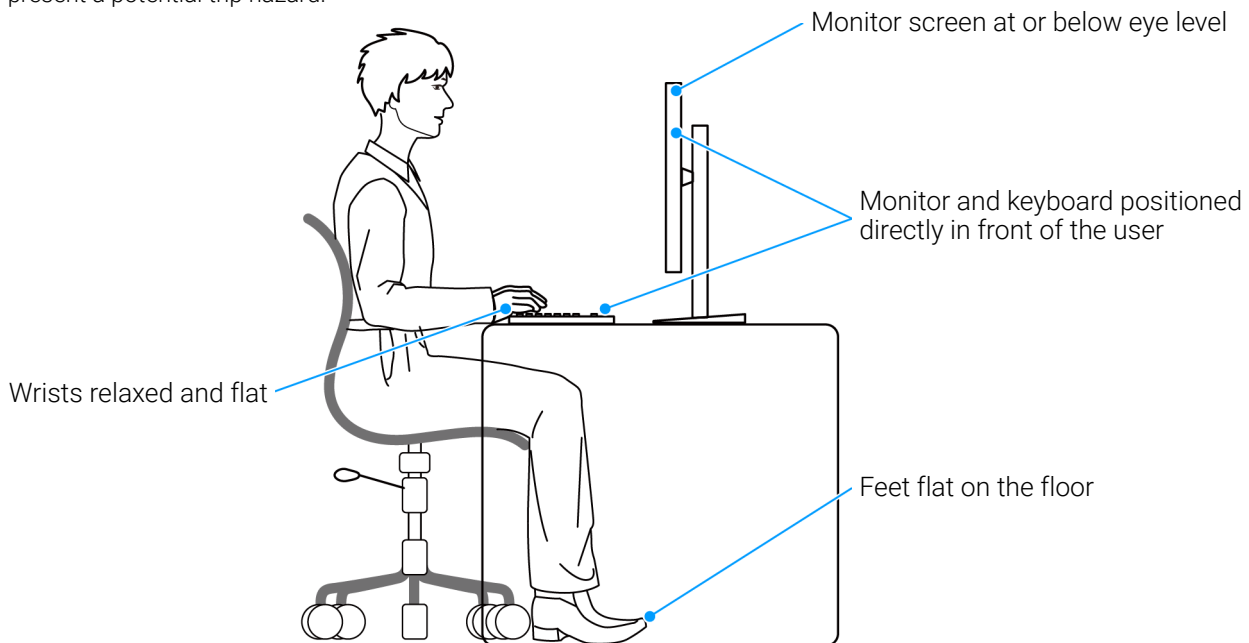


Figure 9. Proper sitting posture while using the monitor

Handling and moving your display

To ensure that the monitor is handled safely when lifting or moving it, follow these guidelines:

- Before moving or lifting the monitor, turn off your computer and the monitor.
- Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

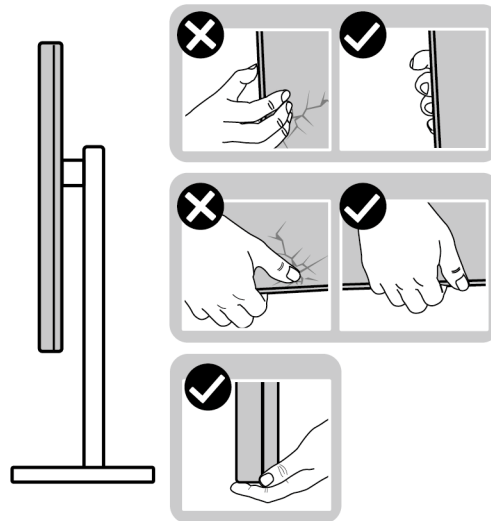


Figure 10. Proper ways of handling and moving the monitor

- When lifting or moving the monitor, ensure the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

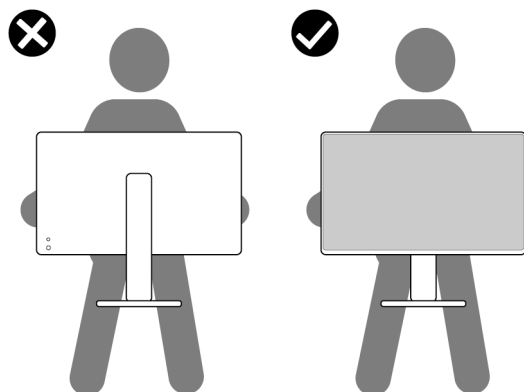


Figure 11. Proper way of lifting the monitor

- When transporting the monitor, avoid any sudden shock or vibration to it.
- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.

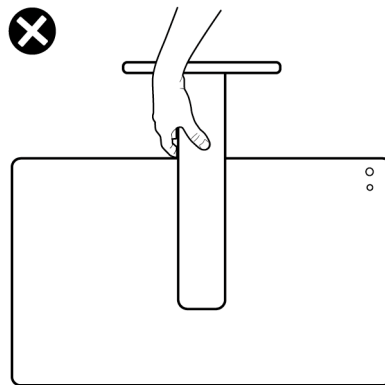


Figure 12. Incorrect way of lifting or moving the monitor

Maintenance guidelines

Cleaning your monitor

CAUTION: Read and follow the [Safety instructions](#) before cleaning the monitor.

WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below when unpacking, cleaning, or handling your monitor:

- Use a clean cloth that is slightly dampened with water to clean the stand assembly, the screen, and the chassis of your Dell monitor. If available, use a screen-cleaning tissue or solution suitable for cleaning Dell monitors.
- After cleaning the surface of the table, ensure that it is thoroughly dry and free from any moisture or cleaning agent before placing your Dell monitor on it.
- △ **CAUTION:** Do not use detergents or other chemicals such as benzene, thinner, ammonia, abrasive cleaners, alcohol, or compressed air.
- △ **CAUTION:** Using chemicals for cleaning may cause changes in the appearance of the monitor, such as color fading, milky film on the monitor, deformation, uneven dark shade, and peeling of screen area.
- △ **WARNING:** Do not spray the cleaning solution or even water directly on the surface of the monitor. Doing so will allow liquids to accumulate at the bottom of the display panel and corrode the electronics resulting in permanent damage. Instead, apply the cleaning solution or water to a soft cloth and then clean the monitor.
- ℹ **NOTE:** Monitor damage due to improper cleaning methods and the use of benzene, thinner, ammonia, abrasive cleaners, alcohol, compressed air, detergent of any kind will lead to a Customer Induced Damage (CID). CID is not covered under the standard Dell warranty.
- If you notice white residual powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.

Setting up the monitor

Attaching the stand

① **NOTE:** The stand assembly is not pre-installed when the monitor is shipped from the factory.

① **NOTE:** The following instructions are applicable only for the stand that was shipped with your monitor. If you are attaching a stand that you purchased from any other source, follow the setup instructions that were included with the stand.

To attach the monitor stand:

1. Remove the VESA cover, the side I/O-cover, the stand riser, and the stand base from the cushion.

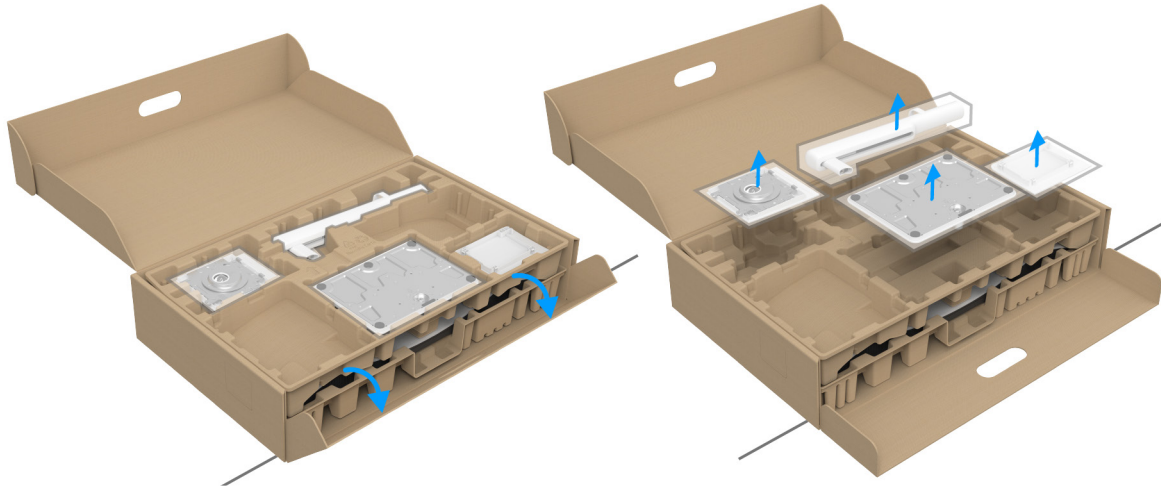


Figure 13. Removing the stand parts from the box

① **NOTE:** The image is for the purpose of illustration only. The appearance of the package cushion may vary.

2. Align and place the stand base onto the stand riser.
3. Open the screw handle at the bottom of the stand base and turn it clockwise to secure the stand assembly.
4. Close the screw handle.

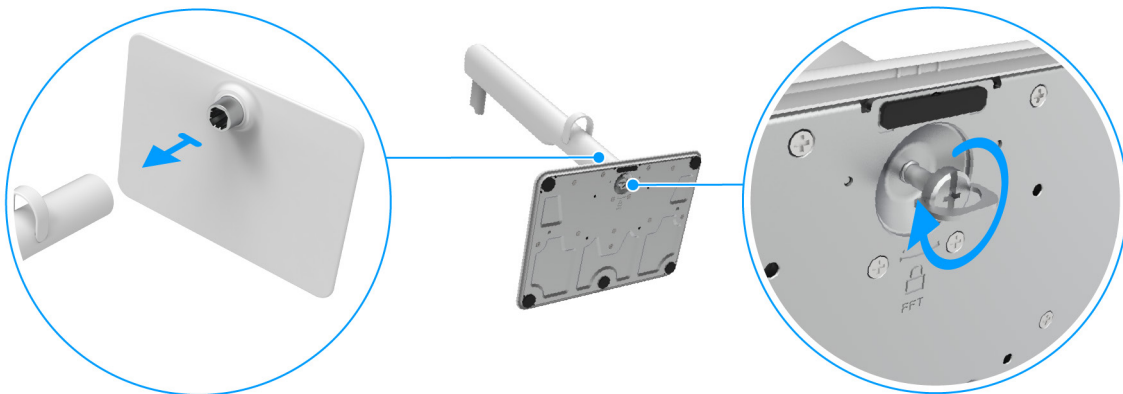


Figure 14. Connecting the stand base with the stand riser

5. Align and place the VESA cover to the stand riser.
6. Check that the VESA plate is tilted up to flush with the thumbscrew for ease of tightening.

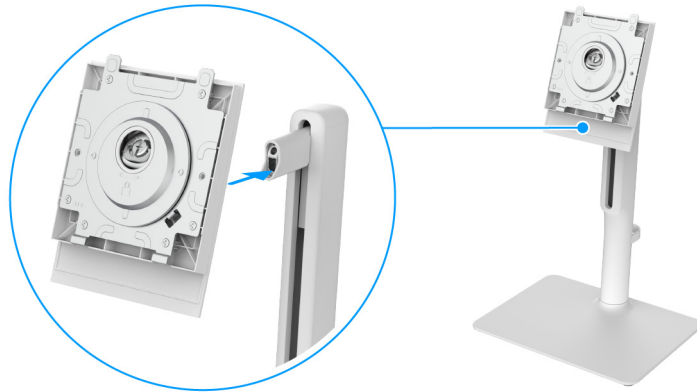


Figure 15. Aligning the VESA cover to the stand riser

7. Open the screw handle at the front of the VESA cover and turn it clockwise to secure the hinge assembly.
8. Close the screw handle.

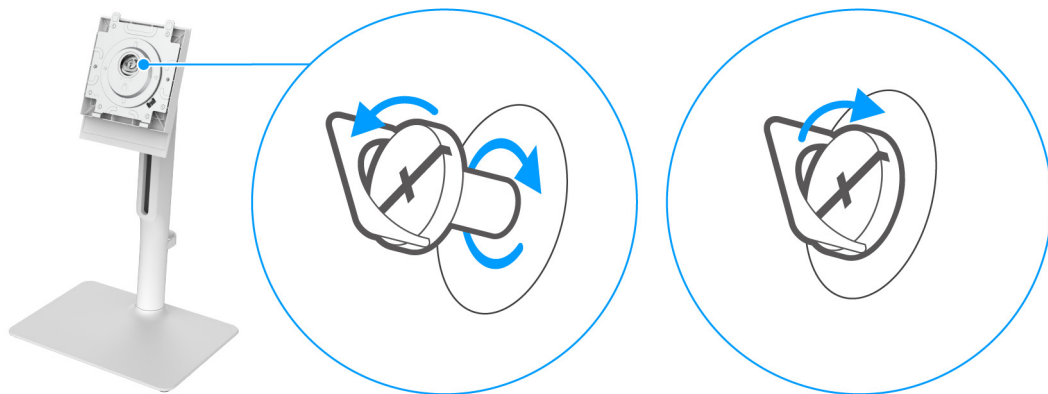


Figure 16. Tightening the screw to secure the hinge assembly

9. Open the protective cover on the monitor to access the VESA slot on the display back cover.

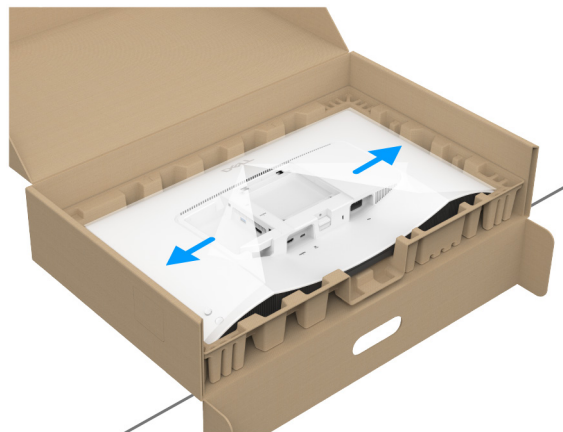


Figure 17. Opening the protective cover

NOTE: Before attaching the stand assembly to the display, ensure that the front plate flap is opened to allow space for assembly.

10. Carefully insert the tabs on the stand riser into the slots on the display back cover and press down the stand assembly to snap it into place.

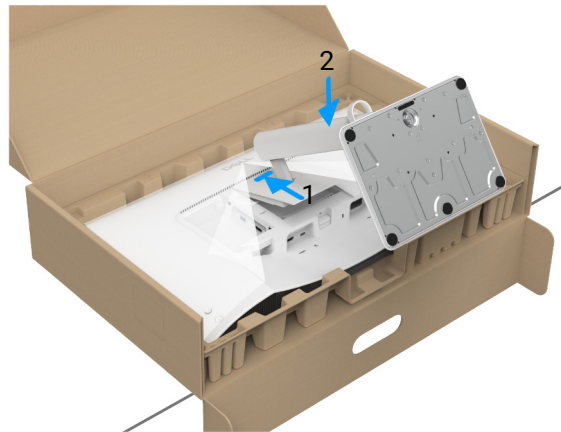


Figure 18. Attaching the stand assembly to the monitor

11. Hold the stand riser with both hands firmly and lift the monitor. Then place the monitor in an upright position on a flat surface.



Figure 19. Removing the monitor from the packaging box

- ① **NOTE:** Hold the stand riser firmly when lifting the monitor to avoid any accidental damage.

12. Lift the protective cover from the monitor.

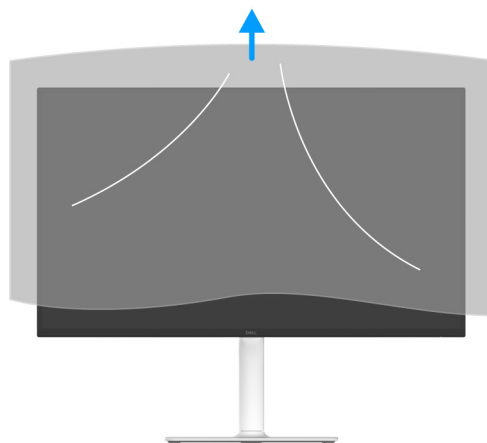


Figure 20. Removing the protective cover

Connecting your monitor

⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

📌 NOTE: Dell monitors are designed to work optimally with the Dell-supplied cables inside the box. Dell does not guarantee the video quality and performance if non-Dell cables are used.

📌 NOTE: Route the cables through the cable management guide before connecting them.

📌 NOTE: Do not connect all the cables to the computer simultaneously.

📌 NOTE: The images are for the purpose of illustration only. The appearance of the computer may vary.

To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect the USB-C cable (shipped with your monitor) or HDMI cable (purchased separately) from your monitor to the computer.

⚠ CAUTION: To prevent bending the USB-C cable connector, gently grasp both sides of the connector and insert or remove it straight from the monitor's USB-C port.

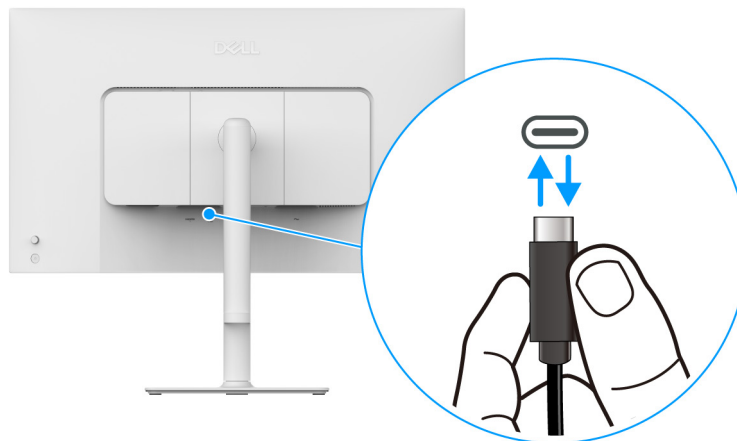


Figure 21. Connecting and disconnecting the USB-C cable

3. Plug the power cables for your computer and monitor into a nearby outlet.

4. Turn on the monitor and the computer.

If your monitor displays an image, installation is complete. If it does not display an image, see [Common problems](#).

Connecting the USB-C and power cables

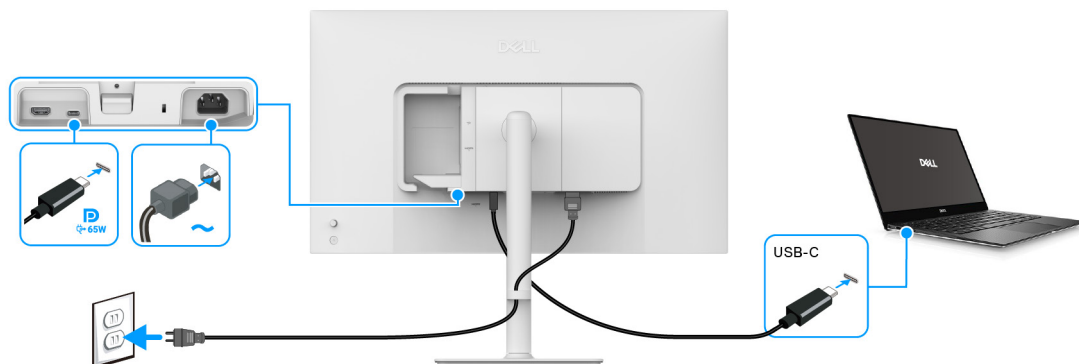


Figure 22. USB-C connection

📌 NOTE: Use the USB-C to C cable shipped with your monitor only.

Connecting the HDMI and power cables (optional)

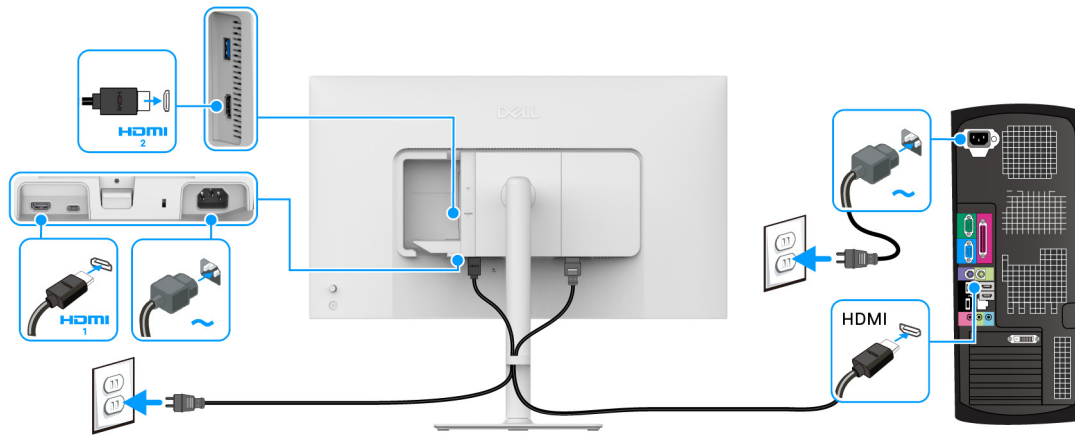


Figure 23. HDMI connection

Routing the cables

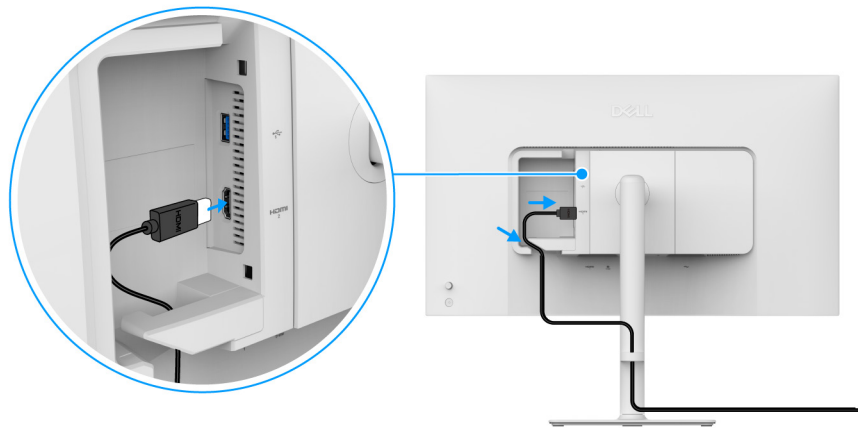


Figure 24. Routing the cables

To route the cables:

1. Connect the HDMI cable (purchased separately) to the HDMI 2 port or/and the USB cable (purchased separately) to the USB Type-A port.
2. Insert and organize the HDMI/USB cable under the restraint lever as shown above.

Attaching the side I/O-cover

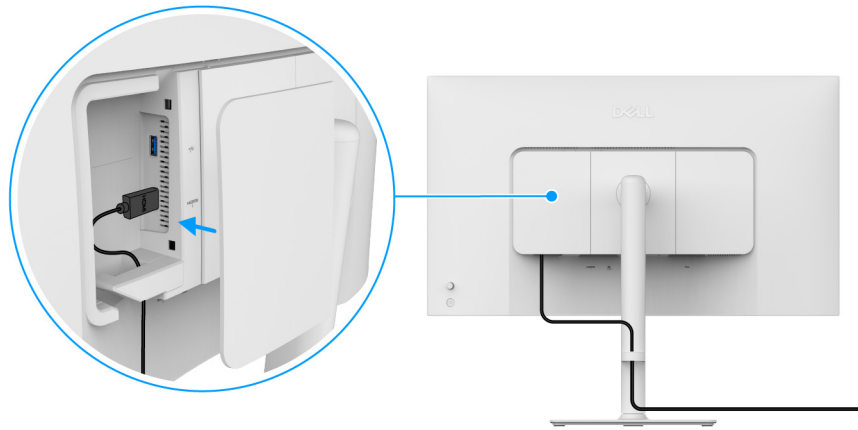


Figure 25. Attaching the side I/O-cover

To attach the side I/O-cover:

1. Align and place the tabs on the side I/O-cover with the slots on the display back cover.
2. Press the side I/O-cover to snap it into place.

Organizing your cables

Install the cable management guide.

Route the cables through the cable management guide on the stand riser.

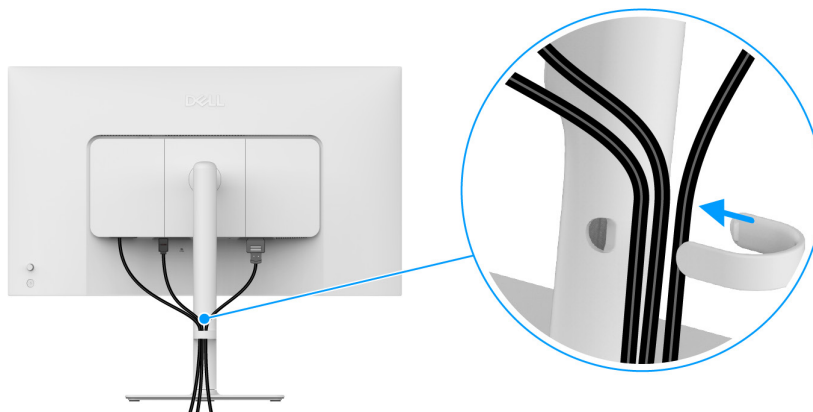


Figure 26. Organizing the cables

After connecting all the necessary cables (see [Connecting your monitor](#) for cable attachment), organize all the cables as shown in the image.

If your cable is not able to reach your computer, you may connect directly to the computer without routing through the cable management guide on the monitor stand.

Turn on the monitor

Press the power button to turn on the monitor.

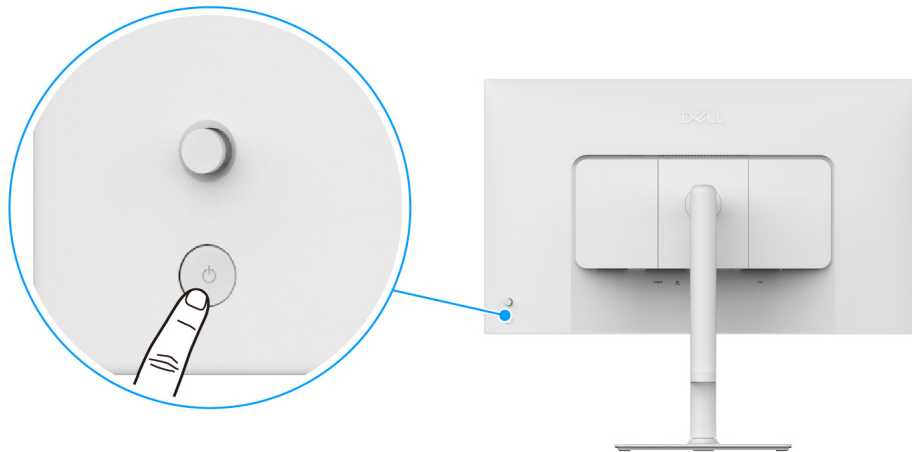


Figure 27. Turn on the monitor

Securing your monitor using Kensington lock (optional)

The security-lock slot is located at the bottom of the monitor (see [Security-lock slot](#)). Secure your monitor to a table using the Kensington security lock.

For more information on using the Kensington lock (sold separately), see the documentation that is shipped with the lock.

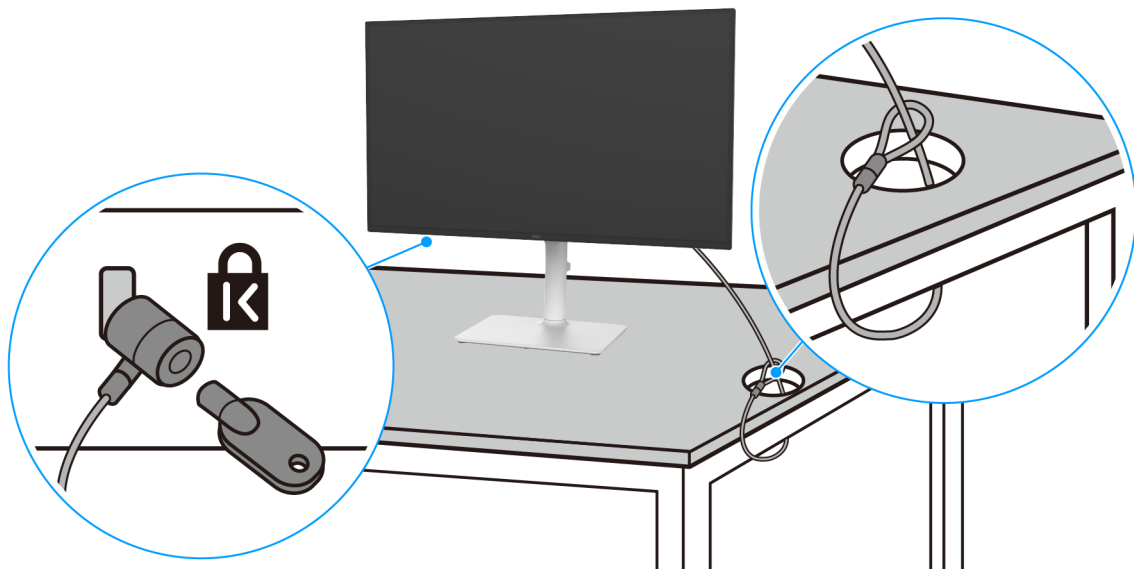


Figure 28. Using the Kensington lock

NOTE: The image is for the purpose of illustration only. The appearance of the lock may vary.

Removing the monitor stand

- ① **NOTE:** To prevent scratches on the LCD screen when removing the stand, ensure that the monitor is placed on a soft surface and handle it carefully.
- ① **NOTE:** The following steps are specifically for removing the stand that is shipped with your monitor. If you are removing a stand that you purchased from any other source, follow the setup instructions that are included with the stand.

To remove the stand:

1. Place the monitor on a soft cloth or cushion.
2. Press and hold the stand release button at the back of the display.
3. Lift the stand assembly up and away from the monitor.

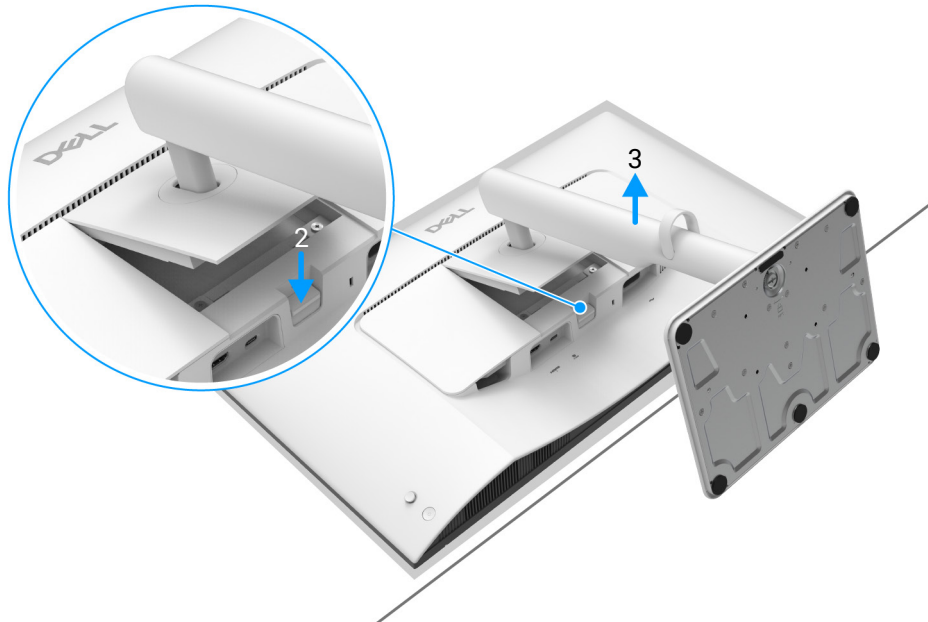


Figure 29. Removing the monitor stand

VESA wall mounting (optional)

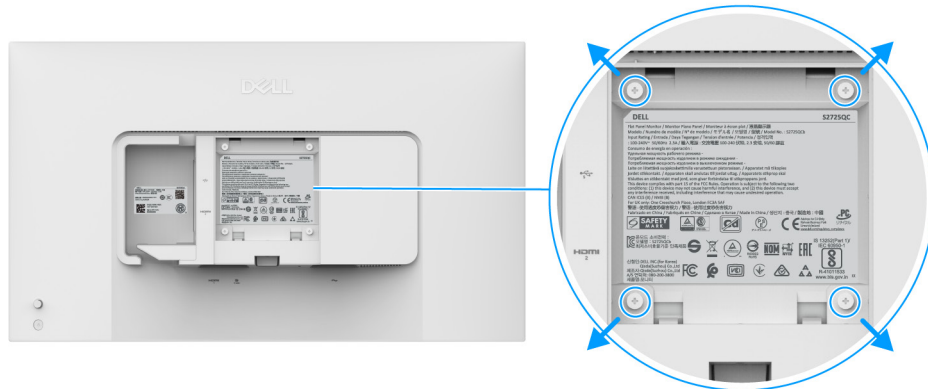


Figure 30. VESA wall mounting

NOTE: Use M4 x 10 mm screws to connect the monitor to the wall-mounting kit. Refer to the instructions that come with the VESA-compatible wall-mounting kit.

1. Place the monitor panel on a soft cloth or cushion on a stable flat table.
2. Remove the monitor stand. (See [Removing the monitor stand.](#))
3. Use a Phillips crosshead screwdriver to remove the four screws securing the plastic cover.
4. Attach the mounting bracket from the wall-mounting kit to the monitor.
5. Mount the monitor on the wall. For more information, see the documentation that shipped with the wall-mounting kit.

NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight or load bearing capacity of 19.40 kg.

Operating the monitor

Turn on the monitor

Press the power button to turn on the monitor.

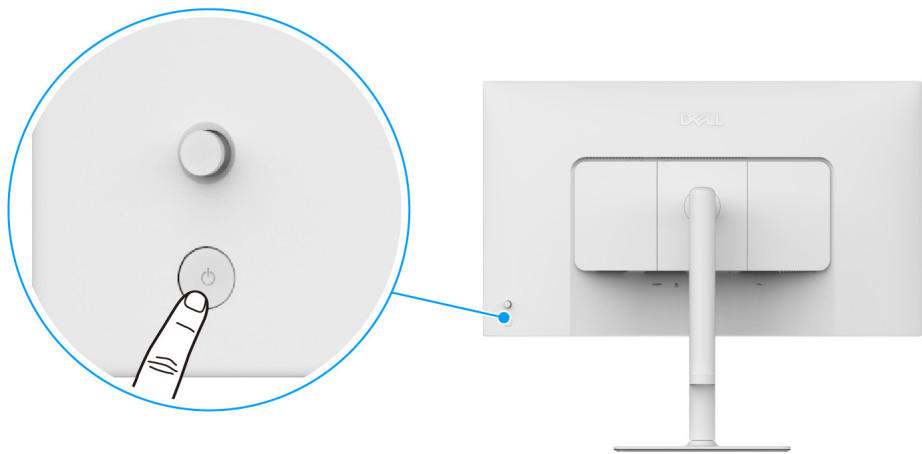


Figure 31. Turn on the monitor

Using the joystick control

Use the joystick control on the rear of the monitor to make On-Screen Display (OSD) adjustments.

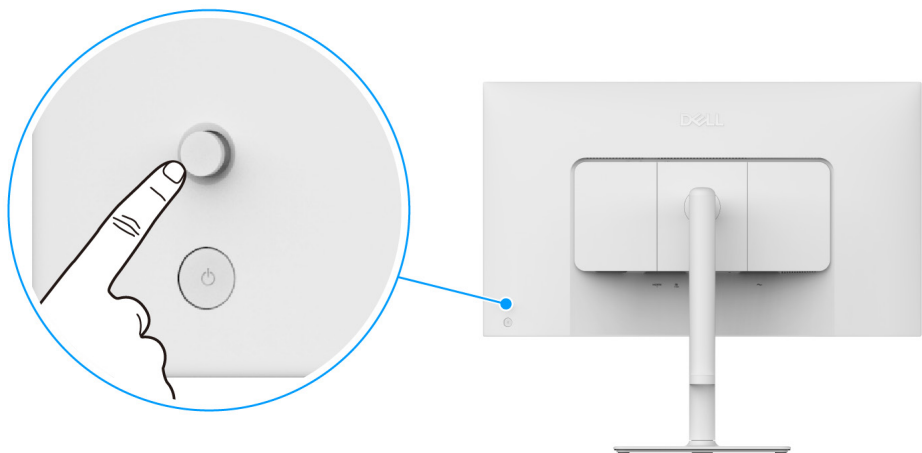
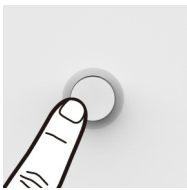
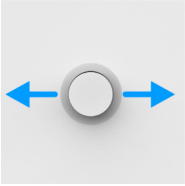
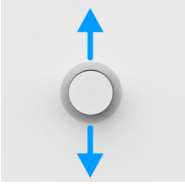


Figure 32. Using the joystick control

1. Press the joystick to launch the Menu Launcher.
2. Move the joystick up or down or left or right to toggle through options.
3. Press the joystick again to confirm the selection.

Table 20. Movement of the joystick.

Joystick	Description
	<ul style="list-style-type: none">• When there is no OSD on the screen, press the joystick to launch the Menu Launcher. See Accessing the Menu Launcher.• When the OSD is displayed, press the joystick to confirm the selection or save the settings.

Joystick	Description
	<ul style="list-style-type: none"> For 2-way (right and left) directional navigation. Move right to enter the submenu. Move left to the upper-level menu or exit from the current menu.
	<ul style="list-style-type: none"> For 2-way (up and down) directional navigation. Toggles through the menu items. Increases (up) or decreases (down) the parameters of selected menu item.

You can assign the four directional movements as Direct Key 1/2/3/4 to access a specific OSD function. For more information, see [Direct Key Guide](#).

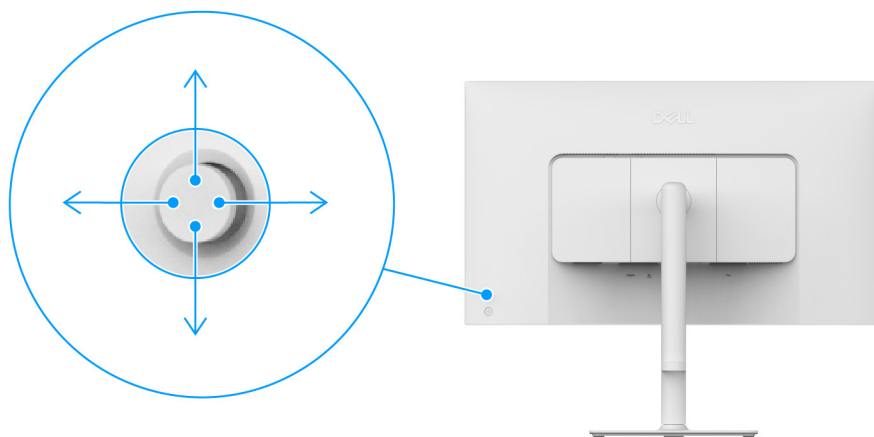


Figure 33. Joystick and Direct Keys (view from the back of the display)

Using the On-Screen Display (OSD) menu

Accessing the Menu Launcher

When you press the joystick, the Menu Launcher appears to let you access the OSD main menu and shortcut functions.

To select a function, move the joystick.

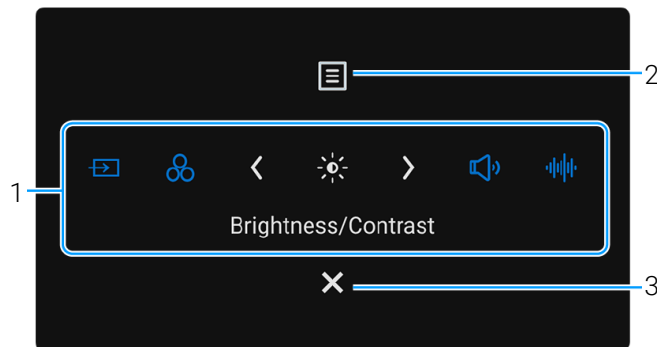


Figure 34. Menu Launcher

The following table describes the Menu Launcher functions:

Table 21. Menu Launcher description.

Label	Icon	Description
When you move the joystick left or right to switch through the shortcut functions, the selected item is shifted to the center position. Press the joystick to enter its submenu and make adjustments by moving the joystick.		
NOTE: You can set your preferred shortcut keys. For more information, see Personalize .		
1		Input Source: To choose an input source from the list of video signals that may be connected to your monitor.
	Shortcut Key 1	
		Preset Modes: To choose a preferred color mode from the list of preset modes.
	Shortcut Key 2	
		Brightness/Contrast: To access the adjustment sliders of brightness and contrast.
	Shortcut Key 3	
		Volume: To access the adjustment slider of volume.
	Shortcut Key 4	
		Audio Profiles: To choose a preferred audio mode from the list of audio profiles.
	Shortcut Key 5	
NOTE: After you change the settings, follow the navigation keys to confirm the changes before proceeding to another function or exiting.		
2		To launch the On-Screen Display (OSD) main menu. See Accessing the menu system .
3		To exit the Menu Launcher.
	Exit	

Using the navigation keys

When the OSD menu is active, adjust the settings by moving the joystick, following the navigation keys at the bottom center of the OSD menu.

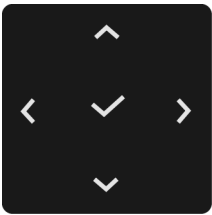


Figure 35. Navigation keys

NOTE: To exit the current menu item and return to the previous menu, move the joystick to the left until you exit.

Accessing the menu system

NOTE: After you change the settings, follow the navigation keys to confirm the changes before proceeding to another function or exiting.

Table 22. OSD menu description.

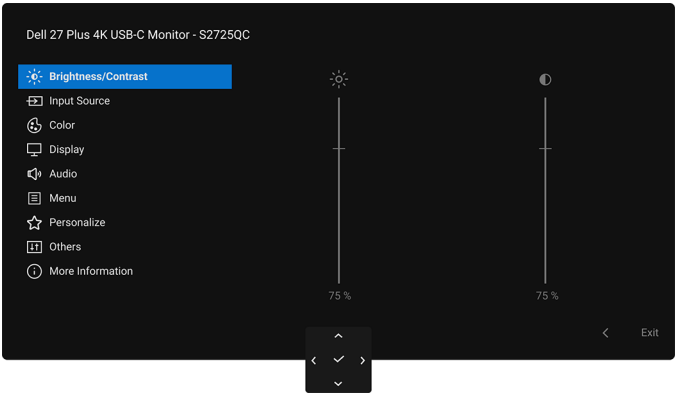

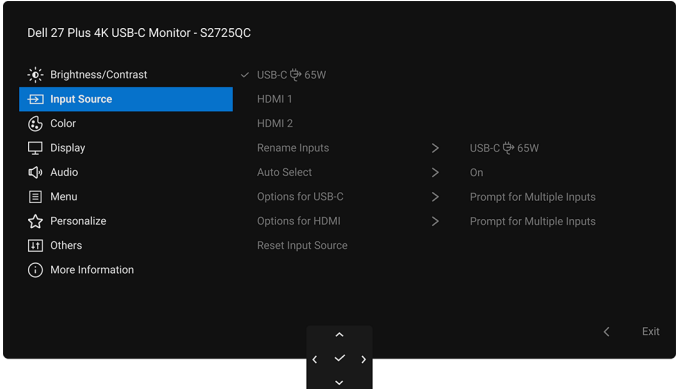

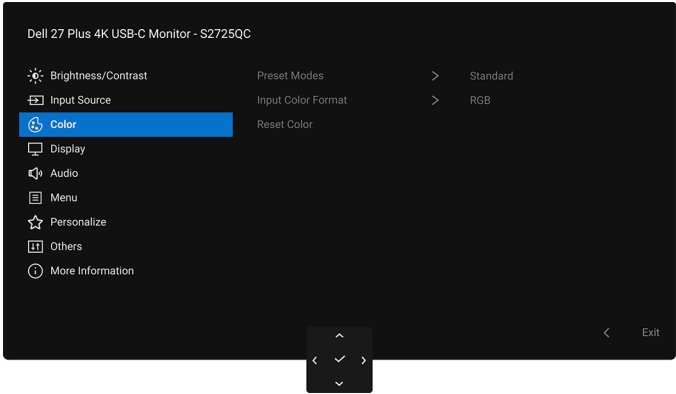
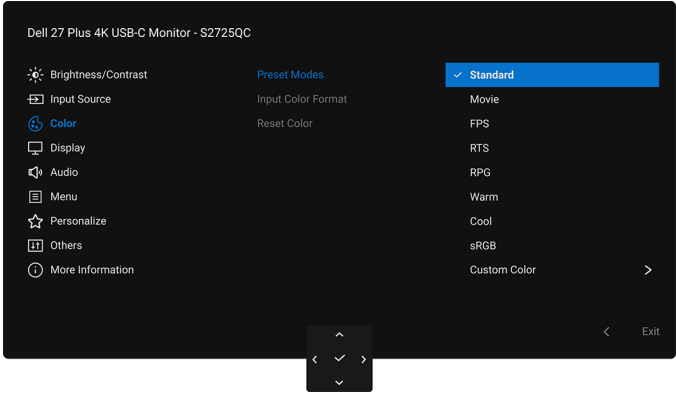
Icon	Menu and submenu	Description
	Brightness/Contrast	Adjusts the brightness and the contrast of the display. <div></div>
	Brightness	The Brightness function adjusts the luminance of the backlight. Move the joystick up or down to increase or decrease the brightness level (min. 0/max. 100).
	Contrast	Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary. The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen. Move the joystick up or down to increase or decrease the contrast level (min. 0/max. 100).

Figure 36. Brightness/Contrast menu

NOTE: Manual adjustment of **Brightness** or **Contrast** is unavailable when **Smart HDR** is activated and HDR content is displayed.

Icon	Menu and submenu	Description
	Input Source	<p>Select from the available video signals connected to your monitor.</p>  <p>Figure 37. Input Source menu</p>
	USB-C 65W	Select USB-C 65W when you are using the USB-C port. Press the joystick to confirm the selection.
	HDMI 1	Select HDMI 1 when you are using the HDMI 1 port. Press the joystick to confirm the selection.
	HDMI 2	Select HDMI 2 when you are using the HDMI 2 port. Press the joystick to confirm the selection.
	Rename Inputs	<p>Allows you to specify a preset input name for the selected input source. The preset options are PC, PC 1, PC 2, Laptop, Laptop 1, and Laptop 2. The default setting is Off.</p> <p>NOTE: When you perform a rename for the USB-C Charging 65W input, the wattage value remains after the specified option, e.g., PC 1 (65W).</p> <p>NOTE: It is not applicable for the input names that are shown in the warning messages and Display Info.</p>
	Auto Select	Automatically scans for available input sources. The default is On . Press the joystick to confirm the selection.
	Options for USB-C	<p>Allows you to set this function to:</p> <ul style="list-style-type: none"> Prompt for Multiple Inputs: Always displays the message for setting up the primary use of the monitor's USB-C connection. Always Switch: Always switches to USB-C video input (without asking) when the USB-C cable is connected. Off: Never automatically switches to USB-C video input when the USB-C cable is connected. <p>Press the joystick to confirm the selection.</p> <p>NOTE: The function is available only when Auto Select is on.</p>
	Options for HDMI	<p>Allows you to set this function to:</p> <ul style="list-style-type: none"> Prompt for Multiple Inputs: Always displays the "Switch to HDMI Video Input" message for you to choose whether to switch or not. Always Switch: Always switches to HDMI video input (without asking) when the HDMI cable is connected. Off: Never automatically switches to HDMI video input when the HDMI cable is connected. <p>Press the joystick to confirm the selection.</p> <p>NOTE: The function is available only when Auto Select is on.</p>
	Reset Input Source	Resets all settings under the Input Source menu to the factory defaults.

Icon	Menu and submenu	Description
	Color	<p>Adjusts the color setting mode.</p> 
	Preset Modes	<p>Allows you to choose a preset color mode or create your own color modes. Press the joystick to confirm the selection.</p>  <p>Figure 39. Preset Modes menu</p> <ul style="list-style-type: none"> • Standard: Loads the monitor's default color settings. This is the default setting. • Movie: Loads color settings ideal for movies. • FPS: Loads color settings ideal for First-Person Shooter (FPS) games. • RTS: Loads color settings ideal for Real-Time Strategy (RTS) games. • RPG: Loads color settings ideal for Role-Playing Games (RPG). • Warm: Presents colors at lower color temperatures. The screen appears warmer with a red/yellow tint. • Cool: Presents colors at higher color temperatures. The screen appears cooler with a blue tint. • sRGB: Presents accurate colors without oversaturation when the displayed content is sRGB coded. • Custom Color: Allows you to manually adjust the color settings. Move the joystick to adjust the Gain, Offset, Hue, and Saturation settings and create your own preset color mode. <p>NOTE: The function is unavailable when Smart HDR is activated and HDR content is displayed.</p>


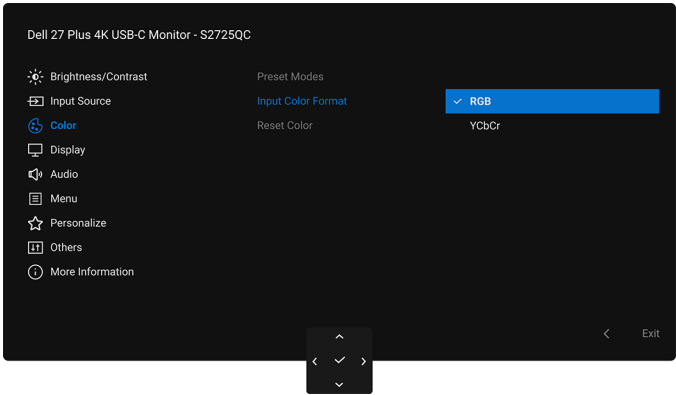

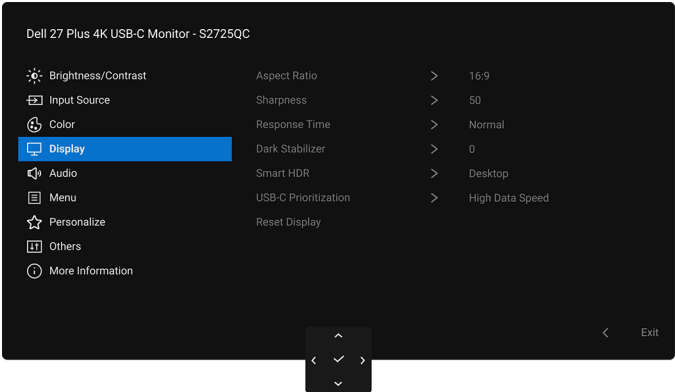
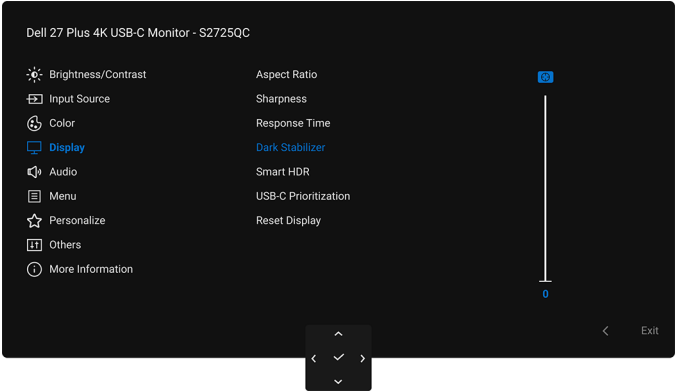

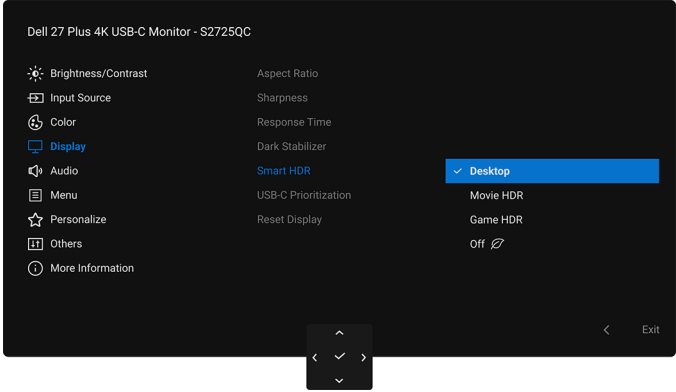
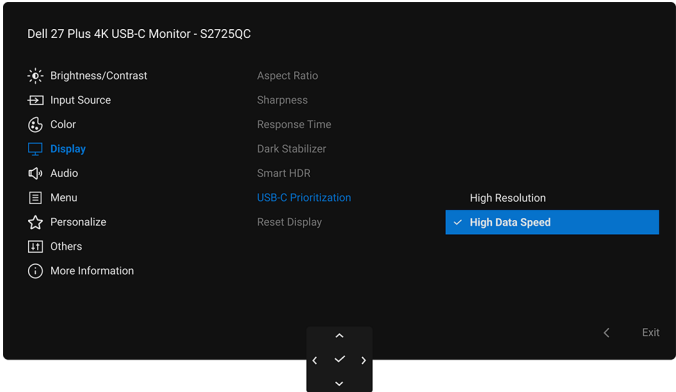

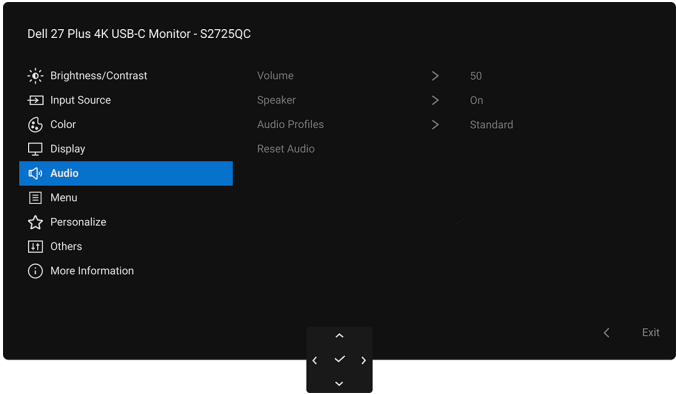
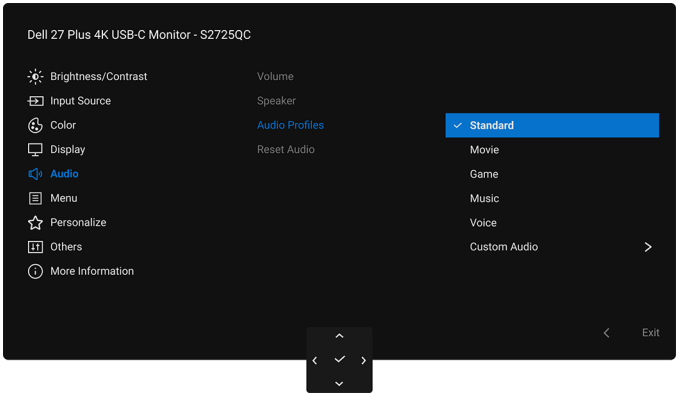

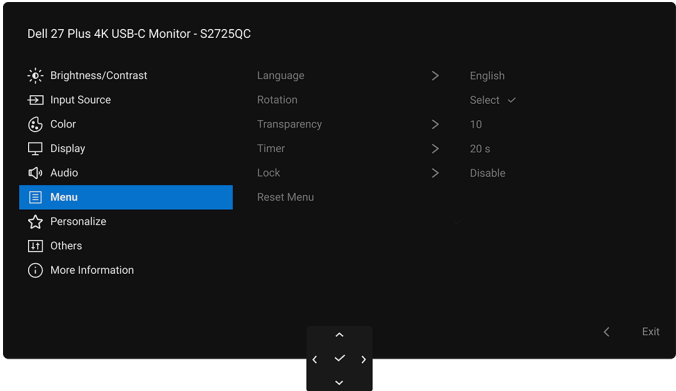
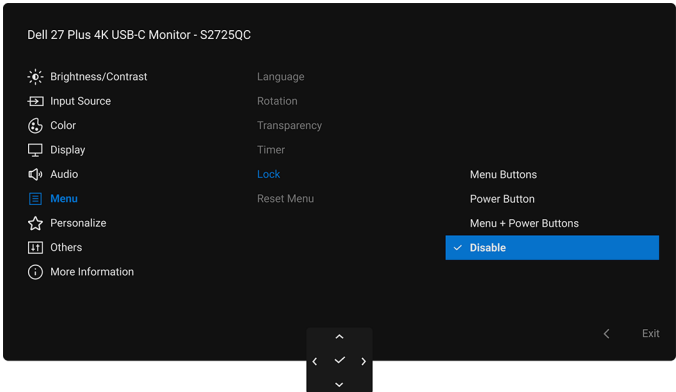
Icon	Menu and submenu	Description
	Input Color Format	<p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> RGB: Select this option if your monitor is connected to a computer or a media player that supports RGB output. YCbCr: Select this option if your media player supports only YCbCr output. <p>Press the joystick to confirm the selection.</p> 
	Hue	<p>This function can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color. Move the joystick to adjust the hue level from '0' to '100'. Higher levels increase the green shade of the video image, while lower levels increase the purple shade of the video image.</p> <p>NOTE: The function is available only when you select Movie, FPS, RTS, or RPG preset mode.</p>
	Saturation	<p>This function can adjust the color saturation of the video image. Move the joystick to adjust the saturation level from '0' to '100'. Higher levels increase the colorful appearance of the video image; while lower levels increase the monochrome appearance of the video image.</p> <p>NOTE: The function is available only when you select Movie, FPS, RTS, or RPG preset mode.</p>
	Reset Color	<p>Resets all settings under the Color menu to the factory defaults.</p>

Figure 40. Input Color Format menu

Icon	Menu and submenu	Description
	Display	<p>Use Display to adjust the images.</p>  <p>Figure 41. Display menu</p>
	Aspect Ratio	Adjusts the image ratio to 16:9 , Auto Resize , or 4:3 .
	Sharpness	This function can make the image look sharper or softer. Move the joystick to adjust the sharpness level from '0' to '100'.
	Response Time	Allows you to set the response time to Normal , Fast , or Extreme .
	Dark Stabilizer	<p>The function improves the visibility in the dark gaming scenarios. The higher the value (between 0 to 3), the better visibility in the dark area of the display image.</p>  <p>Figure 42. Dark Stabilizer menu</p> <p>NOTE: The function is unavailable when Smart HDR is activated and HDR content is displayed.</p>

Icon	Menu and submenu	Description
	Smart HDR	<p>The Smart HDR (High Dynamic Range) function enhances the display output by optimally adjusting contrast and the ranges of color and luminosity to resemble true-to-life visuals.</p>  <p>Figure 43. Smart HDR menu</p> <ul style="list-style-type: none"> • Desktop: For using the monitor with a desktop computer. • Movie HDR: For the playback of HDR video content. • Game HDR: For playing HDR-compatible games. It displays more realistic scenes and makes the gaming experience immersive and entertaining. <p>You can disable Smart HDR by selecting Off. Press the joystick to confirm the selection.</p> <p>NOTE: When activating and deactivating Smart HDR, a blank screen is expected (about 5 seconds). This is normal behavior as the monitor changes the display mode. Do not power cycle the monitor.</p> <p>NOTE: When the monitor is processing HDR content, Preset Modes, Dark Stabilizer, Brightness, and Contrast are unavailable.</p> <p>NOTE: S2725QC does not support HLG.</p>
	USB-C Prioritization	<p>Allows you to specify the priority to transfer the data with high resolution (High Resolution) or high speed (High Data Speed) when using the USB-C port. If the current platform is DP 1.4 (HBR3), use High Data Speed to access full video performance with high data speed. If the current platform is DP 1.2 (HBR2) or below, select High Resolution for accessing full video performance with data and network speed drop.</p>  <p>Figure 44. USB-C Prioritization menu</p>
	Reset Display	Resets all settings under the Display menu to the factory defaults.

Icon	Menu and submenu	Description
	Audio	 <p>Figure 45. Audio menu</p>
	Volume	Allows you to set the volume level of the speakers. Move the joystick to adjust the volume level from '0' to '100'.
	Speaker	Allows you to turn on or off the speaker function.
	Audio Profiles	<p>Allows you to set your preferred audio profile.</p>  <p>Figure 46. Audio Profiles menu</p> <ul style="list-style-type: none"> • Standard: This is the default setting. • Movie: For viewing motion picture. • Game: For gaming sound effect. • Music: For music listening. • Voice: For speech. • Custom Audio: Allows you to manually adjust the sound. Move the joystick to configure the settings.
	Reset Audio	Resets all settings under the Audio menu to the factory defaults.

Icon	Menu and submenu	Description
	Menu	<p>Adjusts the settings of the OSD, such as the languages of the OSD, the amount of time the menu remains on screen, and so on.</p>  <p style="text-align: center;">Figure 47. Menu menu</p>
	Language	Sets the OSD display to one of the eight languages (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).
	Rotation	Press the joystick to rotate the OSD by 0/90/270 degrees. You can adjust the menu according to your display rotation.
	Transparency	Select to change the menu transparency by moving the joystick (min. 0/max. 100).
	Timer	Sets the length of time for the OSD to remain active after your last operation with the joystick. Move the joystick to adjust the slider in 1 second increments, from 5 to 60 seconds.
	Lock	<p>With the control buttons on the monitor locked, you can prevent people from accessing the controls.</p>  <p style="text-align: center;">Figure 48. Lock menu</p> <ul style="list-style-type: none"> • Menu Buttons: All joystick functions are locked and not accessible by the user. • Power Button: Only the Power button is locked and not accessible by the user. • Menu + Power Buttons: Both the joystick and Power button are locked and not accessible by the user. <p>The default setting is Disable.</p> <p>Alternative Lock Method: You can move and hold the joystick up or down or left or right for 4 seconds to set the lock options using the pop-up menu, and then press the joystick to confirm the configuration.</p> <p>NOTE: To unlock, move and hold the joystick up or down or left or right for 4 seconds, and then press the joystick to confirm the changes and close the pop-up menu.</p>
	Reset Menu	Resets all settings under the Menu menu to the factory defaults.


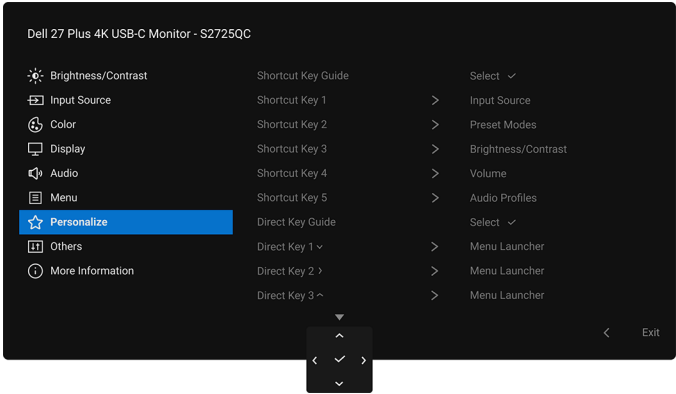
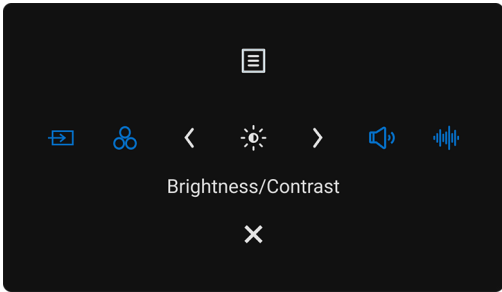
Icon	Menu and submenu	Description
	Personalize	
	Shortcut Key Guide	Select and follow the on-screen instructions to customize the Shortcut Keys in the Menu Launcher.
	Shortcut Key 1	Select a function from Preset Modes, Brightness/Contrast, Input Source, Aspect Ratio, Rotation, Volume, Audio Profiles, Smart HDR, or Display Info and set it as a Shortcut Key in the Menu Launcher.
	Shortcut Key 2	
	Shortcut Key 3	
	Shortcut Key 4	
	Shortcut Key 5	
		
	Direct Key Guide	Select and follow the on-screen instructions to assign your preferred functions to the joystick's 4 directional movements.
	Direct Key 1 ⌵	Select a function from Menu Launcher, Preset Modes, Brightness, Contrast, Input Source, Aspect Ratio, Rotation, Volume, Audio Profiles, Smart HDR, or Display Info and set it as a Direct Key.
	Direct Key 2 ⌵	
	Direct Key 3 ⌴	The factory default setting is Menu Launcher .
	Direct Key 4 ⌴	When you set a Direct Key to Off , it returns to the original movement (down, right, up, or left). <i>NOTE:</i> When there is no video signal, the Direct Key will not work.
	Power LED	Allows you to set the state of the power light to save energy.
	USB-C Charging ⚡ 65W	Allows you to enable or disable the USB-C Charging ⚡ 65W function during monitor off mode. If On in Off Mode is selected, you will be able to charge your notebook or mobile devices through the USB-C cable even when the monitor is powered off.
	Other USB Charging	Allows you to enable or disable USB Type-A and USB-C Downstream Ports charging function during monitor standby mode.
	Reset Personalization	Resets all settings under the Personalize menu to the factory defaults.

Figure 49. Personalize menu

Figure 50. Menu Launcher


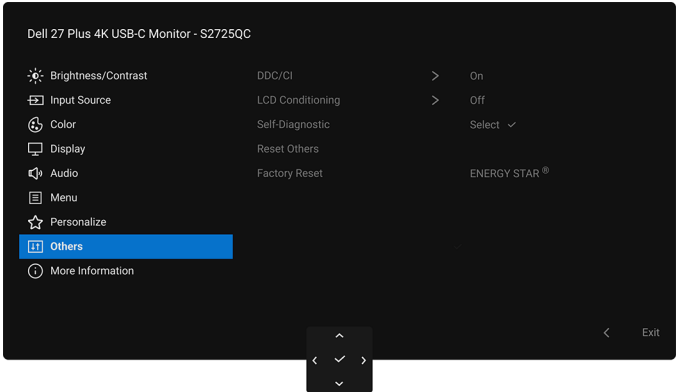
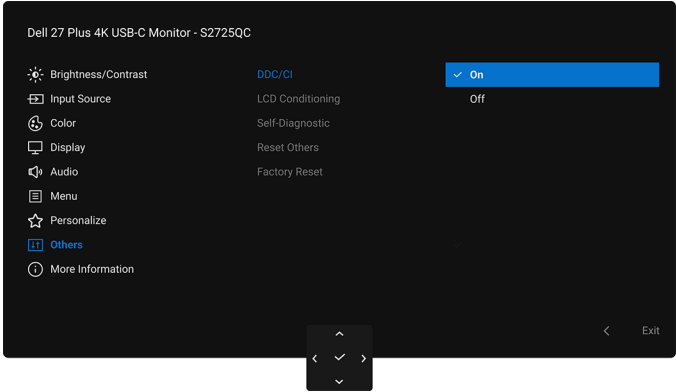
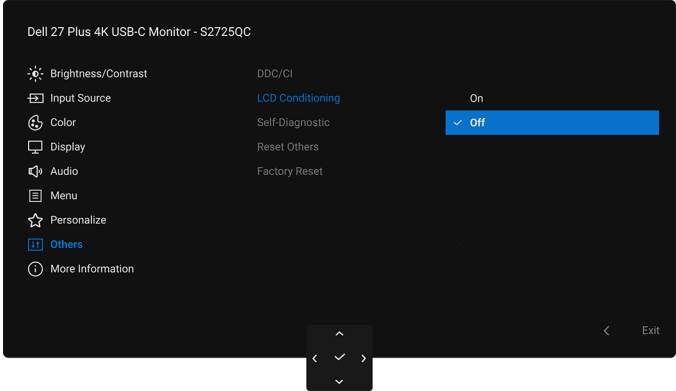
Icon	Menu and submenu	Description
	Others	<p>Adjusts the OSD settings, such as DDC/CI, LCD Conditioning, Self-Diagnostic, and so on.</p> 
	DDC/CI	<p>DDC/CI (Display Data Channel/Command Interface) allows you to adjust the monitor settings using software on your computer. Enable this function for the best user experience and optimum performance of your monitor. You can disable this function by selecting Off.</p> 
	LCD Conditioning	<p>Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this function by selecting On.</p> 
	Self-Diagnostic	Select this function to run the built-in diagnostics, see Built-in diagnostics .
	Reset Others	Resets all settings under the Others menu to the factory defaults.

Figure 51. Others menu

Figure 52. DDC/CI menu

Figure 53. LCD Conditioning menu


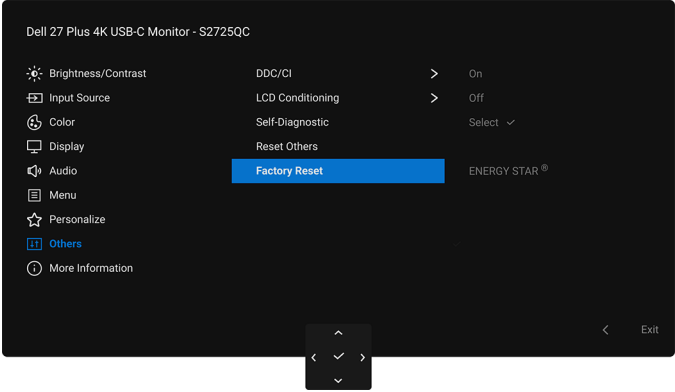
Icon	Menu and submenu	Description
	Factory Reset	<p>Restore all preset values to the factory default settings. These are also the settings for ENERGY STAR tests.</p> 

Figure 54. Factory Reset menu


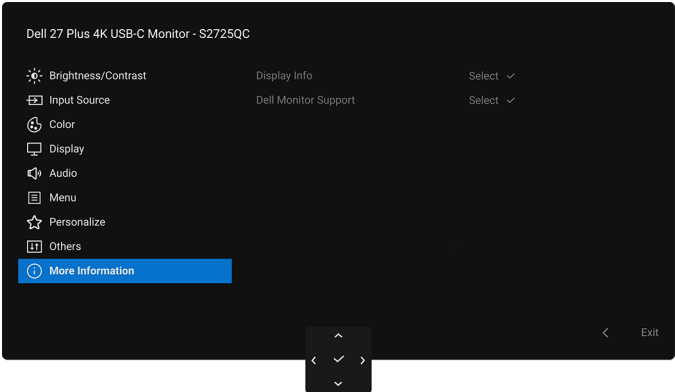

Icon	Menu and submenu	Description
	More Information	<p>Use the menu to view the monitor’s information or seek more monitor support.</p> 
	Display Info	<p>Select to display the current settings, firmware version, and service tag of your monitor.</p> 
	Dell Monitor Support	<p>To access the general monitor support materials for your monitor, use your smartphone to scan the QR code.</p>

Figure 55. More Information menu

Figure 56. Display Info menu

OSD warning message

When the monitor does not support a particular resolution mode, you see the following message:

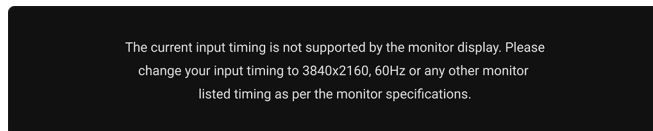


Figure 57. Input timing warning message

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. The recommended mode is **3840 x 2160**.

You see the following message before the **DDC/CI** function is disabled:

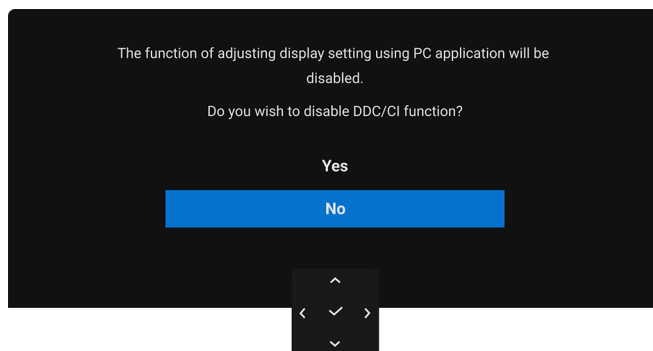


Figure 58. DDC/CI warning message

When you adjust the **Brightness** level above the default level for the first time, the following message appears:

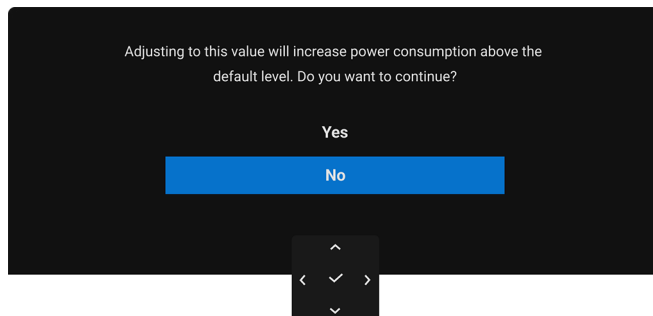



Figure 59. Power warning message

NOTE: If you select **Yes**, the message will not appear the next time that you change the **Brightness** setting.

When you select **Off** for the **Smart HDR** function, the next time you select any predetermined option (without the  symbol) that increases power consumption, the following message appears:

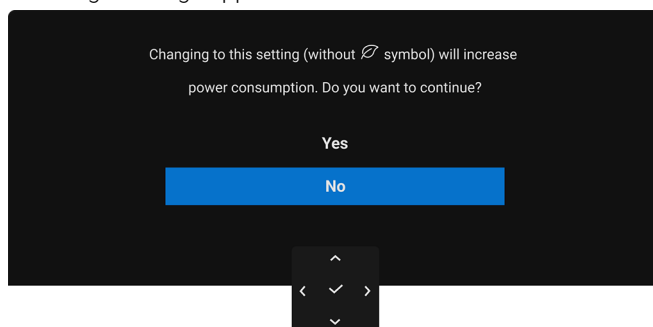




Figure 60. Power warning message

NOTE: Once you select **Yes**, the message will not appear even if you choose any other predetermined option (without the  symbol). When you perform a factory reset, the message appears again.

When you change the default setting of a power-saving feature (with the  symbol) for the first time, such as **USB-C Charging 65W** or **Other USB Charging**, the following message appears:

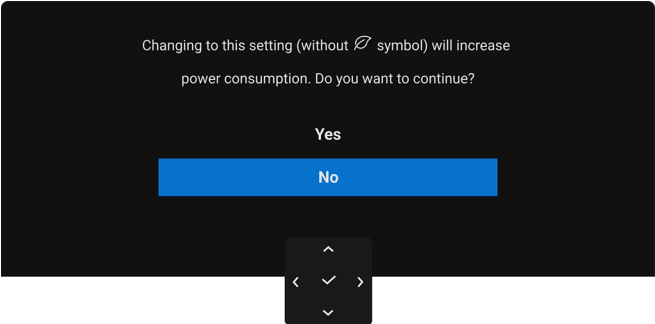



Figure 61. Power warning message

NOTE: Once you select **Yes**, the message will not appear even if you choose any other predetermined option (without the  symbol). When you perform a factory reset, the message appears again.

You see the following message before the **Lock** function is activated:

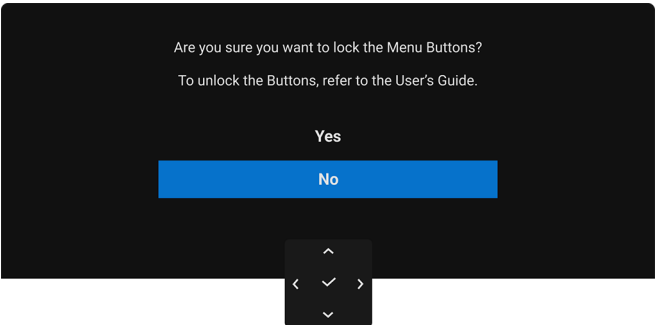


Figure 62. Lock function warning message

NOTE: The message may be slightly different according to the selected settings.

When the monitor is under DP/HDMI input and the USB-C cable is connected to a notebook that supports DP Alternate Mode, if **Options for USB-C** is set to **Prompt for Multiple Inputs**, the following message appears:

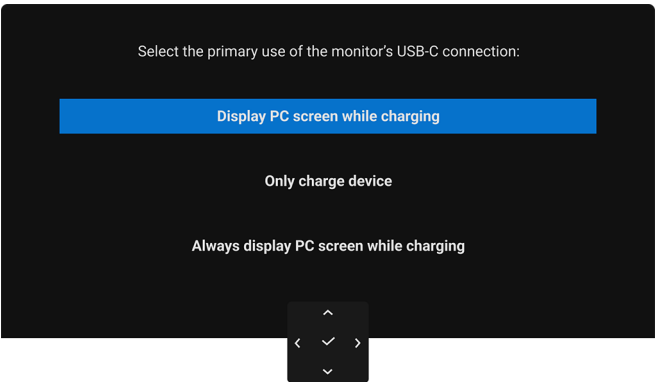


Figure 63. Options for USB-C function warning message

When the monitor goes into Standby mode, the following message appears:

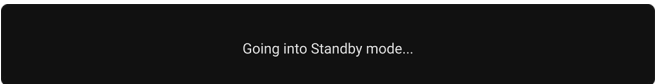


Figure 64. Standby mode warning message

Activate the computer and wake up the monitor to gain access to the [OSD](#).

The OSD functions only in the normal operation mode. If you press the joystick during the Standby mode, the following message appears depending on the selected input:

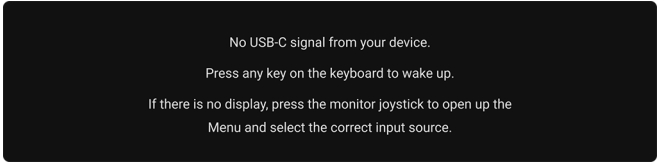


Figure 65. Signal detection warning message

Activate the computer and the monitor to gain access to the [OSD](#).

NOTE: The message may be slightly different according to the connected input signal.

If USB-C or HDMI input is selected and the corresponding cable is not connected, the following message appears:

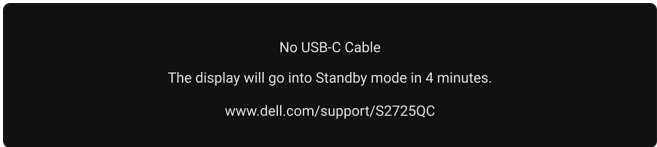


Figure 66. Signal cable disconnected warning message

NOTE: The message may be slightly different according to the selected input signal.

When **Factory Reset** is selected, the following message appears:

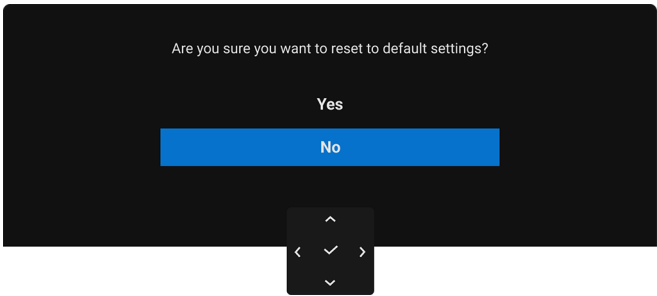


Figure 67. Factory reset warning message

See [Troubleshooting](#) for more information.

Locking the control buttons

You can lock the monitor control buttons to prevent access to the OSD menu and/or power button.

1. Move and hold the joystick up or down or left or right for about 4 seconds until a pop-up menu appears.

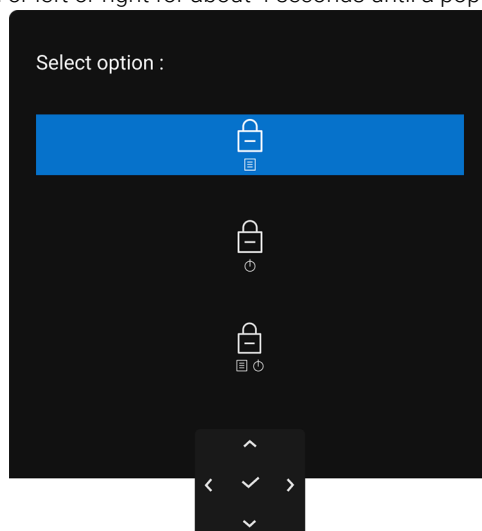






Figure 68. Lock menu

2. Move the joystick to select one of the following options:

-  : The OSD menu settings are locked and not accessible.
-  : The power button is locked.
-  : The OSD menu settings are not accessible, and the power button is locked.

3. Press the joystick to confirm the configuration.

To unlock, move and hold the joystick up or down or left or right for about 4 seconds until a menu appears, and then select  to unlock and close the pop-up menu.

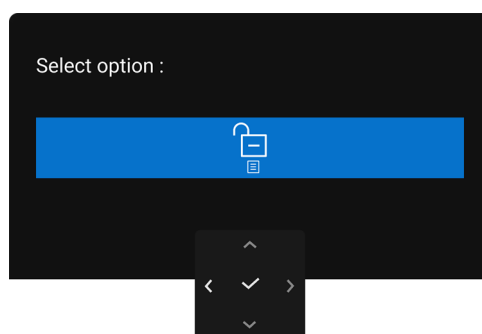


Figure 69. Unlock menu

NOTE: The message may be slightly different according to the selected settings.

Setting the maximum resolution

NOTE: The steps may vary slightly depending on the version of Windows you have.

To set the maximum resolution for the monitor in Windows 10 and Windows 11:

1. Right-click the desktop and click **Display settings**.
2. If you have more than one monitor connected, ensure to select **S2725QC**.
3. Click the **Display Resolution** dropdown list and select **3840 x 2160**.
4. Click **Keep changes**.

If you do not see 3840 x 2160 as an option, you must update your graphics driver to the latest version. Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or laptop:

- Go to www.dell.com/support, enter your service tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (laptop or desktop):

- Go to the support site for your non-Dell computer and download the latest graphics card drivers.
- Go to the graphics card's website and download the latest graphics card drivers.

Requirements to view or playback HDR content

(1) Through Ultra BluRay DVD or Game consoles

Ensure the DVD player or Game console is HDR capable, such as Panasonic DMP-UB900 or PS5.

(2) Through a PC

Ensure the graphics card used is HDR capable, that is, it has an HDMI 2.1 (TMDS)(with HDR option) compliant port and an HDR graphics driver is installed. HDR capable application program must be used, such as Cyberlink PowerDVD 17, Windows 10 Movies and TV app.

NOTE: The message may be slightly different according to the selected settings. To download and install the latest graphics driver that supports HDR content playback on your Dell desktop or laptop, see <https://www.dell.com/support/drivers>.

NVIDIA

For a full range of HDR capable NVIDIA graphics cards, see www.nvidia.com.

Ensure to download the driver that supports Full Screen Playback mode (for example, PC games, UltraBluRay players), HDR on Win 10 Redstone 2 OS: 381.65 or later.

AMD

For a full range of HDR capable AMD graphics cards, see www.amd.com. Read the HDR driver support information and download the latest driver.

Intel (Integrated Graphics)

HDR capable processor: CannonLake or later

Suitable HDR player: Windows 10 Movies and TV app

Operating System (OS) with HDR support: Windows 10 Redstone 3

Driver with HDR support: see downloadcenter.intel.com for the latest HDR driver

NOTE: HDR playback through OS (e.g. playback of HDR in a window within the desktop) requires Windows 10 Redstone 2 or later with an appropriate application program such as PowerDVD 17. Playing back protected content requires appropriate DRM software and/or hardware, for example Microsoft Playready. For support information, see <https://www.support.microsoft.com>.

Using the tilt, swivel, pivot and height adjustment

① **NOTE:** The following instructions are applicable only for the stand that was shipped with your monitor. If you are attaching a stand that you purchased from any other source, follow the setup instructions that were included with the stand.

Tilt and swivel adjustment

With the stand attached to the monitor, you can tilt and swivel the monitor for the most comfortable viewing angle.

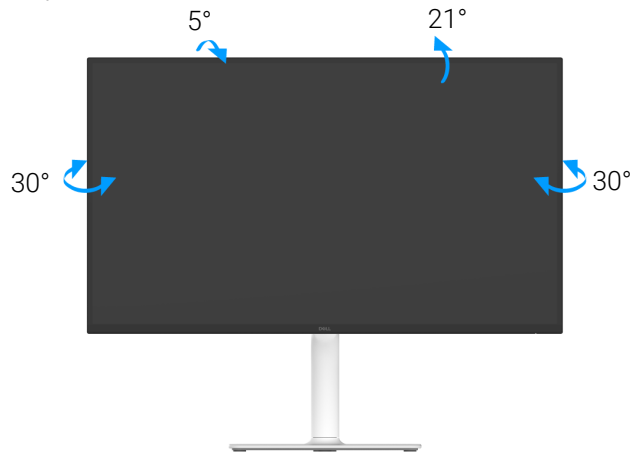


Figure 70. Tilt and swivel adjustment

① **NOTE:** The stand assembly is not pre-installed when the monitor is shipped from the factory.

Height adjustment

① **NOTE:** The stand extends vertically up to 130 mm. The following image illustrates how to extend the stand vertically.

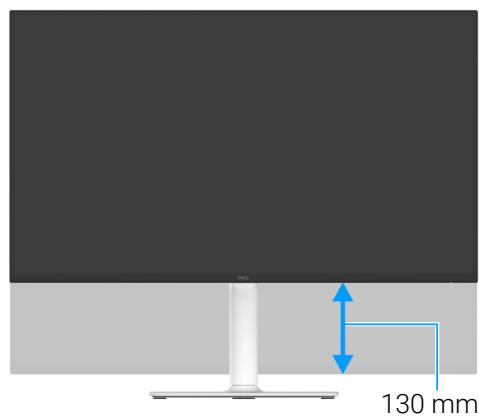


Figure 71. Height adjustment

Pivot adjustment

Before you rotate the display, ensure it is extended vertically and tilted up to avoid hitting the bottom edge of the monitor.

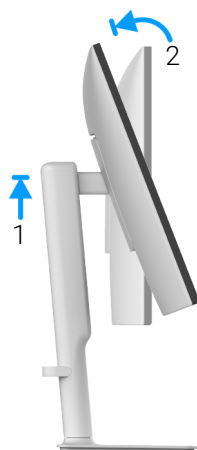


Figure 72. Pivot adjustment

Rotate clockwise

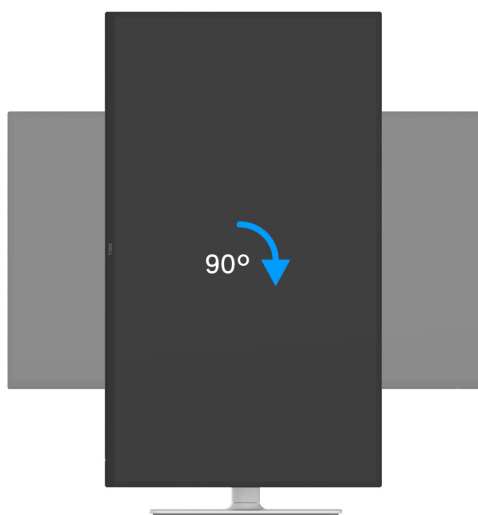


Figure 73. Rotating the display 90 degrees (clockwise)

Rotate counterclockwise

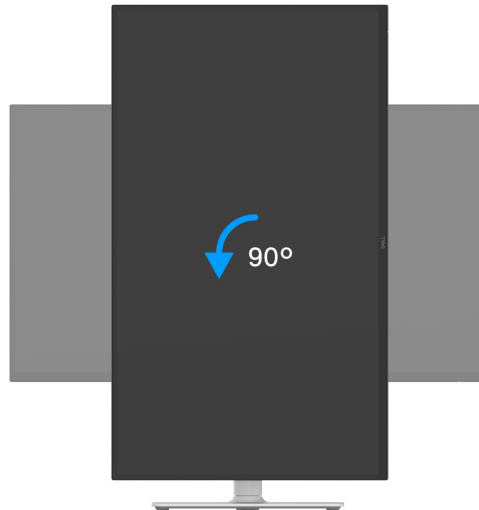


Figure 74. Rotating the display 90 degrees (counterclockwise)

- ① **NOTE:** To use the Display Rotation function (Landscape compared with Portrait view) with your Dell computer, you require an updated graphics driver that is not included with this monitor. To download the graphics driver, go to www.dell.com/support and see the Download section for Video Drivers for latest driver updates.
- ① **NOTE:** In the Portrait mode, you may experience performance degradation when using graphic-intensive applications such as 3D gaming.

Adjusting the rotation display settings of your computer

After you have rotated your monitor, you need to complete the procedure below to adjust the Rotation Display Settings of your computer.

- ① **NOTE** If you are using the monitor with a non-Dell computer, you need to go to the graphics driver website or your computer manufacturer's website for information about rotating the 'contents' on your display.

To adjust the Rotation Display Settings:

1. Right-click the desktop and click **Properties**.
 2. Select the **Settings** tab and click **Advanced**.
 3. If you have an AMD graphics card, select the **Rotation** tab and set the preferred rotation.
 4. If you have an NVIDIA graphics card, click the **NVIDIA** tab, in the left-hand column select **NVRotate**, and then select the preferred rotation.
 5. If you have an Intel graphics card, select the **Intel** graphics tab, click **Graphic Properties**, select the **Rotation** tab, and then set the preferred rotation.
- ① **NOTE:** If you do not see the rotation option or it is not working correctly, go to www.dell.com/support and download the latest driver for your graphics card.

Troubleshooting

⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

Self-test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the computer.
3. Turn on the monitor.

If the monitor cannot sense a video signal and is working correctly, the following message appears:

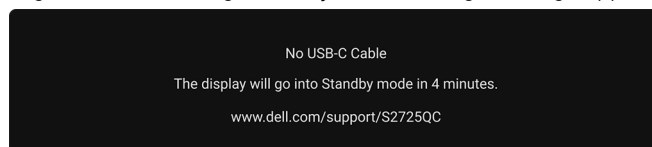


Figure 75. Signal cable disconnected warning message

NOTE: The message may be slightly different according to the connected input signal.

NOTE: While in self-test mode, the power LED remains white.

4. This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

Built-in diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and graphics card.

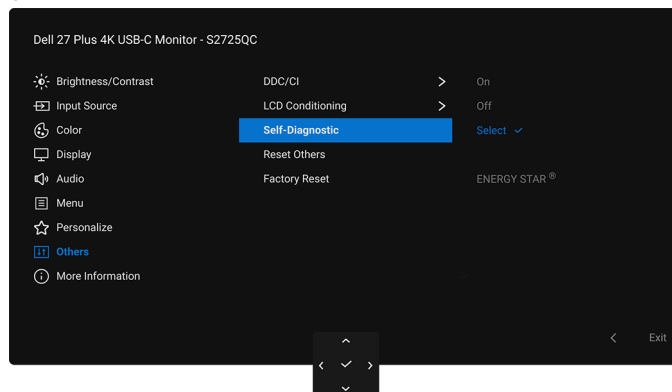



Figure 76. Self-Diagnostic menu

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Move or press the joystick to launch the Menu Launcher.
3. Move the joystick up to select  and open the Main Menu.
4. Using the joystick, navigate on the OSD menu and select **Others > Self-Diagnostic**.
5. Press the joystick button to start the diagnostics. A gray screen is displayed.
6. Observe if the screen has any defects or abnormalities.
7. Toggle the joystick once again until a red screen is displayed.
8. Observe if the screen has any defects or abnormalities.
9. Repeat steps 7 and 8 until the screen displays green, blue, black, and white colors. Note any abnormalities or defects.

The test is completed when a text screen is displayed. To exit, toggle the joystick control again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the graphics card and computer.

Common problems

The following table contains general information about common monitor problems that you might encounter and the possible solutions:

Table 23. Common problems and solutions.

Common symptoms	What you experience	Possible solutions
No video/power LED off	No picture	<ul style="list-style-type: none"> Ensure that the video cable connecting the monitor and the computer is properly connected and secure. Verify that the power outlet is functioning properly using any other electrical equipment. Ensure that you have pressed the power button properly. Ensure that the correct input source is selected in the Input Source menu.
No video/power LED on	No picture or no brightness	<ul style="list-style-type: none"> Increase brightness and contrast controls in the Brightness/Contrast menu. Perform monitor self-test feature check. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. For more information, see Built-in diagnostics. Ensure that the correct input source is selected in the Input Source menu.
Poor focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> Eliminate video extension cables. Reset the monitor to factory settings. For more information, see Factory Reset. Change the video resolution to the correct aspect ratio.
Shaky/jittery video	Wavy picture or fine movement	<ul style="list-style-type: none"> Reset the monitor to factory settings. For more information, see Factory Reset. Check environmental factors. Relocate the monitor and test in another room.
Missing pixels	LCD screen has spots	<ul style="list-style-type: none"> Cycle power On-Off. A pixel that is permanently off is a natural defect that can occur in LCD technology. For more information about Dell Monitor Quality and Pixel Policy, see www.dell.com/pixelguidelines.
Stuck-on pixels	LCD screen has bright spots	<ul style="list-style-type: none"> Cycle power On-Off. A pixel that is permanently off is a natural defect that can occur in LCD technology. For more information about Dell Monitor Quality and Pixel Policy, see www.dell.com/pixelguidelines.
Brightness problems	Picture too dim or too bright	<ul style="list-style-type: none"> Reset the monitor to factory settings. For more information, see Factory Reset. Adjust brightness and contrast controls using the OSD.
Geometric distortion	The screen is not centered correctly	Reset the monitor to factory settings. For more information, see Factory Reset .
Horizontal/vertical lines	The screen has one or more lines	<ul style="list-style-type: none"> Reset the monitor to factory settings. For more information, see Factory Reset. Perform monitor self-test feature check and determine if these lines are also in self-test mode. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. For more information, see Built-in diagnostics.

Common symptoms	What you experience	Possible solutions
Synchronization problems	The screen is scrambled or appears torn	<ul style="list-style-type: none"> Reset the monitor to factory settings. For more information, see Factory Reset. Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. Check for bent or broken pins in the video cable connector. Restart the computer in the safe mode.
Safety related issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> Do not perform any troubleshooting steps. Contact Dell immediately.
Intermittent problems	Monitor malfunctions on and off	<ul style="list-style-type: none"> Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Reset the monitor to factory settings. For more information, see Factory Reset. Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing color	Picture missing color	<ul style="list-style-type: none"> Perform a monitor self-test feature check. Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Check for bent or broken pins in the video cable connector.
Wrong color	Picture color is not good	<ul style="list-style-type: none"> Reset all settings under the Color menu to the factory defaults using Reset Color. Change the Input Color Format to RGB or YCbCr/YPbPr in the Color settings OSD. Run the built-in diagnostics. For more information, see Built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	A faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in the Windows Power Options or Mac Energy Saver setting. Alternatively, use a dynamically changing screensaver.
Image ghosting	Fast moving images leave a trail of shadow images	Change the Response Time in the Display menu OSD.
Picture quality (Refresh rate of native resolution changes from 60 Hz to 30 Hz; or color depth drops to 18 bits)	Issues of incorrect refresh rate or missing colors	<ul style="list-style-type: none"> Set USB-C Prioritization to High Resolution. Check the resolution settings of your graphic card.

Product-specific problems

Table 24. Product-specific problems and solutions.

Specific symptoms	What you experience	Possible solutions
The screen image is too small	The image is centered on the screen, but does not fill the entire viewing area	<ul style="list-style-type: none"> Check the Aspect Ratio settings in the Display menu OSD. Reset the monitor to factory settings. For more information, see Factory Reset.
Cannot adjust the monitor with the joystick	OSD does not appear on the screen	<ul style="list-style-type: none"> Turn off the monitor, unplug the power cable, plug it back, and then turn on the monitor. Check whether the OSD menu is locked. If yes, move and hold the joystick up/down/left/right for 4 seconds to unlock (see Lock and Locking the control buttons).
No input signal when user controls are pressed	No picture, the LED light is white	<ul style="list-style-type: none"> Check the signal source. Ensure that the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. Check whether the signal cable is plugged in properly. Replug the signal cable if necessary. Reset the computer or video player.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"> Due to different video formats (aspect ratio), the monitor may display in full screen. Run the built-in diagnostics. For more information, see Built-in diagnostics.
No video at HDMI/USB-C port	When connected to some dongle/docking device at the port, there is no video when unplugging/plugging the cable from the notebook	Unplug the HDMI/USB-C cable from dongle/docking device, then plug the docking HDMI/USB-C cable into the notebook.

Universal Serial Bus (USB) specific problems

Table 25. USB specific problems and solutions.

Specific symptoms	What you experience	Possible solutions
USB interface is not working	USB peripherals are not working	<ul style="list-style-type: none">• Check that your monitor is turned on.• Reconnect the upstream cable to your computer.• Reconnect the USB peripherals (downstream connector).• Turn off and then turn on the monitor again.• Reboot your computer.• Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.
USB-C port does not supply power	USB peripherals can not be charged	<ul style="list-style-type: none">• Check that the connected device is compliant with the USB-C specification. The USB-C port supports USB 5Gbps and an output of 65 W.• Check that you use the USB-C cable shipped with your monitor.
USB 5Gbps interface is slow	USB 5Gbps peripherals working slowly or not working at all	<ul style="list-style-type: none">• Check that your computer is USB 5Gbps-compatible.• Some computers have USB 3.2, USB 2.0, and USB 1.1 ports. Ensure that the correct USB port is used.• Reconnect the upstream cable to your computer.• Reconnect the USB peripherals (downstream connector).• Set USB-C Prioritization to High Data Speed.• Reboot the computer.
Wireless USB peripherals stop working when a USB 5Gbps device is plugged in	Wireless USB peripherals responding slowly or only working as the distance between themselves and their receiver decreases	<ul style="list-style-type: none">• Increase the distance between the USB 5Gbps peripherals and the wireless USB receiver.• Position your wireless USB receiver as close as possible to the wireless USB peripherals.• Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 5Gbps port.
Wireless USB mouse does not work properly	When plugged into one of the USB ports on the rear side of the monitor, the Wireless USB mouse lags or freezes during use	Unplug the Wireless USB Mouse receiver and re-plug it into an appropriate USB Quick Access Port at the bottom of the monitor.

Speakers-specific problems

Table 26. Speakers-specific problems and solutions.

Specific symptoms	What you experience	Possible solutions
No sound coming from the speakers	Cannot hear any sound	<ul style="list-style-type: none">• Turn off the monitor, unplug the monitor power cable, replug it, and then turn on the monitor.• Reset the monitor to factory settings. For more information, see Factory Reset.

Regulatory information

FCC notices (U.S. only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

EU product database for energy label and product information sheet

S2725QC: <https://eprel.ec.europa.eu/qr/2186109>

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

- ① **NOTE:** Availability varies by country and product, and some services may not be available in your country.
- ① **NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog